Bluetooth karaoke speaker 1B103BT



PLEASE READ ALL INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE USE

Getting Started

Remove the product from the box.

Please retain the packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

Karaoke Microphone & Speaker USB charging cable with Aux pin Instruction manual

- 2 in 1 microphone/speaker streams music via Bluetooth wireless perfect for
- singing along with any song or video from your device Works with iPhone, iPad, Android, Windows smartphones, tablets, computers and also plugs into 3.5mm audio cables
- USB rechargeable battery is perfect for use anywhere you go Independent microphone volume control with optional echo mode


IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
 Do not leave this product unattended while connected to the power supply.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.

 Place unit on sound, even surface, free of vibrations and away from sources
- of heat.
- Do not put objects into openings.
- Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.

 Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts:

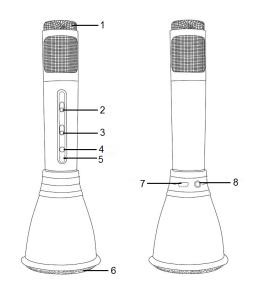

S. No.	Description	S. No.	Description
1	Microphone	5	LED Indicator
2	Volume Control Knob	6	Speaker
3	Echo Control Knob	7	Charging Port & Aux Input
4	Power ON/OFF Button	8	Earphone Port

INSTRUCTIONS FOR USE

Charging the speaker

- For best results, fully charge the speaker before its first use.

 Connect the USB charging cord (included) to the Charging port of the speaker and insert the other end into a USB port on your computer or a
- similar power source.

 Red LED turns on, indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 2 hours to fully charge the

Turn On/Off the SpeakerShort press the Power ON/OFF button to turn on the speaker, and you would hear an indication tone. Blue LED light will blink, your speaker is now ON and is

Short press the Power ON/OFF button to turn off the speaker.

There're two ways to play music from the Karaoke Speaker, in order for you to sing through the Karaoke microphone. You may use any one of the following ways to play music on your Karaoke Speaker.

1. Bluetooth: Pair the Karaoke Speaker with your smart phone or tablet etc

- through Bluetooth.
- Aux In: Connect your smart phone or tablet to the Karaoke Speaker using the USB charging cable with Aux pin (included)

Pairing your device with Bluetooth Speaker and using the karaoke

microphone –
Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 10m. Simply follow the below steps.

- Short press the Power ON/OFF button to turn on the speaker, and you would hear an indication tone.

 Blue LED light will blink, your speaker is now ON and is entering "pairing"
- mode. (Note: Speaker automatically pairs with the previously paired devices) Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for various devices.
- The pairing name of our Bluetooth Speaker is "itek Karaoke Spkr", pair it with If required, enter the password '0000' to confirm to finalize pairing.
- Once paired successfully, you would hear a beep tone and the blue LED
- Once paried soccessionly, you would near a beep tone and the blue LEL light will flash slowly.

 Play music: open an App to download and play song. You can use your phone to adjust the volume.
- you are now ready to sing with the karaoke microphone, and adjust the volume and echo output to your desire level.

反面印刷

Play music using "Aux-in"

- Turn the power button on.
 Connect the USB charging cable with Aux pin (included) to the DC 5V charging port of the speaker, and insert the Aux pin to the audio device (such as computer / tablet etc.).
 Select your favorite song at the source device.
- (Note: Functions can be only controlled through source devices, while playing music in Auxiliary mode.)

Recording Karaoke

- Turn the power button on.

 Adjust volume and echo level, as necessary.

 Connect the USB charging cable with Aux pin (included) to the DC 5V charging port of the speaker, and insert the Aux pin to your phone.
- Launch any Karaoke suitable app from the respective App stores (Apple App Stor or Google Play Store). Choose the songs you like. You can now start singing and recording it.

Do not play music at excessive levels. Damage to hearing and/or equipment may

Specification Bluetooth version Output

Play time

: Earphone - 10mW, speaker - 3W

Frequency range Unit Size Unit Weight

100Hz – 10KHz · Dia 73x219mm : 196g : Up to 2 hours :> 115dB 1KHz THD <1%

Max Vol Charge Voltage Charging time : DC5V (USB) : 2 hours

Bluetooth Range Built-In Rechargeable

Battery : 3.7V / 500mAh (Note: Battery life & charging time may vary, based on usage & types of devices

:10m

used.)

5

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.
The speaker has no echo effect	The echo control knob is not adjusted	Adjust the echo control knob to the correct place
There is background noise when I sing or record	The microphone picks up sounds from the environment	Use the microphone in a quiet environment or keep it further from the phone

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All the materials and workmanship are warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of the defects in material or workmanship. This warranty is effective only if the product is purchased and operated in INDIA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered

WARRANTY DISCLAMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with sale of our products.

WARRANTY PERFORMANCE: During the above one (1) year warranty period, a product with defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the warranty period or thirty (30) days which ever is longer.

WARRANTY LIMIT: The maximum liability of the company shall not exceed the

SERVICE AND REPAIR: If the service is required for the product, the purchaser should contact Acetron Enterprise Pvt Ltd Customer Service at support@acetron. in or by calling +91 22 65340119.

Disputes if any shall be subject to Mumbai Jurisdiction only.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and received
- -- Connect the equipment into an outlet on a circuit different from that to which the
- -- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

6 7 8