

# Bluetooth Speaker

## Model:5B360BT



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY  
& RETAIN FOR FUTURE USE

1

### Getting Started

Remove the unit from the box. Remove any packaging from the product. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

### Package Contents

Wireless Clip-On Speaker with Carabiner  
USB charging cable  
3.5mm auxiliary cord  
Instruction manual

### Features

1. Bluetooth enabled speaker
2. Allows hands-free convenience with wireless streaming
3. Built-in rechargeable batteries brings you hours of non-stop music
4. Ideal for indoor and outdoor use
5. Built-in Aux jack


### IMPORTANT SAFETY INFORMATION

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has

2

been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### Description of Parts:

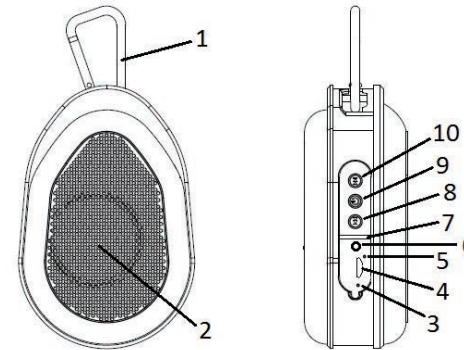

S. No.	Description	S. No.	Description
1	Carabiner Clip	6	Aux-In Port
2	Speaker	7	Rubber Flap
3	Built-In Microphone	8	Skip Backward / Lower Volume
4	Charging Port	9	MF Button (Power / Play / Pause / Phone) Button
5	LED Indicator	10	Skip Forward / Higher Volume

3

### INSTRUCTIONS FOR USE

#### Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take about 2 hours to fully charge the speaker.
3. Once the speaker is fully recharged, disconnect the USB Cable and firmly close the Rubber Flap.

#### Turn On/Off the Speaker

Press and hold the MF button (Power) for 2-3 seconds until you hear the indication tone. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode.

Press and hold the MF button (Power) for 2-3 seconds to turn off the speaker.

#### Turn the speaker to Bluetooth pairing mode -

1. Press and hold the MF button (Power) for 2-3 seconds until you hear the indication tone.
2. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode. (Note: Speaker automatically pairs with the previously paired devices)

#### Pairing your device with Bluetooth Speaker -

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 26-33 Feet. Simply follow the below steps.

1. Press and hold the MF button (Power) for 2-3 seconds until you hear the indication tone.
2. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is "SL BUDDY SPKP", pair it with this device.
6. If required, enter the password '0000' to confirm to finalize pairing.
7. Once paired successfully, you would hear a beep tone and the blue LED light will stay on.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.

4

## 反面印刷

### Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the MF button to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the MF button for 2-3 seconds
End Call	Incoming Call	After your phone conversation, short press the MF button
Volume Increase	During a call	Long press on the ►► button will increase the volume
Volume Decrease	During a call	Long press on the ◀◀ button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the MF button twice

(Note: An indication tone will alert you when the volume is adjusted to the maximum level.)

### Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Long press ►► to increase the volume or long press ◀◀ to decrease the volume
Pause	Playing music	Short press the MF button to pause the music
Play	Pause	Short press the MF button to resume the music
Skip Forward / Skip Backward	Playing music	Short press ►► to skip forward the track. Short press ◀◀ to skip backward the track.

(Note: An indication tone will alert you when the volume is adjusted to the maximum level.)

5

### Play music through "Auxiliary" mode

- Turn ON the device.
- Insert the Auxiliary cable (included) in the AUX-IN port of the speaker. And, insert the other end of the cable into the audio device (such as mobile phone / computer / tablet / ....etc).
- Select your favourite song at the source device to play.
- Long press ►► to increase the volume or ◀◀ to decrease the volume.

**Note:** When you insert Auxiliary cable into the AUX-IN Port of the speaker, its Bluetooth mode will turn off automatically. An indication tone will alert you when the volume is adjusted to the maximum level. All media controls (skip forward / backward etc) can be managed from the source device only.

### Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result.

Specification	
Bluetooth version	: 2.1+EDR
Speaker	: 3 Watts
Unit Size	: 3"x4-1/2"x1-3/4"
Unit Weight	: 4.9 oz
Play time	: up to 2 hours
Charge Voltage	: DCSV (USB)
Bluetooth Range	: 26-33 Feet
Built-In Rechargeable Battery	: 3.7V / 300mAh
(Note: Battery life & charging time may vary, based on usage & types of devices used.)	

### Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.

6

<b>No sound at all.</b>	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on.  Turn the speaker on. Adjust volume source. Play media from source.
-------------------------	--	---

### Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

### FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

7

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

8