

Bluetooth Speaker

Model:5B403BT



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting Started

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging for future reference

Package Contents

- Bluetooth Mini Tower Speaker
- AC/DC Adapter
- 3.5mm Auxiliary cord
- Remote Controller (CR2025 Button Cell Battery Included)
- Instruction Manual

Key Features

 
- Bluetooth® Mini Tower Speaker
- Play music wirelessly
- Wirelessly connects to all Bluetooth enabled devices
- Compatible to iPod, iPhone, iPad Samsung Galaxy phones, Laptops & more.
- Wireless Range: 33 Feet
- Built-In Aux Jack; Aux cable included
- DC Jack; Adapter included

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given appropriate supervision and instructions to use the equipment by a person responsible for their safety.
- Do not leave the equipment unattended while connected to the power supply.
- Never leave the equipment within reach of children.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user and/or equipment at serious risk.
- This equipment is intended for household use only and should not be used for industrial or commercial purposes.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Do not use this equipment for anything other than its intended use.
- This equipment must be placed on a stable, heat resistant surface.
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.

2

DESCRIPTION OF PARTS (Speaker):

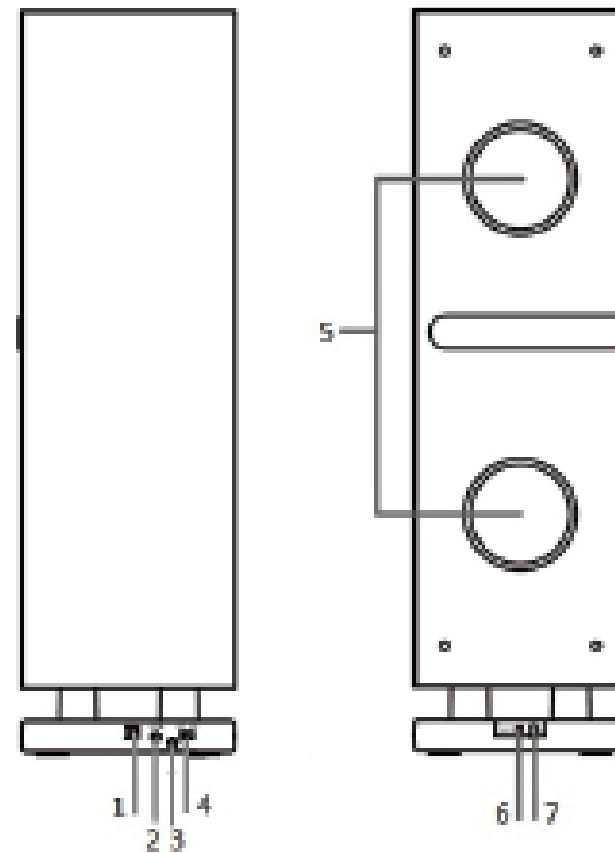


- DC ADAPTOR PORT (DC 5V)
- AUXILIARY PORT
- POWER INDICATOR LIGHT
- ON/OFF SWITCH

- SPEAKER(S)
- LED LIGHT INDICATOR
- REMOTE CONTROL SENSOR

3

 REMOTE CONTROL:

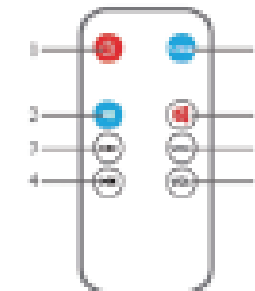


No	Function	Operation
1	POWER BUTTON	To Turn On/Off the speaker
2	PLAY/PAUSE	Short press will stop the music and the next press will resume the music
3	NEXT TRACK	Short press the button to the next track
4	PREVIOUS TRACK	Short press the button to the previous track
5	MODE BUTTON	Short press the button to change the playing mode
6	MUTE	Short press will off the sound and the next press will resume the sound
7	VOLUME INCREASE	Press and hold the button will increase the volume
8	VOLUME DECREASE	Press and hold the button will decrease the volume

Note: The buttons 2, 3, 4 and 5 are not workable when the product is operated by "AUX IN".

INSTRUCTIONS FOR USE

 Installation
Insert the pin from the supplied AC/DC Adapter to Adapter DC port on the rear of the unit. Plug the AC/DC adaptor to a wall power outlet (AC 100-240V 50/60Hz).

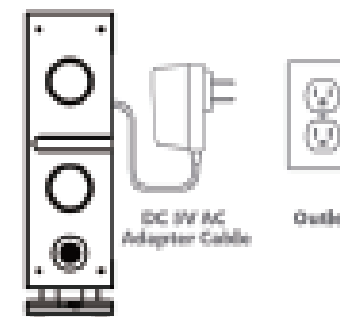


4

反面印刷

Batteries Installation

 In first time use, remove the insulation tab from the battery compartment of the Remote Control.

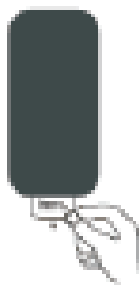

Remote Control includes the battery (1 CR2025 Lithium battery); when battery is drained, replace battery as below:

- Pull the battery tray out of the battery compartment of Remote Control.
- Place new CR2025 button cell battery in the tray slot, as per the indicated polarity.
- Close the battery tray.



Effective Distance of Remote Transmitter

- When there is an obstacle between the speaker & the remote control, the transmitter may not operate.
- When there is direct sunlight or an incandescent lamp, fluorescent lamp or any other strong light hits the Remote Control Sensor of the unit, the remote operation may not work well.

Turn On/Off the Speaker

- To Turn "ON" slide the "POWER ON/OFF" switch to the ON Position.
- To Turn "OFF" slide the "POWER ON/OFF" switch to the OFF Position.

Pairing your device with Bluetooth Speaker –

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within 26-33 Feet. Simply follow the below steps.

- Turn ON the speaker.
- You would hear indication tone and LED light with blink BLUE, indicating that the speaker is now in pairing mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for various devices.
- The pairing name of our Bluetooth Speaker is "SL MINI TOWER", pair it with this device.
- Select it from the list of Searched Devices.

5

- If required, enter the password '0000' to confirm to finalize pairing.
- Once paired successfully, the Blue LED will stay ON.
- If you fail to pair it within the time frame or you want to pair it with a new device, please repeat the steps outlined above.

Select your favourite song from the Bluetooth device and music would now stream through bluetooth speaker.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Aux function of the Speaker (to play music from non-Bluetooth devices)

- Turn ON the speaker.
- Plug the 3.5 mm auxiliary cord (included) to the auxiliary port of the speaker. And, connect the other end of the cord to an audio device (such as MP3 Player, computer / tablet etc.).
- Select your favorite song at the source device and play the Wireless Speaker Cone.

Note: Once AUX cable is connected to the Bluetooth Phone & Speaker, music through the Bluetooth will be stopped. Media can be controlled only through source devices, while playing music in Auxiliary mode.

Do's and Don'ts

Do not play music at excessive levels as it may impact hearing ability and/or equipment adversely. Do not use in wet or in damp surroundings.

Specification

Bluetooth version	: 2.1+EDR
Speaker output power	: 5Wx2
Size	: 5 x 5 x 17-3/8 inches
Weight	: 3.1 lb
Bluetooth Range	: 27 - 33 Feet
Power Source	: DC Adapter
Input	: AC 100-240V 50/60Hz 0.4A
Output	: DC 5V 1.5A
Centre Positive	

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
No sound at all.	Source (Tablet, Mobile Phone, and Laptop) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.
Cannot Pair	Bluetooth Disconnected	Turn OFF the Speaker; and then Turn ON the speaker after about 30seconds. Keep your Bluetooth Speaker and Bluetooth enabled device within 3 feet of each other during the pairing process. After a successful pairing, the LED indicator light will become solid Blue in colour.

6

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

7

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

8