
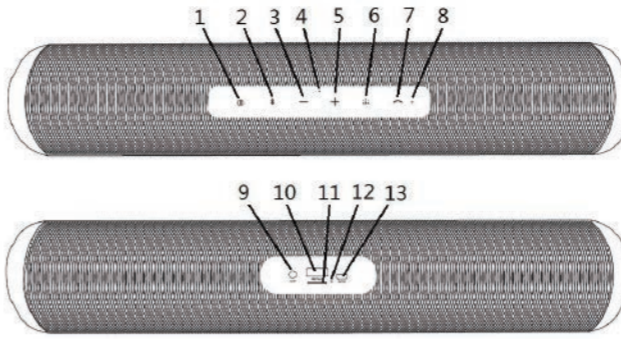


刀模线不印刷  
5B573BT 说明书, 80g书纸, 正反面单色印刷, 4折页  
尺寸: 100\*140mm

正面印刷

 <p style="text-align: center;"><b>INSTRUCTION MANUAL</b></p> <p style="text-align: center;">PLEASE READ ALL INSTRUCTIONS CAREFULLY &amp; RETAIN FOR FUTURE USE</p> <p style="text-align: center;">1</p>	<p><b>Getting Started</b> Remove the unit from the box. Remove any packaging from the product. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.</p> <p><b>Package Contents</b> Extra long portable wireless Speaker USB Charging cable 3.5mm auxiliary cord Instruction manual</p> <p><b>Features</b></p> <ol style="list-style-type: none"> <li>Extra long portable wireless Speaker</li> <li>Works as desktop or as a portable speaker</li> <li>Connect and stream wireless music anywhere, anytime</li> <li>Built-in mic to take calls</li> <li>Built-in high-end speaker delivers crisp clear sound</li> <li>Built-in Rechargeable Battery</li> <li>Built-in AUX jack/USB/Micro SD (TF) slot</li> <li>Built-in FM radio</li> </ol> <p><b>IMPORTANT SAFETY INFORMATION</b></p> <ol style="list-style-type: none"> <li>Read all instructions before using this product.</li> <li>Do not leave this product unattended while connected to the power supply.</li> <li>Do not immerse in water or any other liquids.</li> <li>Do not use if unit has been dropped or damaged in any way.</li> <li>Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.</li> <li>Place unit on sound, even surface, free of vibrations and away from sources of heat.</li> <li>Do not use with wet hands.</li> <li>Do not put objects into openings.</li> <li>Keep free of dust, lint, hair etc.</li> <li>Do not use this unit for anything other than its intended use.</li> <li>Keep this product out of reach of children.</li> <li>This product is not a toy.</li> <li>Do not play music at excessive levels especially near children, as damage to hearing may occur.</li> </ol> <p style="text-align: center;">2</p>	<p><b>DESCRIPTION OF PARTS</b></p>  <table border="1"> <tr> <td>1</td> <td>ON/OFF Button</td> <td>8</td> <td>Built-in Mic</td> </tr> <tr> <td>2</td> <td>Requesting Bluetooth Button</td> <td>9</td> <td>AUX-Input</td> </tr> <tr> <td>3</td> <td>Skip Backward / Decrease Volume</td> <td>10</td> <td>USB Slot</td> </tr> <tr> <td>4</td> <td>LED Light Indicator</td> <td>11</td> <td>Micro SD (TF) Card Slot</td> </tr> <tr> <td>5</td> <td>Skip Forward / Increase Volume</td> <td>12</td> <td>Charge Indicator</td> </tr> <tr> <td>6</td> <td>Mode Button</td> <td>13</td> <td>USB Charging Port</td> </tr> <tr> <td>7</td> <td>Play/Pause/Phone Button</td> <td></td> <td></td> </tr> </table> <p><b>INSTRUCTIONS FOR USE</b></p> <p><b>Charging the speaker</b> <b>For best results, fully charge the speaker before use.</b></p> <ol style="list-style-type: none"> <li>Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar suitable power source.</li> <li>The Red LED turns on, indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes about 4-6 hours to charge the speaker fully.</li> </ol> <p><b>Turn On/Off the Speaker</b> Press and hold the ON/OFF button for 2-3 seconds to turn on/off the unit.</p> <p><b>Switch the speaker to Bluetooth pairing mode -</b></p> <ol style="list-style-type: none"> <li>Turn ON the speaker.</li> <li>You would hear the indication tone, and blue LED lights blink rapidly. The speaker is</li> </ol> <p style="text-align: center;">3</p>	1	ON/OFF Button	8	Built-in Mic	2	Requesting Bluetooth Button	9	AUX-Input	3	Skip Backward / Decrease Volume	10	USB Slot	4	LED Light Indicator	11	Micro SD (TF) Card Slot	5	Skip Forward / Increase Volume	12	Charge Indicator	6	Mode Button	13	USB Charging Port	7	Play/Pause/Phone Button			<p>now in pairing mode. (Note: Speaker will automatically pair with previously paired devices)</p> <p><b>Pairing your device with Bluetooth Speaker –</b> Your <b>Bluetooth Speaker</b> can wirelessly stream audio from any Bluetooth enabled device within 27-33 Feet. Simply follow the below steps.</p> <ol style="list-style-type: none"> <li>Turn ON the speaker.</li> <li>You would hear the indication tone, and white LED lights blink rapidly. The speaker is now in pairing mode.</li> <li>Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.</li> <li>It will search for various devices.</li> <li>The pairing name of our Bluetooth Speaker is “<b>SL Extra Long Spkr</b>”, pair it with this device.</li> <li>If required, enter the password ‘0000’ to confirm to finalize pairing.</li> <li>Once paired successfully, you would hear an indication tone, and white LED light will stay on.</li> <li>If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.</li> </ol> <p>Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.</p> <p><b>Talking using the Bluetooth Speaker</b> Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.</p> <table border="1"> <thead> <tr> <th>Function</th> <th>Operation</th> <th>Button</th> </tr> </thead> <tbody> <tr> <td>Answer Incoming Call</td> <td>Incoming Call</td> <td>Press the Phone button once to answer an incoming call.</td> </tr> <tr> <td>Reject Incoming Call</td> <td>Incoming Call</td> <td>Press and hold the Phone button for 3 seconds.</td> </tr> <tr> <td>End Call</td> <td>Incoming Call</td> <td>After your phone conversation, short press the Phone button</td> </tr> <tr> <td>Volume Increase</td> <td>During a call</td> <td>Long press on the + button will increase the volume</td> </tr> <tr> <td>Volume Decrease</td> <td>During a call</td> <td>Long press on the - button will decrease the volume</td> </tr> <tr> <td>Redial last number</td> <td>Standby mode and connected to a device</td> <td>Short press the Phone button twice</td> </tr> </tbody> </table> <p><b>Listening to Music Wirelessly</b> Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.</p> <p style="text-align: center;">4</p>	Function	Operation	Button	Answer Incoming Call	Incoming Call	Press the Phone button once to answer an incoming call.	Reject Incoming Call	Incoming Call	Press and hold the Phone button for 3 seconds.	End Call	Incoming Call	After your phone conversation, short press the Phone button	Volume Increase	During a call	Long press on the + button will increase the volume	Volume Decrease	During a call	Long press on the - button will decrease the volume	Redial last number	Standby mode and connected to a device	Short press the Phone button twice
1	ON/OFF Button	8	Built-in Mic																																																	
2	Requesting Bluetooth Button	9	AUX-Input																																																	
3	Skip Backward / Decrease Volume	10	USB Slot																																																	
4	LED Light Indicator	11	Micro SD (TF) Card Slot																																																	
5	Skip Forward / Increase Volume	12	Charge Indicator																																																	
6	Mode Button	13	USB Charging Port																																																	
7	Play/Pause/Phone Button																																																			
Function	Operation	Button																																																		
Answer Incoming Call	Incoming Call	Press the Phone button once to answer an incoming call.																																																		
Reject Incoming Call	Incoming Call	Press and hold the Phone button for 3 seconds.																																																		
End Call	Incoming Call	After your phone conversation, short press the Phone button																																																		
Volume Increase	During a call	Long press on the + button will increase the volume																																																		
Volume Decrease	During a call	Long press on the - button will decrease the volume																																																		
Redial last number	Standby mode and connected to a device	Short press the Phone button twice																																																		

反面印刷

<table border="1"> <thead> <tr> <th>Function</th> <th>Operation</th> <th>Button</th> </tr> </thead> <tbody> <tr> <td>Increase Volume</td> <td>Playing music</td> <td>A long press on the + button once will increase the volume</td> </tr> <tr> <td>Decrease Volume</td> <td>Playing music</td> <td>A long press on the - button once will decrease the volume</td> </tr> <tr> <td>Pause</td> <td>Playing music</td> <td>Short press Play/Pause button once to pause the music</td> </tr> <tr> <td>Play</td> <td>Pause</td> <td>Short press Play/Pause button once resume the music</td> </tr> <tr> <td>Previous track</td> <td>Playing music</td> <td>Short press the - button to the previous track</td> </tr> <tr> <td>Next track</td> <td>Playing music</td> <td>Short press the + button to the next track</td> </tr> </tbody> </table> <p>(Note: An indication tone will alert you when the volume is adjusted to maximum level.)</p> <p><b>Aux function of the Speaker</b> (to play music from non-Bluetooth devices)</p> <ol style="list-style-type: none"> <li>Turn on the speaker.</li> <li>Plug the 3.5 mm auxiliary cord (included) in to the auxiliary port of the speaker. And, connect the other end of the cable to the audio device (such as MP3 Players / computer / tablet etc.).</li> <li>Short press Mode button each time until AUX-In mode is selected.</li> <li>Select your favorite song at the source device.</li> </ol> <p><b>Note:</b> Functions (except increase/decrease volume) like Skip Backward, Skip Forward etc can be only controlled through source devices, while playing music in Auxiliary mode.</p> <p><b>Listening to Music using USB / Micro SD (TF) Card Slot</b></p> <ol style="list-style-type: none"> <li>Turn on the speaker.</li> <li>Insert Micro SD (TF) card or USB flash drive into the Micro SD (TF) Card Slot or USB Slot. Music would be automatically streamed.</li> <li>Short press + or - button to move forward or backward on your playlist.</li> <li>Short press Play/Pause button to Play or Pause a track.</li> </ol> <p><b>Note:</b> While using Bluetooth, if you insert Micro SD (TF) Card or USB Flash drive, speaker would disconnect the Bluetooth connection and switch to Micro SD (TF) card or USB card function. You can short press Mode button each time until it goes back Bluetooth mode.</p> <p>Micro SD (TF) Card/USB Flash Drive not included.</p> <p><b>FM Radio</b></p> <ol style="list-style-type: none"> <li>Turn ON the Speaker.</li> <li>Insert the USB cord (included) into the charging port. Leave the other end of the cord open. USB cord serves as FM Antenna while in FM Radio mode.</li> <li>Short press Mode button each time until FM mode is selected.</li> </ol> <p style="text-align: center;">5</p>	Function	Operation	Button	Increase Volume	Playing music	A long press on the + button once will increase the volume	Decrease Volume	Playing music	A long press on the - button once will decrease the volume	Pause	Playing music	Short press Play/Pause button once to pause the music	Play	Pause	Short press Play/Pause button once resume the music	Previous track	Playing music	Short press the - button to the previous track	Next track	Playing music	Short press the + button to the next track	<ol style="list-style-type: none"> <li>Short press Play/Pause/Phone button and the device would automatically search and store all the FM Radio stations.</li> <li>Short press + or - button to change the FM Radio stations.</li> </ol> <p><b>Tips!!</b></p> <ol style="list-style-type: none"> <li>Short press the Mode button each time to switch different functions of the speaker. The modes appear in the following sequence – Bluetooth / FM Radio / AUX-In / USB-TF.</li> <li>When the unit is not in use, turn OFF the device to save the battery power.</li> </ol> <p><b>Do's and Don'ts</b> Do not play music at excessive levels as damage to hearing and/or equipment may result. Do not use in wet or in damp surroundings.</p> <p><b>Specification</b></p> <p>Bluetooth version : 2.1 + EDR Speaker Output : 2 x 5W FM Frequency : 87.5 – 108MHz Unit Size : 3.1"x3.1"x1.57" Unit Weight : 27 oz Play time : 3 hours Charge Voltage : DCSV (USB) Bluetooth Range : 27 - 33 Feet Built-In Rechargeable Battery: 3.7V / 1200mA (Note: Battery life &amp; charging time may vary based on usage &amp; types of devices used.)</p> <p><b>Troubleshooting</b></p> <table border="1"> <thead> <tr> <th>Problem</th> <th>Possible Cause</th> <th>Solution</th> </tr> </thead> <tbody> <tr> <td><b>Low sound level</b></td> <td>Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead</td> <td>Adjust source volume. Charge Battery.</td> </tr> <tr> <td><b>Sound distorted</b></td> <td>Battery nearly dead</td> <td>Charge Battery.</td> </tr> <tr> <td><b>No sound at all.</b></td> <td>Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.</td> <td>Turn the source on. Adjust volume source. Play media from source.</td> </tr> </tbody> </table> <p><b>Care and Maintenance</b> Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.</p> <p style="text-align: center;">6</p>	Problem	Possible Cause	Solution	<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.	<b>Sound distorted</b>	Battery nearly dead	Charge Battery.	<b>No sound at all.</b>	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Adjust volume source. Play media from source.	<p><b>FCC Instructions</b></p> <ul style="list-style-type: none"> <li>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</li> </ul> <p><b>NOTE:</b> This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the product and receiver.</li> <li>Connect the product into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p><b>Limited Warranty</b> This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.</p> <p><b>WARRANTY DURATION:</b> All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.</p> <p><b>WARRANTY COVERAGE:</b> This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions</p> <p style="text-align: center;">7</p>	<p>furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.</p> <p><b>WARRANTY DISCLAIMERS:</b> This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.</p> <p><b>WARRANTY PERFORMANCE:</b> During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.</p> <p><b>SERVICE AND REPAIR:</b> If service is required for this product, you should first contact Midwest Trading Group Customer Service at <a href="mailto:info@mtradinggroup.com">info@mtradinggroup.com</a> or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.</p> <p><b>NOTE:</b> Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.</p> <p style="text-align: center;">8</p>
Function	Operation	Button																																		
Increase Volume	Playing music	A long press on the + button once will increase the volume																																		
Decrease Volume	Playing music	A long press on the - button once will decrease the volume																																		
Pause	Playing music	Short press Play/Pause button once to pause the music																																		
Play	Pause	Short press Play/Pause button once resume the music																																		
Previous track	Playing music	Short press the - button to the previous track																																		
Next track	Playing music	Short press the + button to the next track																																		
Problem	Possible Cause	Solution																																		
<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.																																		
<b>Sound distorted</b>	Battery nearly dead	Charge Battery.																																		
<b>No sound at all.</b>	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Adjust volume source. Play media from source.																																		