

Model No. : 8 B1 0 0 BT

Item: Bluetooth headphone



Specification:

1 Battery capacity : 3.7 V, 120mAh	2. Charge port: Micro-USB
3 Speaker: 0.5W *2	4. Aux in jack : 3.5MM
5. Charge input : DC 5V	6. Bluetooth distance : 10m
7. Support format : MP3	8. FM Frequency range : 87.5-108.0MHz
9. Bluetooth version: 2.1+EDR	10. Working time: 2 hours
11. Micro SD card support up to 32GB	

Operation guide

A: ▶/⏸

Long press:

Change the mode. Micro SD/Fm radio/Bluetooth

Short press

I、 Bluetooth mode : Play/Pause /answer the phone

II、 TF Mode : Play/Pause

III、 Aux in Mode : Mute

Model No. : 8 B1 0 0 BT

IV、 Radio Mode : Search FM channels automatic.

B: switch to **⏮/V-**

Short Press :

I、 Bluetooth mode : Previous track

II、 TF Mode : Previous track

III、 Aux in Mode : No function

IV、 Radio Mode : Previous channel

Press and hold :

I、 Bluetooth mode : Decrease the volume

II、 TF Mode : Decrease the volume

III、 Aux in Mode : Decrease the volume

IV、 Radio Mode : Decrease the volume

C. switch to **⏭ /V+**

Short press :

I、 Bluetooth mode : Next track

II、 TF Mode : Next track

III、 Aux in Mode : No function

IV、 Radio Mode : Next channel


Press and hold :

I、 Bluetooth mode : Increase the volume

II、 TF Mode : Increase the volume

III、 Aux in Mode : Increase the volume

IV、 Radio Mode : Increase the volume

D. 

Model No. : 8 B1 0 0 BT

Press and hold to turn on the bluetooth headphone

Function:

Bluetooth mode

Turn it on, 8B100BT will into the Bluetooth mode. the Bluetooth device is ready to pair. You can search the Bluetooth pairing name " 8B100BT" in your phone, and then pair it. It have the indicate tone when the Bluetooth device is connected succeed, , that means your phone have been connected the 8B100BT successful through the Bluetooth. Press the " V-/I<<< " and the >>>I /V+ "to Prev. and Next track, Long press the "-/I<<< "and " >>>I/+ "button to decrease and increase the Volume. Short press the " >>|/ " ,you can pause or play the music. When the call in ,you can answer the phone. Press and hold it can change the mode

TF mode

Turn it on. And hold the " >>|/ " to change mode . Insert TF card, so the unit will play the mp3 format files automatics. Press the " V-/I<<< " and the " >>>I/V+ "to Prev. and Next, press and hold the "V/I<<< "and " >>>I/V+ "button to decrease and increase the Volume.

Radio mode

Press and Hold the " >>|/ " to change mode . Press " >>|/ " to search the fm channel automatic. Press the "V-/ I<<< " and the ">>>I/V+ "to Prev. and Next channels, press and hold the "V-/I<<< "and " >>>I/V+ "button to decrease and increase the Volume.

AUX-IN

Insert the audio cable into the 3.5mm jack. And Hold the " >>|/ " to change to Aux-in mode . Press and hold the "V/- I<<< " and " >>>I/V+ " button to decrease and increase the Volume.

Charging

Plug the USB cable into speaker MINI USB port and connect to power source.

WARNING

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.