



Bluetooth headphone



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Bluetooth Headphones
- USB charging cable
- Instruction Manual

Key Features


- Bluetooth Stereo Headphones
- Built-in microphone for hands-free use with Bluetooth enabled devices
- Vibrant sound with powerful bass & crisp highs
- Foldable and comfortable adjustable design
- Connects automatically to previously connected devices
- Built-in controls support play, pause, forward/backward track and volume
- Built-in FM Radio
- Built-in Micro SD (TF) Card slot, to play music directly from memory card

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not use the handset at excessive volume levels, as damage to hearing may occur.

2

Description of Parts:

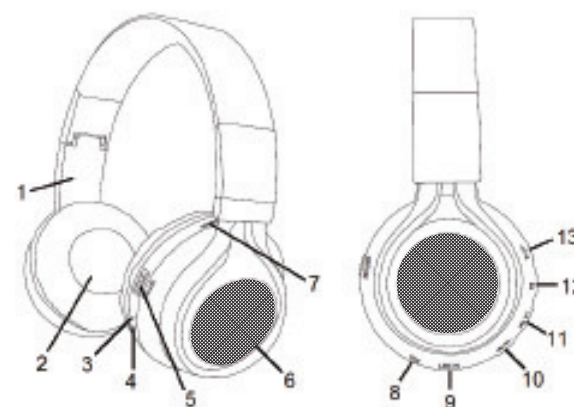

1	Foldable and adjustable headband
2	Speaker
3	Built-In Microphone
4	LED Light Indicator
5	Power ON/OFF Switch
6	Multi-colored LED Flashing Lights
7	Micro SD (TF) card slot
8	Charging port
9	Auxiliary input
10	Previous Track ◀◀ / Volume Decrease (V-)
11	Next Track ▶▶ / Volume Increase (V+)
12	Play / Pause button
13	Mode / Phone button

INSTRUCTIONS FOR USE

Charging Instructions

- The Bluetooth Headphones comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB Cord to charge the

3

Bluetooth Headphones. Please charge for about 2 hours.

- Connect the USB charging cable to a computer USB port or other suitable charging source and the Micro USB plug to the charging port of the device. The Red LED light turns on while the device is charging. It takes 2 hours for the unit to fully charge. When the battery is fully charged, Red LED light will turn off.

Turning on/off the device

- Slide the Power ON/OFF switch to ON position to turn ON the device, multi-colored LED Flashing Lights turn on, and Red and Blue LED lights will flash alternatively.
- Slide the Power ON/OFF switch to OFF position to turn OFF the device.

Pairing the Headphone with Bluetooth devices (phone or music device)

- Ensure the Headphones is turned off, and Slide the Power ON/OFF switch to ON position to turn ON the device, Red and Blue LED lights will flash alternatively. Place the Headphones and Bluetooth device (phone or music device) so that they are no further than 3 feet apart;
- Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your device, select the "SL LIGHT UP HP" from the list of available Bluetooth devices.
- If required, enter the password '0000' to confirm & finalize pairing.
- Once paired successful, indication tone will be heard and the only Blue LED is ON.
- You can now start to use the Headphones.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Headphone with a device, the Headphones will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.
- The Bluetooth Headphones will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.
- Once the Bluetooth Headphones is paired with your device the music will transmit through the Bluetooth Headphones. Please refer to your device's user manual for further information.

Function Summary

Listening to Music

- Once the Headphones is paired with your device you can stream music wirelessly through the Bluetooth Headphones. Should you encounter any problems while streaming please refer your device's user manual for further information.

Control Function

Function	Operation	Button
Increase Volume	Playing music	A long press on the V+ button once will increase the volume
Decrease Volume	Playing music	A long press on the V- button once will decrease the volume
Pause	Playing music	A short press on the Play / Pause button will pause the music
Play	Pausing	A short press on the Play / Pause button will restart the music

4

Previous track	Playing music	A short press on the ◀◀ button will return you to the previous track
Next track	Playing music	A short press on the ▶▶ button will take you to the next track

Making a call with the Bluetooth Headphones in Bluetooth mode

Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Press the Phone button once to answer an incoming call
Reject Incoming Call	Incoming Call	Long press the Phone button
End a call	Incoming Call	After your phone conversation, short press the Phone button.
Increase Volume	During a call	A long press on the V+ button once will increase the volume
Decrease Volume	During a call	A long press on the V- button once will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

FM RADIO

Turn on the Headphones

Slide the Power ON/OFF switch to ON position to turn ON the Headphones.

Auto-scan Stations & Play FM Radio

- Press the Mode button each time until it enters FM mode.
- To AUTO-SCAN the stations, press Play / Pause button once.
- It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Press ◀◀ or ▶▶ to skip selected stations.
- Long press the V+ or V- button to increase or decrease the volume.

Listening to Music using Micro SD (TF) card slot

- Turn on the Headphones.
- Insert Micro SD (TF) card into the card slot, music would be automatically streamed.
- Press ▶▶ or ◀◀ to move forward or backward on your playlist.
- Press Play / Pause button to Play or Pause a track.
- Long press the V+ or V- button to increase or decrease the volume.

5

Note: While using Bluetooth, if you insert Micro SD (TF) card, Headphones would disconnect the Bluetooth connection and switch to Micro SD (TF) card function. You can press Mode button again, to select the Bluetooth mode.

Tips!!

- Press the Mode button to switch different functions of the Headphones. The functions are – Bluetooth / Micro SD (TF) card / FM.
- When the headphones is not in use, turn it OFF to save the battery power.

Listening to Music using AUX-In Mode

- Insert a 3.5mm auxiliary cable (not included) in to the Aux input of the Headphones. And, the other end of the cable connects to the audio device (such as cell phone / computer / tablet etc.).
- Select your favorite song at the source device and play.

(Note: Using this Aux-in mode, you do not need to turn on the Headphones, and you need to control the volume increase/decrease, play/pause, next/previous track through your source device.)

Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result. Do not use outdoors in wet or in damp surroundings.

Care and Maintenance

Read the following recommendations before using the Bluetooth Headphones. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Headphones to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

In case the device doesn't function properly, send it to the store you bought it. The staff will help you to the problem.

Specifications

Bluetooth specification	Bluetooth 3.0
FM frequency range	87.5 – 108MHz
Working time	Up to 3 hours (max. volume), 6 hours (moderate volume)
Charging input voltage	DC 5V
Charging time	About 2 hours

6

Speaker output	30mW total
Built-In Battery	300mAh
Micro SD card	Support up to 32GB

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and the use of such marks by Midwest Trading Group Inc is under license. Other trademarks and trade names are those of their respective owners.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, bulbs

7

etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

RF exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

8