

WhisperConnect™ Sensor

900 MHz Nursery Monitor - Pet Detection



Important: Read and keep these instructions for future reference.

Thank you for purchasing the Evenflo WhisperConnect Pro Nursery Monitor. If you have any questions or problems with your Evenflo WhisperConnect Pro Nursery Monitor please do not return it to the store; call Evenflo's ParentLink at 1-800-233-5921. Monday through Friday 8:00 AM to 7:00 PM EST

Model Number: Your WhisperConnect Pro Nursery Monitor model number is 6461500.



- www.evenflo.com
- USA & Canada: 1-800-233-5921 México: 01-800-706-12-00

UL Listed Adapter, FCC Approved.

AWARNING

- DO NOT OPEN. NO USER SERVICEABLE PARTS INSIDE. RISK OF ELECTRIC SHOCK. MAY CAUSE INIURY, FIRE, OR DEATH.
- DO NOT use near water.
- **DO NOT** place furniture on cord.
- NEVER place the baby's unit or its adapter in the crib or playpen, or within the child's reach.
- **DO NOT** hang this monitor near or on a crib. The cord can present a strangulation hazard.
- Always keep the unit out of children's reach.
- **DO NOT** use this monitor if it is broken or missing parts.
- This product is designed and intended to be used solely to monitor the actions of a sleeping child.
- DO NOT use this monitor with products that warn the user: "NEVER LEAVE CHILD UNATTENDED.
- This product does not replace responsible adult supervision of a child.
- You should check your child regularly as this product will not detect your child's quiet activities.
- This product is not intended to be used as a medical monitor, and its use should not replace adult supervision.
- Make sure the Parent's and Baby's units are functioning properly, on the same channel, and within reception range of each other.
- It is essential to check the sound reception regularly.

Important Safety Instructions

The Evenflo WhisperConnect Pro Nursery Monitor should NOT be used as a replacement for adult supervision of children. Please note that any modification to the Baby's Unit (transmitter) or Parent's Unit (receiver) will violate FCC compliance and can void the user's authority to operate

- 1. Read and observe all warnings on the product and in this Owner's Manual, Pay special attention to information marked "WARNING" and "IMPORTANT." This information can affect your child's safety. Keep this Owner's Manual nearby for quick and easy reference.
- 2. Avoid placement near water or moisture. DO NOT use Baby's Unit outdoors. DO NOT use your monitor near a bathtub, shower, sink, laundry tub, swimming pool, wet basement, or other locations where water or moisture may result in electrocution
- 3. Allow for proper ventilation of the adapters and the monitors. DO NOT place your monitor on or under a rug, bed, sofa, blanket or similar object that blocks its ventilation. DO NOT place it in a built-in installation such as a bookcase or stereo cabinet. These may impede the air flow through the ventilation openings.
- 4. Remove the batteries from the monitor components and unplug the AC adapters if the monitor will not be used for a long period of time.
- 5. Avoid placement near heat sources. DO NOT use your monitor near a radiator, stove, heat register, or other appliance (including amplifiers and TV's) that produce heat. Heat can damage

- 6. The Baby's Unit (transmitter) is operated by a hardwired (non-removeable) AC adapter. **DO NOT** attempt to remove the AC adapter; doing so can affect your safety. The Parent's Unit (receiver) is operated by rechargeable batteries that are included with your monitor or by the Evenflo AC adapter (provided). Use only the Evenflo adapter included with this unit. DO NOT use this adapter with other equipment or use other equipments' adapters with this monitor under any circumstances
- 7. Protect the AC adapter cords. Route cords so they are not walked on, pinched by items placed upon them, or run-over by vacuum cleaners.
- 8. DO NOT immerse any component in water. Clean the monitor with a dry cloth.
- 9. DO NOT use near fluorescent lights, appliances with motors, televisions, fans or other machinery. These items may interfere with the quality of your monitor's transmission or

10.Adapter must be removed from the receiver for battery operation.

11.DO NOT use the monitor if:

- Either adapter cord has been damaged.
- . Objects have fallen onto or liquid has been spilled into any of its components.
- It has been exposed to rain or water.
- It has been dropped or something inside is damaged.
- If any parts are missing or broken, call Evenflo's ParentLink at 1-800-233-5921 for instructional literature or product information if needed.
- 12.Refer to the Troubleshooting Chart in this Owner's Manual before returning your monitor for servicing. You may be able to solve the problem on your own in very little time
- 13. There are no serviceable parts inside these monitors. DO NOT open the cases.
- 14. This device complies with part 15 of the ECC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Helpful Hints

- For best results, use your AC adapter(s) with the monitor. The power is more consistent than that of the battery.
- For best battery performance, allow batteries to completely discharge every few weeks
- This nursery monitor operates over public airwaves. Transmissions from your Baby's Unit may be picked up by another product operating on the same frequency. Your Parent's Unit may also pick up transmissions from another product on the same frequency. If interference occurs, change **BOTH** your Baby's and Parent's Units to the alternate frequency channel.
- Always make sure that both units are on the same frequency channel. It is possible for the Parent's Unit to pick up the Baby's Unit even if they are not on the same channel when both units are close together; however, you'll experience static and interference.

AWARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and Parent's Unit (receiver).
- · Connect the equipment into an outlet on a circuit that is different from the Parent's Unit (receiver).
- Consult the dealer or a qualified radio-TV technician for help.

Features

Operational Range: Your monitor's typical transmission/reception range is 650 feet (198 m) depending on battery power and possible obstructions (i.e., walls) that radio waves encounter. The methods and materials used in your home's construction, terrain and other factors may also affect

Power Light: The Power Light will illuminate green whenever the unit is turned on, whether the

unit is stationary (plugged into adapter) or portable (using battery power).

Channel A/B: If interference occurs, change BOTH your Baby's Unit and Parent's Unit to the alternate frequency channel. The WhisperConnect Pro Nursery Monitor operates over public airwaves. Transmission from your Baby's Unit may be picked up by another product if it is on the same frequency. Your Parent's Unit may also pick up transmission from another product if it is broadcasting on the same frequency

Sound Lights™: Sound Lights light up when the Parent's Unit receives sounds. The more lights that are lit. the louder the sounds

Low Battery Indicator: When battery power in the Parent's Unit is low, the Power Light/Low Battery Indicator will flash. To recharge, attach the AC adapter to the Parent's Unit, plug the AC adapter into a standard wall outlet, then set Power/Volume Dial to ON.

Out-of-Range Indicator and Alarm: All Sound Lights™ will light up and flash, and an alarm will sound on your Parent's Unit if:

• The units are taken out of range of one another. • The units are set to different channels. Power to the Baby's Unit is lost.
 A strong interfering signal starts on the selected channel. The Out-of-Range Indicator and Alarm can only be stopped by re-establishing contact between the two units or by turning off the Parent's Unit. This alarm feature is designed to give you confidence and reassurance that your Evenflo WhisperConnect Pro Nursery Monitor is functioning properly. Parent Unit Finder: Press the Finder Button on Baby's Unit to activate the locating signal. Once the Parent's Unit is located, turn Power Switch OFF then ON to deactivate the signal.

Additional Receivers: You may expand WhisperConnect capacity by adding additional receivers (sold separately). Use only Evenflo WhisperConnect Additional Receiver model 6461550 to expand this monitor system. Please consult the owner's manual included with the additional receiver for warning and safety instructions.


Using Your Monitor

The Baby's Unit (Transmitter)



The Baby's Unit is a transmitter, which sends sounds to the Parent's Unit (receiver). It is powered by a hardwired (non-removable) AC adapter

- 1. Place the Baby's Unit on a hard flat surface that is higher than the baby and 5 to 10 feet away (refer to illustration
- DO NOT place the Baby's Unit directly above the baby.
- DO NOT place it on a soft surface or it may tip over.
- 2. Direct the front of the Baby's Unit towards the baby. Be sure that there aren't any large objects blocking the path between the Baby's Unit and the baby.
- Fully extend the cord, and plug the adapter into an electrical outlet. 4. Rotate the Power Switch from OFF to ON. The Power Light will glow green.
- 5. Slide the Channel Switch to Channel A or B. Ensure the Baby's Unit is set to the same channel as the Parent's Unit.
- 6. Turn Pet Detection ON or OFF, as desired
- 7. Turn the Baby's Unit OFF when not in use.

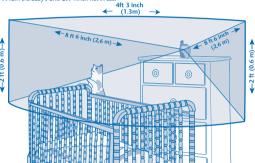

The Parent's Unit (Receiver)



The Parent's Unit receives sound from the Baby's Unit (transmitter) and is powered by either rechargeable batteries (already in the unit) or by the AC adapter included with the unit. 1. Ensure Parent's Unit is charged. To charge, connect AC adapter (provided) to Parent's Unit and plug into standard wall outlet. To charge while monitoring, set Power/Volume Dial to ON. A full charge requires 12 continuous hours.

- 2. Check the channel switch. Ensure the Baby's Unit is set to the same channel as the Parent's Unit.
- 3. Use the Parent's Unit in a different room from the Baby's Unit.
- 4. Place the Parent's Unit where you can easily monitor it by sight or sound.
- When using the adapter, plug it into a standard wall outlet.
- When using batteries, wear the Parent's Unit using the belt clip or place it where you can
- 5. Turn on the Parent's Unit by rotating the Power/Volume Dial; adjust the volume. The Power Light will glow green. If the Power Light flashes, it indicates that battery power is low and Parent's Unit needs to be recharged. NOTE: All sound Lights™ will light up and flash on the Parent's Unit if it is not properly receiving signals from the Baby's Unit.
- 6. Have someone speak into the Baby's Unit to verify sound transmission.
- 7. Turn the Parent's Unit OFF when not in use.

When the Pet Detection Lens senses movement within range, an alarm will sound on the Parent's Unit and the pet detection light will illuminate. To deactivate/reset the alarm, turn the parent unit OFF then ON.

NOTE: The Pet Detection feature is NOT active within the first 20 seconds of being turned on. This allows adults sufficient time to move out of range.

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power Light isn't working.	Unit isn't getting power.	Make sure BOTH units are properly plugged into the wall and the outlet is switched on. Make sure both the Parent's Unit and the Baby's Unit are set to the same channel. Recharge battery by attaching the AC adapter and plugging it into an outlet.
Reception is poor due to static, buzzing or interference.	Other household appliances, cordless phones, fluorescent lights or motors may be disrupting the signal. Parent's Unit may be out of effective range. Battery is weak.	Turn off, unplug or move the device that is causing the problem. Move the Parent's Unit closer to the Baby's Unit. Recharge battery by attaching the AC adapter and plugging it into an outlet.
All Sound Lights flash and alarm sounds (Parent's Unit only).	Parent's Unit is outside the transmission range of the Baby's Unit. Baby's Unit and Parent's unit are on different channels. Baby's Unit is not turned on, or not plugged into a working outlet. Battery in Parent's unit is weak.	Move Parent's Unit closer to the Baby's Unit. Make sure that both units are set to the same channel. Turn the Power Switch on the Baby's Unit to the ON position. Check the AC outlet to be sure it is working. Recharge battery by attaching the AC adapter and plugging it into an outlet.
Power Light flashes (Parent's Unit only).	Battery is weak.	Recharge battery by attaching the AC adapter and plugging it into an outlet.
Parent's Unit is making a loud feedback noise.	Baby's Unit is picking up sounds from the Parent's Unit because they are too close to each other. Volume may be set too high.	Move the Parent's Unit at least 10 feet away from the Baby's Unit. Lower the volume.
Parent's Unit is picking up sounds or static from outside your home.	A neighbor has a similar baby monitor, cordless phone or walkie talkie that is transmitting sounds on the same frequency channel.	Change the frequency channel that is in use. Be sure to change the channel on BOTH units.

Limited Warranty

For a period of 90 days from the original purchase of this Product, Evenflo warrants to the original end user ("Purchaser") this Product (including any accessories) against defects in material or workmanship, Evenflo's n under this express limited warranty shall be, at Evenflo's option, to repair or replace any Product that is determined to be defective by Evenflo and determined to be covered by this warranty Repair or replacement as provided under this warranty is the exclusive remedy of the Purchaser. Proof of purchase in the form of a receipted invoice or bill of sale evidencing that the Product is within the warrant period must be presented to obtain warranty service. This express limited warranty is extended by Evenflo
ONLY to the original Purchaser of the Product and is not assignable or transferable to subsequent purchasers IS HEREBY DISCLAIMED. or end users of the Product. For warranty service, contact Evenflo's ParentLink Consumer Resource Center at (800) 233- 5921 or www.evenflo.com.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTARILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS HERERY DISCLAIMED. EVENELO SHALL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES OF ANY KIND FOR BREACH OF THE EXPRESS LIMITED WARRANTY ON THIS PRODUCT, OR ANY WARRANTY IMPLIED BY OPERATION OF LAW. OTHER THAN THE EXPRESS LIMITED WARRANTY SET FORTH ABOVE. THERE ARE NO OTHER WARRANTIES THAT ACCOMPANY THIS PRODUCT AND ANY ORAL WRITTEN OR ANY OTHER EXPRESS REPRESENTATION OF ANY KIND

©Evenflo Company, Inc. 2004

25700006 4/04