

## **1. Basic information**

### **1.1 Instruction**

Thanks for you to select the color GSM/GPRS numeric mobile phone. You can realize and operate the phone by the user manual.

The keypad operated handset is devised contra pose GSM/GPRS network condition. It has basic call function besides, also has many other useful functions, Bluetooth, voice changer, camera, music player, video player, radio and so on. These functions can make your life more convenient and fun.

### **1.2 For your safety**

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

## **2. Before use**

### **2.1 Components name and explanation**

#### **2.1.1 Technical Specification**

**Weight:**

**Diameter:**

**Battery:**

**Network:**

**Battery type:**

**Battery capacity:**

**Call Duration:**

## **Standby time:**

**Note:** The performance of your phone depends on your local network operator's card and how you actually use it. We are not responsible for any damages due to inappropriate use.

### **2.1.2 Appearance**

#### **2.1.3 Keypad Description**

1. Left/Right navigation key

Move the cursor to left or right when editing. In idle status, press left navigation key to [inbox] menu, press right navigation key to [profiles] menu. In view camera status, press left/right navigation key to adjust the EV reference to -4~+4. In some secondary menus, press left navigation key can open option menu, press right navigation key return to preceding menu.

2. Up/down Navigation key

View the name, call number, message and all submenu options. Move the cursor to up or down when editing. In idle status, Press navigation key to [alarm] menu.

3. Left soft key

To perform the function of the prompt displayed at lower left corner of the screen.

4. Right soft key

To perform the function of the prompt displayed at lower right corner of the screen.

5. Dial key

To dial or extract an incoming call number. In standby mode, press the dial key to display the SIM1 call records.

6. Hang-up Key

To end a call or reject incoming calls. Hold down this key to power On/Off. Under most circumstances pressing this key will put the mobile phone into standby mode.

7. Number key

0~9 number key can input number and word, speed to select option menu, speed call (the call must be stored in phone book).

8. \* key

It has different function in various menus.

9. # key

It has different function in various menus.

10. Middle key

In standby mode, press the key to enter into the main menu. On other submenus, it function same as left soft key.

11. EX1

In standby mode, press EX1 key to enter SIM2 call records.







12. EX2






In standby mode, press EX2 key to camera or FM or other main menu.

**! Tip:** In this handbook, the phrase “press the key”

refers to pressing and thereafter releasing a key; “Hold down a key” refers to pressing a key and keeping it depressed for 2 seconds or longer.

#### 2.1.4 Icon Description

ICON	Description
	The more bars displayed, the better the signal strength
	GPRS Connected
	Keypad lock
	Vibrate
	Ring and vibrate
	Ring
	Vibrate then ring
	Input earphone
	Roam Indicator
	SMS Indicator
	MMS Indicator
	Voice message
	Setting and open alarm
	Open SIM1 Divert
	Open SIM2 Divert

	Miss call of SIM1
	Miss call of SIM2
	Battery Status
	Open Bluetooth
	Open multipurpose stopwatch

## 2.2 Battery

## 2.3 Connect Network

### 2.3.1 SIM card

Insert a SIM card before you use a phone. The SIM card is offer by Network operator.

The all network information is stored in SIM card, and the phonebook information's information also stored in SIM card. So you must avoid touch the metal face of the SIM card, keep it away from electricity and magnetism. If the SIM card is broke, the handset can not be natural use.

**Warning:** Before inserting or removing the SIM card, you must turn OFF the mobile phone. Do not insert or remove the SIM card while the phone is connected to an external power source, as this could otherwise damage the SIM card.

## 2.4 Characteristic functions

### 2.5 Making call

In idle status, press number key to input call number, press right soft key to delete mistake input, long time

pressing right soft key to delete all input. Press left soft key to save the call number to phone or SIM card. Press dial key to make a call. In call status, you can direct press number key to input number if you need. For making international calls you should press the “0” Key until the international phone prefix “+” appears on the screen (“+” instead of 00).

## **2.6 Emergency calls**

### **2.7 Answer a call**

### **2.8 End a call**

### **2.9 Call History**

### **2.10 Call option**

**Note:** with “\*” icon menu does exist at special status.

## **3 Function menu use**

### **3.1 Phone book**

You can save fields information to SIM card or phone, this information include linkman name, phone number, home number, company name, Email, company telephone, fax number, birthday, ring tone select, call group. In idle status, press right soft key to “phone book”, view the call log.

**Note:** the handset max store 250 pcs telephone records, SIM card memory base on itself capability.

## **3.2 Messages**

In idle menu, interface, press navigation key to select “Messages” to enter submenu, include SMS, EMS, Chat, and Voice Mail Server Broadcast Message.

### **3.2.1 SMS**

Send a text messages by Service Center. The handset support EMS and you can insert picture, animation, melody, ring tone in a message.

### **3.2.2 MMS**

About MMS

MMS that is multimedia message service, it best peculiarity is to support multimedia, can send text, picture, sound and other multimedia format information.

MMS need network operator support. Contact your service provider for more details on billing and settings.

### **3.2.3 Chat**

This function is based on SMS.

### **3.2.4 Voice mail server**

This will automatically redirect incoming calls to the Voice Mail centre when you cannot accept a call so that the caller can leave a message on the Voice Mail system of service network. Dial the Voice Mail box number to access your Voice Mail.

### **3.2.5 Broadcast message**

## **3.3 Audio player**

Enter audio player menu, press up/down navigation

key to control music to play/pause and stop. Press left/right navigation key to switch music, press “\*” and “#” key to adjust volume. Press left soft key enter play list, press “option” submenu pop-up as follow,

### **3.4 Dial**

### **3.5 Multimedia**

In main menu status, press navigation key to find multimedia menu, press left soft key to enter, or press multimedia icon to enter this menu.

#### **3.5.1 Camera**

Use this function, take a photo or video by yourself loves and store in the order file of memory card or store in you phone.

#### **3.5.2 Image viewer**

Press left soft key to operate your selected photo, you can View, Browse Style, Send, Rename, Delete, Delete All Files your photo, also you can change them storage position.

Sort you image. Press up/down navigation key to browse.

#### **3.5.3 Video recorder**

The handset supports video recorder function.

#### **3.5.4 Sound recorder**

This function shows current recorder list which are stored in phone, support recorder AMR and WAV format file. If your phone has no recorder, the screen will prompt



[Empty Folder].

### **3.5.5 Schedule FM record**

This handset supporting schedule FM record function (also can be use in power off status). You can set multi schedule FM record.

### **3.5.6 Slide show**

You can select a folder which stored in memory card or phone, and play this folder's picture.

### **3.6 File manager**

### **3.7 Video player**

In this menu can view video files list and press left soft key to Play, Send, Rename, Delete, Delete All Files of them, also you can change them storage position. Sort, Bluetooth set.

### **3.8 FM radio**

The phone support radio function, insert an earphone to open this function. In the radio menu, press up/down navigation key to on or off search channel function, press left/right navigation key to search channel auto until searched a channel. Close the auto search function, you could search a channel what you want by manually. Press once left or right navigation key to add or minis 0.1MHz.

### **3.9 Alarm**

### **3.10 Calendar**

Press the up/down and right/left navigation key to

switch to edit the date, time.

### **3.11 Games**

The handset provides games for your disport.

### **3.12 Organizer**

### **3.13 Call center**

Press navigation key to this function, then press left soft key enter it submenu.

#### **3.13.1 Call history**

##### **■ Missed calls**

In this function, will display missed call list. Select a missed call record, press left soft key to view it detail information,

#### **3.13.2 General call settings**

### **3.14 Services**

#### **3.14.1 STK\***

STK (SIM Took Kit) is a value-added service provided by your network operator. Your phone supports this service. This function is ineffective in case the SIM card / network dose not support. For more detailed information, please contact service provider.

#### **3.14.2 WAP**

The handset support WAP service. This function need network supports. For more detailed information, please contact service provider.

### **3.14.3 Data Account**

### **3.15 Settings**

In Setting, You can set your phone as your preference.

#### **3.15.1 Dual SIM settings**

This function include Dual SIM open, only SIM1 open, only SIM2 open and flight mode submenu.

#### **3.15.2 Touching screen calibration**

Enter touching screen calibration to calibrate your touching pen to exacter.

#### **3.15.3 Phone setup**

##### ■ Time and date

##### ➤ Set Home City

Set the home city time as your phone time.

##### ➤ Set Time

You can set a Date and time from 2000-2030

##### ➤ Set Time Format

You can set 12 hours or 24 hours format.

##### ■ Schedule power

The handset has four powers On/Off time to edit.

**Note:** the function can not be used if the power on/off time was set the same.

#### **3.15.4 Network setup**

#### **3.15.5 Security setup**

Set your security information to protect your phone and SIM card against unauthorized use.

#### **3.15.6 Restore factory**

Enter the Phone-on password (default number is

0000. This feature will reset the phone to the same settings as those configured at the factory.

### **3.16 User profiles**

You can set phone's profiles according to your need. User profiles include general, meeting, outdoor, indoor, headset and Bluetooth.

### **3.17 Torch light button**

You can open the torch light by pressing the OK BUTTON for long time. If the torch light has been opened by pressing the side button, it will not make any difference by pressing the OK BUTTON.

## **4 Text Input mode**

### **4.1 Summarization**

### **4.2 Keypad definition**

Left soft key: confirm

Right soft key: return or clear

Navigation key: move cursor or select wait input character.

0~9: input number or letter.

# Key: switch input mode

\* Key: In input status, press it to open symbol input box.

EX1: press this key to view SIM2 call records.

EX2: press this key to camera menu.

Wrong type battery replacement will cause explosion dangerous.

Be sure to follow the instructions to deal with the finished battery.

## **FCC RF EXPOSURE INFORMATION:**

**WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## **BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back/front of the phone kept 5mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 5mm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## **NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### **RF Exposure Information:**

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2A13SAZMOBILEA1 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum  $-10^{\circ}\text{C}$  or over maximum  $50^{\circ}\text{C}$ , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.