

Size: opened 180x75mm folded 60x75mm

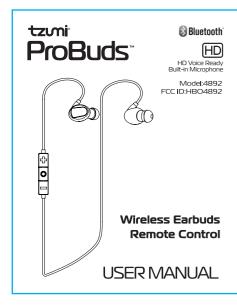

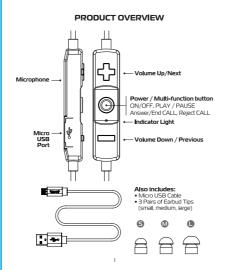

CHARGING EARBUDS

These earbuds have an internal rechargeable battery. The battery must be fully charged prior to use. Charging time is approximately 2 hrs. Your earbuds cannot be used while charging.

Red light ON - Charging Blue light ON - Fully charged Via Computer Using the provided Micro USB cable, connect the Earbuds into the USB port on the computer or laptop. Via AC Adapter Wall Charger Using the provided Micro USB into the USB nort to AC

PAIRING EARBUDS TO BLUETOOTH DEVICE

Make sure the Bluetooth function is available on your electronic device Specific pairing procedures may vary slightly depending on the device. For detailed information, please refer to your device's User Guide,

- If no device connection is made within 10 minutes of the earbuds being switched on, the earbuds will automatically switch off to save power.
- After successful pairing, devices will remember each other. When turn on no pairing will be needed next time. If reconnection failed, please follow Bluetooth step-by-step pairing instructions to reconnect.

PAIRING TO BLUETOOTH DEVICE (CONTINUED):

- 1. Keep the distance between the device and the tzumi earbuds within 3 feet (for pairing only).
- 2. Press and hold the multi-function button on remote control until you hear prompt "Power on" or see blue lights flashing, keep holding up to 4 seconds until you hear prompt "Pairing" or see red and blue lights flashing. Activate the Bluetooth function on your device to search for Bluetooth devices. Look for and select "Tzumi-Earbuds" in device list displayed. You will hear voice prompt "Connected."
- 3. After successful pairing, the blue lights will flash quickly every few seconds. Earbuds are now ready for use.

EARBUDS CONTROLS

Listening to Music Play/Pause/Resume music ______ Short Press (1) Go to next song _____ Press and hold ♣ Go to previous song _____ Press and hold ___ Restart same song _____ Press and hold = within 5 seconds of song (by IOS system or some APP) ___ Press and hold o for 4 seconds Power ON/OFF_____ Activate/Stop SIRI during Standby/Music playing _____ Press O for 1 second

Changing the Volume

When needed, adjust the volume by pressing the keys 라(up) or (down) during a call or when listening to music.

EARBUDS CONTROLS

Making and receiving calls

Quickly press (🔘 ANSWER/END CALL _____ REJECT CALL ____ ____ Press/hold (for 2 seconds Press (2 times During a call, switch from earbud to phone - Press/hold (for 1 second & back to earbud from phone .

DURING INCOMING CALL MUTE / UNMUTE

Press ♀ and — simultaneously

TO CLEAR ANY PREVIOUS PAIRING

Press all 3 of these buttons 🔘 🗀 🖒 simultaneously for 4 seconds

INCOMING CALL DURING A CALL

_____ Press/hold O for 1 second REJECT new cal Answer new call, END current call Quickly press (()) Answer new call, KEEP current call KEEP new call to switch to call on HOLD______ Press () 2 times END new call, return to call on HOLD _____Quickly Press (

FAQ / Troubleshooting

Q: Why do earbuds not turn on?

A: Make sure earbuds are fully charged before using it for the first time. Your device can not be turned on if battery level is very low. Refer to Charging the Earbuds section of the manual

Q: There is no sound during playback.

 A: Check the Bluetooth connection between the earbuds and your device
 If connection is not established, please reconnect again and adjust volume level as needed.

IMPORTANT SAFEGUARDS

- . Do not use this unit for anything other than its intended use. Keep the unit away from heat source, direct sunlight, humidity.
- water or any other liquid.
- . Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a
- qualified electrician. Improper repairs may place the user at serious risk
- Keen the unit out of reach of children.
- This unit is not a toy.

BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.

<u>vı</u>	Bluetooth Version	, Bluetooth V4.1
\leq	Distance Battery Frequency	up to 49ft (15m)
$\stackrel{\smile}{\sim}$	Battery	Rechargeable Lithium Battery: 80mAh
Æ	Frequency	. 20Hz-20kHz
		. Up to 300 hours
		. 2 hours
ü	Talk Time	up to 6 hours
٣	Play Time	up to 5 hours (maximum volume)
v	Input	.80mAh / 5V

ProBuds tzumi inc. Bluetooth Clip Earbuds. Distributed by tzumi inc. NY, NY, 10016. @Copyright 2017 tzumi inc. Ali Rights Reserved. Made in China. @Copyright 2017 Bluetooth SIG, Inc. The Bluetooth® word mark and loops are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by tzumi* is under license. Other trademarks and trade names are those of their respective owners. Subject to change without prior notice.

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:HBO4892

7