

**onn.**<sup>TM</sup>

Portable FM Boombox  
Quick Start Guide

What's in the Box?	Check to make sure you have everything below
1 USB-C power cable 1 Quick Start Guide 1 Portable FM Boombox	

Get to Know Your Boombox	
	<ol style="list-style-type: none"> <li>Power</li> <li>Bluetooth</li> <li>Source</li> <li>Play/Pause</li> <li>LED display</li> <li>Volume down/ Previous track</li> <li>Volume up/ Next track</li> <li>Light</li> <li>Bass boost</li> <li>Microphone</li> <li>USB-C charging port</li> <li>USB Emergency power charging port</li> <li>Reset</li> <li>3.5 mm AUX input</li> </ol>

Let's Get Started!	01
Press & hold  to power on/off the speaker.	
Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place. Recommend to charge it at least one time for every half year, in order to keep the battery performing well. Empty battery too long may result in fewer hours of usage between charges.	
Built-in Rechargeable Li-ion Battery: 7.4V 4000mAh	

Connect Your Boombox	02
Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Boombox".	

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

Need help? We're here for you every day 7 a.m. - 9 p.m. CST. 1-888-516-2630 Give us a call!

100097809  
94346005048

Want Your Party to the Next Level?	03
<ol style="list-style-type: none"> <li>Power on both speakers, press &amp; hold  of each speaker to enter Party Sync Mode.</li> <li>When two speakers paired, you will hear "left channel, right channel". The left channel is the master.</li> <li>Use your mobile device to pair with the master speaker by Bluetooth pairing method.</li> <li>Press &amp; hold  again to disconnect Party Sync Mode.</li> </ol>	

Wired Use? Yes!	04
<ol style="list-style-type: none"> <li>Use a 3.5 mm AUX cable (not included) to connect the speaker to your audio source.</li> <li>Press Play on your audio source device and adjust the volume on the speaker.</li> </ol> <p>* In AUX mode,  can't be used, you can ONLY control it by your audio source device.</p>	

Listen to Your Favorite Radios	05
<ol style="list-style-type: none"> <li>Press  to select FM mode.</li> <li>Press  or  to scan and select FM stations step by step.</li> <li>Press &amp; hold  or  to scan and seek (jump to the next available station).</li> <li>In FM Mode, press and hold  to assign the current station to a preset number, the LED screen will show "SAV" to show the station has been saved. The preset number can be changed by pressing  and .</li> <li>In FM Mode, press  repeatedly to select a saved radio station.</li> </ol>	

Take a Phone Call	06
<ol style="list-style-type: none"> <li>Press  once to answer an incoming call, press  again to hang up the call.</li> <li>Press &amp; hold  to reject an incoming call.</li> </ol> <p>* Press  twice to wake up the voice assistant of your device.</p>	

Want More Lighting Effects?	07
<ol style="list-style-type: none"> <li>Press &amp; hold  to turn on/off the light.</li> <li>Quick press  to switch 6 between different multicolor LED lightings.</li> </ol> <p>More tips:                      - Always keep the charging port dry before connecting power.                      - To ensure it is waterproof, always close the protective cover securely.</p>	

Charge Your Boombox	08
<ol style="list-style-type: none"> <li>USB-A charging port with emergency power can charge your other smart devices (5V=2.1A output), when this Boombox is powered on.</li> <li>Connect USB-C to 5V power adapter. Recommend to use the in-box power cable to charge your Boombox.</li> <li>The battery icon will flash when charging, and all battery segments will be lit and remain solid white once fully charged.</li> </ol>	

- ICE
- Black
- VERMILLION

封面

80mm



onn.™

**FCC Statement**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference.  
 (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

封底

**Party sync mode compatible model list**

100008734	AAAGRY100006897
100008736	AAAAQU100006897
100094812	AAAGRY100006902
100094813	AAAGRY100006896
100097809	



**ISED Statement**

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:  
 1. This device may not cause interference.  
 2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

**ISED Statement**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

<b>F&amp;D 奋达科技</b>		料号	12.005.0004.06399		尺寸(mm)	展开尺寸: 240x80, 成型尺寸: 80x80		环保要求	说明书类说明: 1、公差 (mm): 0<a≤50 (+0.3/-0.2), 50<a≤150 (+1/-0.5), >150 (+1.5/-1)。有特殊要求的, 按标示公差执行。 2、要求图文清晰可辨, 内容完整, 折叠正确, 无重影, 墨尿、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	BS2326户外音箱项目	产品型号	BS2326		材质	80g书纸		■RoHS2.0、Reach	
日期	20221205	部件名称	安规手册		页码P数	6/p		<input type="checkbox"/> 包装指令94/62/EC	
包装工程师	李小明	平面工程师	李莹		颜色	单色印刷		<input type="checkbox"/> 大豆油墨印刷	
设计版本	变更提出人	变更原因		是否有可参考	表面处理	<input checked="" type="checkbox"/> 无 <input type="checkbox"/> 光油 <input type="checkbox"/> 哑油 <input type="checkbox"/> 水性光油 <input type="checkbox"/> 水性哑油 <input type="checkbox"/> UV油 <input type="checkbox"/> 光胶 <input type="checkbox"/> 哑膜 <input type="checkbox"/> 防刮花哑膜		<input type="checkbox"/> 无氯漂白工艺	
A0				<input type="checkbox"/> 刀模 <input type="checkbox"/> 颜色 <input checked="" type="checkbox"/> 无	工艺	<input checked="" type="checkbox"/> 无 <input type="checkbox"/> 烫金 <input type="checkbox"/> 烫银 <input type="checkbox"/> 击凸 <input type="checkbox"/> 击凹 <input type="checkbox"/> 压网 <input type="checkbox"/> 局部UV <input type="checkbox"/> 其它		<input type="checkbox"/> 粘合剂为非石油基	
				<input type="checkbox"/> 有:	条码要求	<input checked="" type="checkbox"/> 无条码 <input type="checkbox"/> 有条码 (清晰易扫描)		<input type="checkbox"/> 油墨中禁止使用矿物油 (法国)	
					装订方式	<input checked="" type="checkbox"/> 风琴折 <input type="checkbox"/> 包心折 <input type="checkbox"/> 骑马钉 <input type="checkbox"/> 胶装 <input type="checkbox"/> 线装 <input type="checkbox"/> 其它		■TPCH (美国)	