

onn.TM

Wireless Party Speaker
Quick Start Guide

What's in the Box?

Check to make sure you have everything below

 
1 AC charging cable

1 Quick Start Guide


1 Wireless Party Speaker





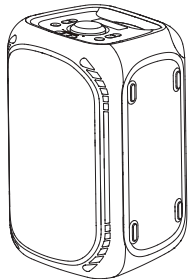

Get to Know Your Party Speaker

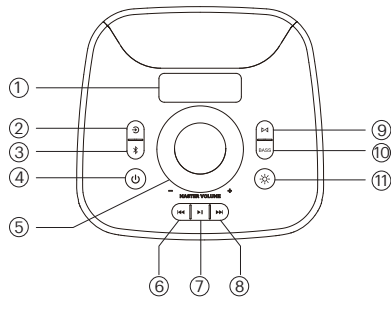 

1. LED screen

2. Source

3. Bluetooth

4. Power

5. Master volume control

6. Previous track

7. Play/Pause

 
8. Next track

9. Party sync

10. Bass boost

11. Party light

Get to Know Your Party Speaker

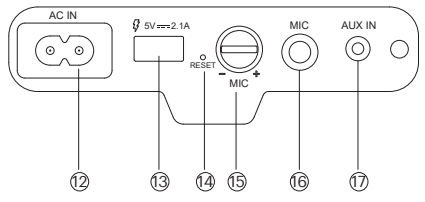

12. AC charging port

13. USB-A - charging port for mobile devices

14. Reset

15. Microphone volume control

16. 1/4" Microphone/ Guitar port

17. 3.5 mm AUX input

Let's Get Started!

01

 
Press & hold  to power on/off the speaker.




Press & Hold



Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Speaker M".

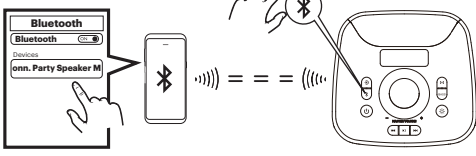

 We'd love to hear from you. Scan with your Walmart app and let us know what you think.

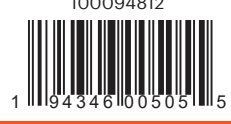

100094812
1 194 346 00505 5

Need help? We're here for you every day

7 a.m. - 9 p.m. CST. 1-888-516-2630 Give us a call!

Want Your Party to the Next Level?

 
02

1. If you have 2 **onn.** wireless party speakers, power on both speakers, press  of each speaker to enter Party Sync Mode.

2. When two speakers are connected, you will hear "left channel, right channel".

3. Use your mobile device to pair with the party speaker through Bluetooth wireless technology.

4. Press  again to disconnect Party Sync Mode.

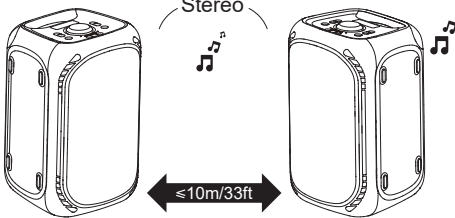


Stereo
≤10m/33ft

Wired Use? Yes!

03

1. Use a 3.5mm Aux cable (not included) to connect the speaker to your audio source.

 2. In AUX mode,    can't be controlled on speaker, you can ONLY control them by your audio source device.

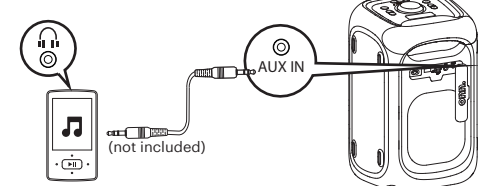

(not included)

Listen to Your Favorite Radio Stations

04

1. Press  to select FM mode.

2. Press  or  to scan and select FM stations channel by channel.

3. Press & hold  or  to seek (jump to the next available station).

4. In FM Mode, press and hold  to assign a preset number for the current station, and press  to save, the LED screen will show "SAV" which means the station has been saved successfully. The preset number can be changed by pressing  and .

5. In FM Mode, press  repeatedly to select a preset radio station.



FM

Want to Sing a Song?

05



 
(not included)

1. Connect your Microphone or Guitar to the MIC/Guitar port.

2. Play Guitar through the speaker.

3. Singing through Microphone when music playing in Bluetooth/AUX/FM mode.

4. Adjust the Microphone or Guitar volume through MIC knob.

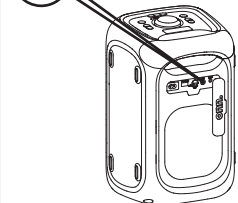

Want More Lighting Effects?

06

 
1. Press & hold  to turn on/off the party light.

2. Quick press  to switch between 6 different multicolor lightings.

Tips:

- Always keep the charging port dry before connecting to AC power.

- To ensure it is waterproof, always close the protective cover securely.

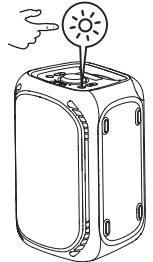



Charge Your Party Speaker

07

The battery icon will flash when charging, it will remain solid white once fully charged.

More tips:

- USB-A charging port with emergency power can charge your other smart devices (5V=2.1A output), when this Party Speaker is powered on.

- Do not sit on the speaker to avoid possible damages.

- Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place.

- Recommend to charge it at least one time for every 6 months, in order to keep the battery performing well. A prolonged empty battery may result in fewer hours of usage between charges.



December 06, 2022_V1

字体: Graphik Regular
正文字号: 不小于8PT

Black



ICE



VERMILLION



		料号	12.005.0004.06405		尺寸(mm)	展开尺寸480X80mm, 成型尺寸80X80mm			环保要求	说明书类说明: 1、公差 (mm): 0<a≤50 (+0.3/-0.2), 50<a≤150 (+1/-0.5), >150 (+1.5/-1。有特殊要求的, 按标示公差执行。 2、要求图文清晰可辨,内容完整,折叠正确,无重影,墨屎、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	22年WMPA2322户外音箱		产品型号	PA2322	材质	128g铜版纸			■RoHS2.0、Reach	
日期	20221209		部件名称	说明书	页码P数	6页 (12P)			□包装指令94/62/EC	
包装工程师	金沛		平面工程师	黄敏慧	颜色	黑色+2专			□大豆油墨印刷	
设计版本	变更提出人	变更原因		是否有可参考	表面处理	□无 □光油 □哑油 □水性光油 □水性哑油 □UV油 □光胶 □哑膜 □防刮花哑膜			□无氯漂白工艺	
A0				□刀模	■颜色	工艺			□粘合剂为非石油基	
				□无		条码要求			□油墨中禁止使用矿物油 (法国)	
				■有: 12.005.0004.005200		装订方式			■风琴折 □包心折 □骑马钉 □胶装 □线装 □其它	□TPCH (美国)

80mm

80mm



LEGAL & COMPLIANCE

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

☐Reorient or relocate the receiving antenna.

☐Increase the separation between the equipment and receiver.

☐Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

☐Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and ISED Canada License-exempt RSS Standard(s). Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.

2. Keep these instructions – The safety and operating instructions should be retained for future reference.

3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions – All operating and use instructions should be followed.

5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding plug. Apolarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.

Party sync mode compatible model list

100008734	AAAGRY100006897
100008736	AAAAQU100006897
100094812	AAAGRY100006902
100094813	AAAGRY100006896
100097809	

IMPORTANT SAFETY INSTRUCTIONS

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug the apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Do not install this equipment in a confined or built-in space such as a book case or similar unit, and maintain well-ventilated conditions. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, tablecloths, curtains, etc.

16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

17. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



IMPORTANT SAFETY INSTRUCTIONS

19.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



CAUTION

RISK OF ELECTRIC SHOCK

DO NOT OPEN



20. The equipment shall be used at maximum 35 degree C ambient temperature.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION:

Risk of explosion if the battery is replaced by an incorrect type

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);

- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

 奋达科技		料号		尺寸(mm)	展开尺寸：240x80，成型尺寸：80x80	环保要求	说明书类说明： 1、公差（mm）：0<a≤50（+0.3/-0.2），50<a≤150（+1/-0.5），>150（+1.5/-1。有特殊要求的，按标示公差执行。 2、要求图文清晰可辨，内容完整，折叠正确，无重影，墨屎、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。		
项目名称	22年WMPA2322户外音箱	产品型号	PA2322(美国版)	材质	80g书纸	■RoHS2.0、Reach			
日期	20221124	部件名称	安规手册	页码P数	4页（8P）	□包装指令94/62/EC			
包装工程师	吴凉新	平面工程师	黄敏慧	颜色		□大豆油墨印刷			
设计版本	变更提出人	变更原因		是否有可参考	表面处理	□无氯漂白工艺			
A0				☐ 刀模 ☒ 颜色	工艺	□粘合剂为非石油基			
				☐ 无	条码要求	☐ 油墨中禁止使用矿物油（法国）			
				☒ 有：12.005.0004.03800	装订方式	□TPCH（美国）			
					表面处理	■无 ☐ 光油 ☐ 哑油 ☐ 水性光油 ☐ 水性哑油 ☐ UV油 ☐ 光胶 ☐ 哑膜 ☐ 防刮花哑膜			
					工艺	■无 ☐ 烫金 ☐ 烫银 ☐ 击凸 ☐ 击凹 ☐ 压网 ☐ 局部UV ☐ 其它			
					条码要求	■无条码 ☐ 有条码（清晰易扫描）			
					装订方式	■风琴折 ☐ 包心折 ☐ 骑马钉 ☐ 胶装 ☐ 线装 ☐ 其它			

版本：A/4