



What's in the Box?	Check to make sure you have everything below
<ul style="list-style-type: none"> 1 AC charging cable 1 Quick Start Guide 1 Wireless Party Speaker 	

Get to Know Your Wireless Party Speaker	
<ul style="list-style-type: none"> 1. LED Display 2. Source 3. Bluetooth / Party sync 4. Power 5. Master volume control 6. Previous track 7. Play / Pause 8. Next track 9. Wall light 10. Bass boost 	<ul style="list-style-type: none"> 11. Light 12. 3.5 mm AUX input 13. Reset 14. USB Emergency power port 15. AC charging port 16. Microphone volume control 17. Guitar volume control 18. 1/4" Guitar port 19. 1/4" Microphone port

Get to Know Your Wireless Party Speaker
<p>Pole-mounting (not included)</p>
<p>Tips:</p> <ul style="list-style-type: none"> - Installation must be done by qualified persons using safe rigging standards. - The installer is responsible for proper selection and use of mounting hardware, to properly and safely pole-mount the speakers. - Always follow instruction and precaution advice from speaker stand manufacturer.

Let's Get Started!	O1
<p>The battery icon will flash when charging, and all battery segments will be lit and remain solid white once fully charged.</p> <p>Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place. Recommend to charge it at least one time for every half year, in order to keep the battery performing well. Empty battery too long may result in fewer hours of usage between charges.</p> <p>Built-in Rechargeable Li-ion Battery: 14.8V 2500mAh</p>	

Connect Your Wireless Party Speaker	O2
<p>Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Speaker L".</p>	<p>PLACEMENT</p> <p>Caution: Do not sit or lean on the speaker or push it sideways to avoid tip-over and possible damages. Place the speaker on a flat, stable surface and ensure that the rubber feet side is down.</p>

Want Your Party to the Next Level?	O3
<ol style="list-style-type: none"> 1. Power on both speakers, press & hold of each speaker to enter Party Sync Mode. 2. When two speakers paired, you will hear left channel, right channel. The left channel is the master. 3. Use your mobile device to pair with the master speaker by Bluetooth pairing method. 4. Press & hold again to disconnect Party Sync Mode. 	<p>Stereo</p> <p>10m</p>

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

100094813

Need help? We're here for you every day 7 a.m. - 9 p.m. CST. 1-888-516-2630 Give us a call!

Wired Use? Yes!	O4
<ol style="list-style-type: none"> 1. Use a 3.5 mm AUX cable (not included) to connect the speaker to your audio source. 2. In AUX mode, can't be used, you can ONLY control them by your audio source device. 	

Listen to Your Favorite Radios	O5
<ol style="list-style-type: none"> 1. Press to select FM mode. 2. Press or to scan and select FM stations step by step. 3. Press & hold to seek (jump to the next available station). 4. In FM Mode, press and hold to assign the current station to a preset number, the LED screen will show "SAV" to show the station has been saved. The preset number can be changed by pressing and . 5. In FM Mode, press repeatedly to select a saved radio station. 	

Want to Sing A Song?	O6
<ol style="list-style-type: none"> 1. Connect your Microphone (not included) or Guitar (not included) to the MIC or GUITAR port. 2. Play Guitar through the speaker. 3. Sing along with the Microphone when music played on Bluetooth/AUX-/FM mode. 4. Rotate the MIC or GUITAR knob to adjust the Microphone or Guitar volume. 	

Want More Lighting Effects?	O7
<ol style="list-style-type: none"> 1. Press & hold to turn on/off the light. 2. Press once to turn on/off the light effect. 3. Quick press to switch between 6 different multicolor LED lightings. 	

Charge Your Device	O8
<p>USB-A charging port with emergency power can charge your other smart devices (5V=2.1A output), when this Wireless Party Speaker is powered on.</p>	

But Wait ... There's More!
<ul style="list-style-type: none"> - Do not sit or lean on the speaker or push it sideways to avoid tip-over and possible damages. - Place the speaker on a flat, stable surface and ensure that the rubber feet side is down. - Always keep the charging port dry before connecting AC power. - To ensure it is waterproof, always close the protective cover securely.
<p>November 23, 2022_V1</p>

Font:
Graphik Regular

ICE

VERMILLION



Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by SHENZHEN FENDA TECHNOLOGY CO., LTD.

may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a Minimum distance of 20cm between the radiator and any part of your body.