

**UNIVERSAL BLUETOOTH WIRELESS STEREO
SPEAKER**



USER MANUAL

SMPS-665

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS
SPEAKER AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SMPS-665

Serial Number: _____

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions.
2. Keep these instructions
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments / accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.

11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
13. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
14. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
15. Caution marking and nameplate are located on back of product.

IMPORTANT NOTES

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibrations.
- Dusty, humid or moist places.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

PRODUCT FEATURES

The SMPS-665 is a Bluetooth stereo speaker with the following features:

- Wireless playback of music from your Bluetooth enabled device via the Bluetooth connection.
- Hands-free Bluetooth Speakerphone
- Up to 33 feet (10 meters) operating range.
- Auxiliary input jack to play music from your iPod or digital audio player.
- Digital volume control for Bluetooth enabled device.

GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all the accessories from the gift box. Please verify that you have all the following accessories before recycling the gift box.


- User manual
- Audio Cable
- AC Adaptor Input :AC 100V-240V 50/60Hz
 Output :DC 9V 2000mA. center-positive

POWER SOURCE

This unit operates on an external AC adaptor rated at DC 9V / 2000mA (included). Do not attempt to operate the unit from any other power source. You could cause damage to the unit and void your warranty.


CONNECTING THE AC ADAPTOR

1. Insert the plug located at the end of the AC adaptor wire into the **DC input Jack** on the back of the unit.
2. Insert the AC Adaptor plug into a power outlet rated at 120V AC ~ 60Hz.

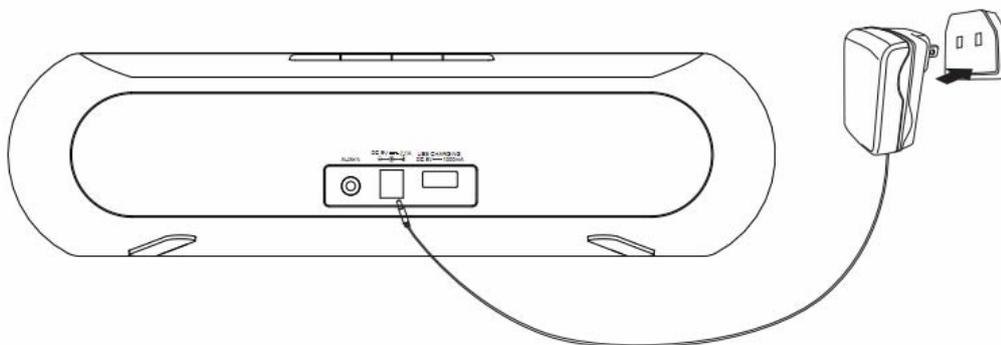


NOTE: This unit is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

LOCATION OF CONTROLS

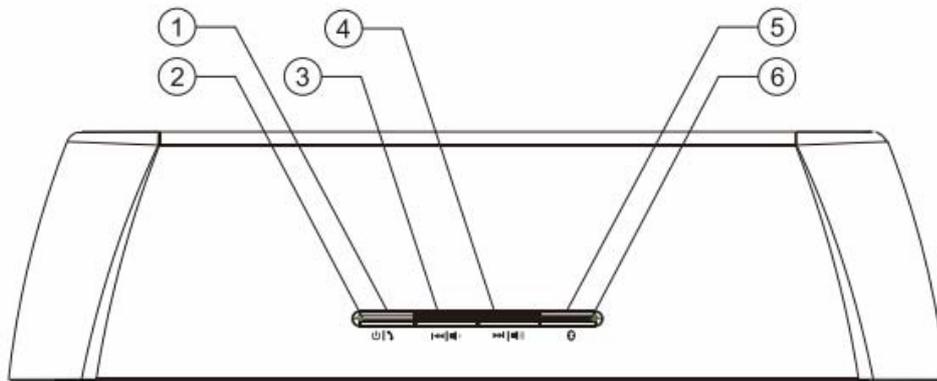

1. **Power On/Off**  / **Phone**  **Button**
2. **Power Indicator**
3. **Volume -**  / **Skip Backward**  **Button**
4. **Volume +**  / **Skip Forward**  **Button**
5. **Bluetooth**  **Button**
6. **Bluetooth Status Indicator**

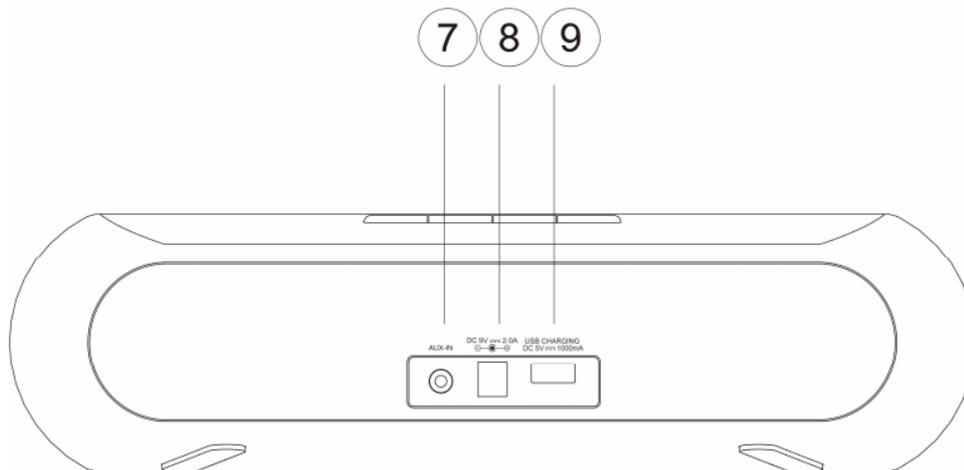

7. **AUX-IN Jack**
8. **DC Input Jack**
9. **USB Charging Port**

TURNING THE SMPS-665 POWER ON/OFF

1. In power off mode, press and hold the **Power On/Off Button**  for 4-5 seconds to turn the unit ON. The **Power indicator** goes on and the sound is heard.
2. To turn the unit OFF, press and hold the **Power On/Off Button**  for 4-5 seconds to turn the unit OFF. The **Power** and the **Bluetooth status indicator** both go off.

OPERATING THE UNIT

Pairing (linking) a Bluetooth enabled cell phone or other Bluetooth enabled device to the speaker

1. If the SMPS-665 has never been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the SMPS-665 with your Bluetooth device.
 - Turn the SMPS-665 On. Press and hold the **Bluetooth**  **Button**. A short beep tone is heard and the **Bluetooth Status Indicator** will flash rapidly, the SMPS-665 is now ready to pair (link) with your Bluetooth device.
 - Turn on the Bluetooth function of your Bluetooth device and enable the search

- or scan function to find the SMPS-665.
 - Select "SMPS-665" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) the SMPS-665 with your device.
 - After successfully pairing (linking) the Bluetooth enabled device, a short beep tone is heard and the **Bluetooth indicator** remain lit.
2. After turning on the SMPS-665, a tone will be heard and the unit will search for the last paired device. The **Bluetooth Status Indicator** will flash blue. If the SMPS-665 finds the last paired Bluetooth device, a beep is heard and the **Bluetooth Status Indicator** will stop flashing and remain lit.
 3. After successfully pairing (linking), you can begin playing music from your Bluetooth enabled device wirelessly to the speaker.
 4. Press the **Volume +**  / **Volume -**  **Button** on the speaker to adjust to the desired volume level.
 5. If you want to pair with another Bluetooth device, repeat steps 1 to 4 above.

Notes:

1. Refer to manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
2. If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
3. If you are pairing (linking) your computer to the SMPS-665 using Bluetooth, you may need to set the speaker as your computer's default sound device.
4. You may have problems with the Bluetooth relinking if you turn the SMPS-665 off, and then on again right away. Please wait 10 seconds after turning the SMPS-665 off before turning it on again.

Using the SMPS-665 as a Hands-free Bluetooth Speakerphone

1. Link your cell phone to the SMPS-665 via Bluetooth as described above.
2. When receiving an incoming call on your cell phone, tap the **Phone**  **Button** on the speaker to switch the incoming call from cell phone to the SMPS-665. A short beep tone will be heard confirming the call is being answered. Complete your call using the built-in microphone and speaker on the SMPS-665.
3. Press the **Volume +**  / **Volume -**  **Button** on the SMPS-665 to obtain the desired sound level.
4. To end the call, just tap the **Phone**  **Button** on the SMPS-665 again. A short beep sound will be heard and the call will end. If you are playing music from your cell phone to the SMPS-665 before answering the call, the music will automatically resume playing when you hang up.
5. To ignore an incoming call, simply press and hold the **Phone**  **Button** on the speaker for about 2 seconds, a short beep tone will be heard and the call will be rejected.

Hang up with the SMPS-665

A quick press on the **Phone**  **Button** will end the call in progress. A short beep tone will be heard from the speaker confirming the call has ended.

Redialing the last number with the speaker

The speaker will automatically redial the last number you have dialed by tapping the speaker **Phone**  **Button** twice and long beep will heard.

Note: This feature is phone dependent.

Re-linking to the cell phone

If your cell phone is already paired (linked) with the SMPS-665, but became unlinked even with both Bluetooth devices turned on. You can re-link them by:

1. Turning off the SMPS-665 and then turn it on again to re-link your cell phone. After

turning the SMPS-665 ON, the sound will be heard. The SMPS-665 will search the last paired device. If the SMPS-665 finds & successfully pairs with the last paired device, the beep will be heard.

2. You can also re-link the SMPS-665 by using Bluetooth operation of your cell phone. Please refer to operation manual of your cell phone for more information.

PLAYING MUSIC USING THE AUXILIARY INPUT

The SMPS-665 features an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players, iPhones or iPods (except iPod shuffle 3rd gen) and listen to them your through the speakers.

1. Use the audio cable (included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end into the **AUX-IN Jack** on the SMPS-665 and the other end of the cable into the Headphone Jack of your external audio device.
3. Turn on your external audio device.
4. Adjust the volume control on the external device to obtain the desired volume level.
5. Operate all other functions on external device as usual.

NOTE:

1. The volume controls on the SMPS-665 will not adjust the volume level when in AUX-IN mode. We recommend connecting the Headphone jack of your external device to the Aux-in jack on the SMPS-665. Then use the volume control on the connected device to adjust the volume level.
2. If you connect the Line-Out Jack of your external device to the SMPS-665 Aux-in jack, then the audio level will be very high and you will not be able to adjust the volume level.
3. If you use **AUX IN** function when playing Bluetooth audio, the Bluetooth audio will be temporarily disconnected when the audio cable is plugged in. Unplugging the audio cable will resume Bluetooth audio.
4. Turn the SMPS-665 off when you finish listening. Don't forget to switch off the power of your external device as well.

CHARGING YOUR SMART PHONE OR PORTABLE DEVICE

This unit features a USB port for charging your portable device (iPod, iPhone, Android phone, etc.) when used with the USB charging cord that came with your device.

1. Plug one end of the USB cable (not included) into the **USB Charging Port** located on the back of the SMPS-665. Plug the other end of the cord into the device you wish to charge.
2. Observe the battery charge indicator on your device and the charging will start immediately.
3. Unplug the cable when your device is charged.

CAUTION:

Before charging, please refer to the user manual of the device you wish to charge to make sure the charging current requested does not exceed 1A (1000mA) of charging current. Overloading the charge circuit may damage the SMPS-665 and void the warranty.

Note:

1. Some smart phones and portable devices use proprietary USB connections and circuitry, so they may not charge when plugged into the USB port. This includes older Apple iPod models including the iPod classic. Please refer to your device user manual before you attempt to charge them.
2. It is normal for the SMPS-665 to be warm while the USB port is in use and charging your smart phone or portable device.

3. Do not charge your smart phone over 12 hours continuously. Remove your smart phone from the charger once it is charged.

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the cabinet becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
The unit does not respond (no power).	AC Adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
No Sound	The SMPS-665 is not linked with the Bluetooth enabled device.	Go through "Operating the Unit" process to link the speaker.
	The SMPS-665 placement out of range.	Relocate the SMPS-665 within Bluetooth operating range (30 feet).
	Volume set too low.	Press the Volume +  Button to turn the sound level up. (Not available in Aux-in mode)
Sound is distorted.	Volume level is set too high.	Decrease the volume of the speaker.
	Sound source is distorted.	If the source sound file is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD. If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. Also try turning bass boost OFF or change the EQ setting.
Unit gets warm after	This is normal.	Turn the speaker off for a period of time or lower the volume.

extended play at high volume.		
-------------------------------	--	--

SPECIFICATIONS

Power Requirement

AC-DC adaptor:

Input: AC 120V, 60Hz

Main unit

DC input: DC9V/2000mA



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register

receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$30.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link on the website below to enter your information.
<http://www.spectraintl.com/wform.htm>

1012

Printed in China