 


OMAKER

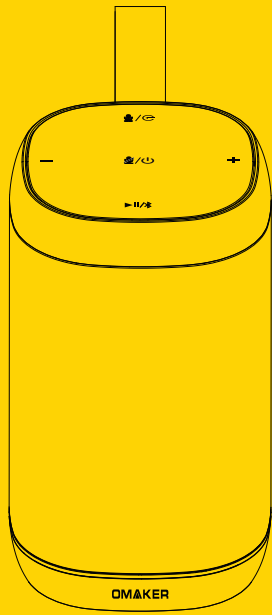

WiFi Speaker W55  
User manual

Thank you for choosing Omaker WoW WiFi speaker. Please read this manual carefully before using and keep it for future reference.

**Important Safety Instructions**

Keep the unit away from high temperature and high humidity. Do not disassemble, modify or repair the unit.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the users is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:




1) this device may not cause harmful interference, and

2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in mobile exposure condition without restriction.

FCC ID:HBOW55

   **Overview**

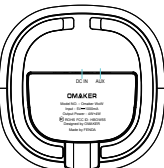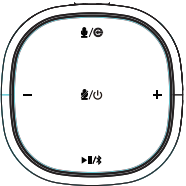

**Specification**

Power Output: 8W=4W+4W  
Frequency Response: 50Hz-20KHz  
Power Input: 5V~1A  
Separation: ≥40dB  
S/N Ratio: ≥75dB  
Dimension: 180\*104\*104 MM

**Package Contents**


 
OMaker WoW WiFi Speaker x 1  
Audio Signal Cable x 1  
USB Cable x 1  
Power Adapter x 1  
User Manual x 1  
Warranty Card x 1  
Spotify Flyer x 1



**Operation Guidance**

1.Introduction to WoW  
OMaker WoW is a next-generation intelligent speaker with Alexa, Amazon's cloud-based voice service. WoW helps you to connect to online music, podcasts, and news with our built-in system.


2. Quick Guide

2.1 Setup the System:

  
2.1.1 Power On/Off  :  
Long press " " button to turn on/off WoW.  
The light ring will be lit up.

2.1.2 Select the Signal Source  :  
Long press " " button to select different

 **Audio input mode:**  
WiFi Mode (White Light)  
Bluetooth Mode (Blue Light)  
TF Card Mode (Green Light)  
AUX Mode (Purple Light)

2.1.3 Connect WoW to the Internet:  
I.Switch WoW to WiFi mode.The light ring will flash swiftly when in WiFi connecting mode;  
II. Open Omaker App on your phone;  
III. Search WiFi and input password of your router;  
IV. long press " " button on WoW to connect the router.  
V.Connection Successful. The light ring will light still when connection is successful, the light ring will flash slowly if the connection is fail.

 2.2 Forward / Backward / Volume  
In all modes, short press the volume button to reduce volume, short press the volume up button to increase volume. In WiFi / Bluetooth / TF Card Modes, long press the volume down button to backward the song, long press the volume up button to forward the song.

2.3 TF Card Mode  
Insert TF card to enable this function. Press " " button, begin to play music

**3. About Alexa**


Alexa is Amazon's cloud-based voice service that is always getting smarter. Alexa provides capabilities or Skills that enables customers to interact with devices in a more intuitive way using just your voice.

Just ask Alexa to answer questions, play music, read the news, get weather and traffic reports, add things to your to-do list, control your smart home, and more.The more you use Alexa, the more it adapts to your speech patterns, vocabulary, and preferences with new features continually being added.


**Enable Alexa:**  
Download Omaker App and connect your WoW speaker to internet. Then please log in your Amazon Account in Omaker App to enable the Alexa function.

**4. About Our App**  
Visit Apple Store (Or Google Play, Amazon Appstore), search "OMaker" to down the App. Using our App, you may play various online music and radio. For each different music resources, you should register an account to enable the connection.

**Online Resources**  
You may explore various music services in the Omaker App:  
Amazon Music  
Spotify  
iHeart Radio  
Tuneln  
Find out more in our App.....



Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates



You'll need Spotify Premium to use Connect, see details overleaf.  
1. Add your new device to the same wifi network as your phone, tablet or PC (see product user instructions for details).  
2. Open the Spotify app on your phone, tablet or PC, and play any song.

3. If you're using the app on a phone - tap the song image in the bottom left of the screen. For tablet and PC move to step 4.

4. Tap the Connect icon

5. Pick your device from the list. If you can't see it, just check it's connected to the same wifi network as your phone, tablet or PC. All done! Happy listening.

\*Spotify music service is only available in Spotify App. Alexa Voice service is not available in the Spotify App.

Licenses  
The Spotify Software is subject to third party licenses found here: [www.spotify.com/connect/third-party-licenses](http://www.spotify.com/connect/third-party-licenses).

**Warranty**  
OMaker offers a 18-month warranty, effective from the date of purchase. For detailed information, please contact our customer service with your Amazon order ID at [support@eomaker.com](mailto:support@eomaker.com). We will reply within 24 hours.

**Things to Try with Alexa**

**Just Ask "Alexa, [Insert Below]"**

 
<b>Play Music</b> Play some Jazz from Amazon Music. Shuffle my dinner party playlist. Play my [artist name] station. Add this to my library.	<b>News, Weather &amp; Traffic</b> Play my Flash Briefing. What's the weather? How is my commute looking?
<b>Discover &amp; Buy Music</b> What song is this? Buy this song.	<b>Shop Amazon</b> Order laundry detergent. Buy more paper towels.
<b>Kindle EBooks and Audiobooks</b> Read my Kindle Book. Read [Book Name] from Audible.	<b>Alarms &amp; Timers</b> Set an alarm for 7 a.m. Set a timer for 45 minutes.
<b>Questions &amp; Answers</b> Tell me a joke. Wikiped: Abraham Lincoln. What is the time in Moscow?	<b>Use These Anytime</b> Volume five. Repeat that.

**Sports**  
What's the score of the [team name] game?  
When do the [team name] play next?

To explore more Things to Try with Alexa go to [www.amazon.com/MeetAlexa](http://www.amazon.com/MeetAlexa) and download the Amazon Alexa App on iOS or Android

we'd love to hear from you!

[www.eomaker.com](http://www.eomaker.com)

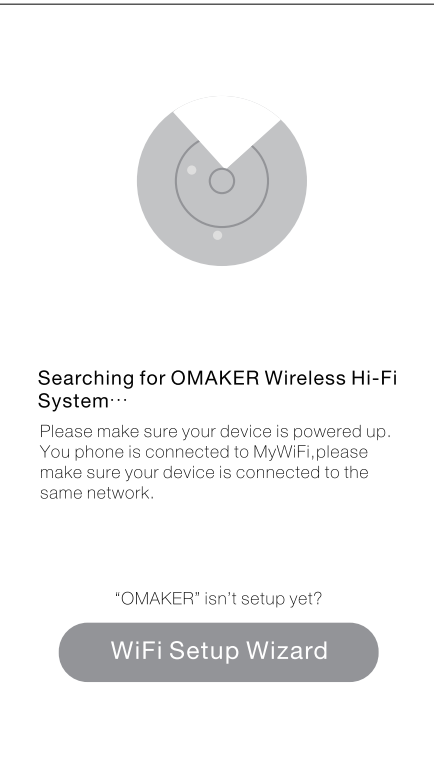


Searching for OMAKER Wireless Hi-Fi System...

Please make sure your device is powered up. You phone is connected to MyWiFi,please make sure your device is connected to the same network.

\*OMAKER\* isn't setup yet?

 WiFi Setup Wizard

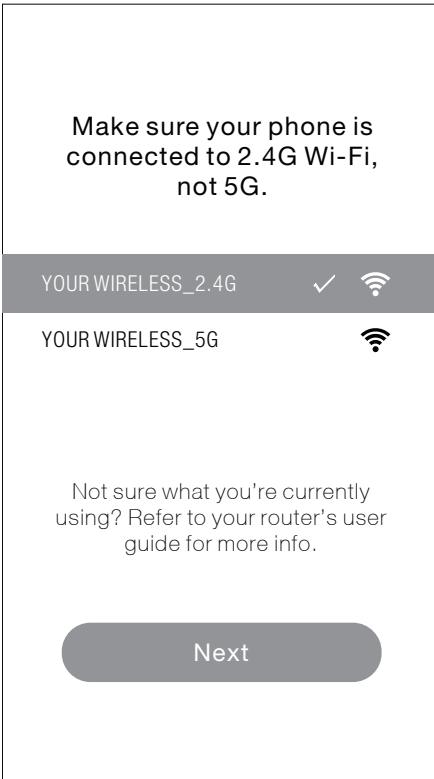


Make sure your phone is connected to 2.4G Wi-Fi, not 5G.

YOUR WIRELESS\_2\_4G

YOUR WIRELESS\_5G

Not sure what you're currently using? Refer to your router's user guide for more info.

 Next

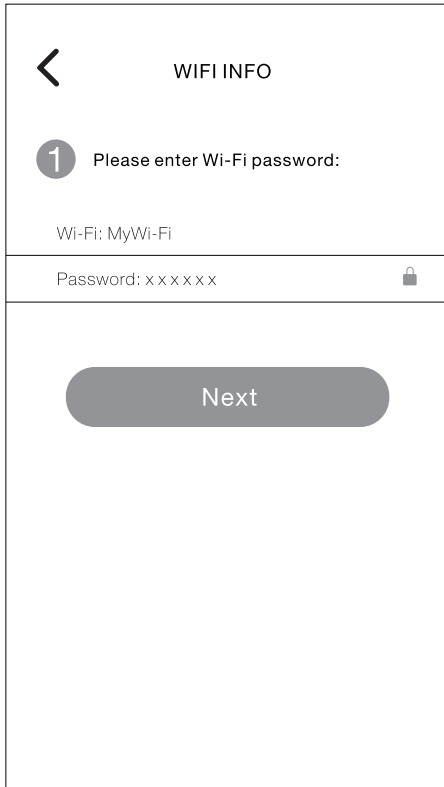


WIFI INFO

1 Please enter Wi-Fi password:


Wi-Fi: MyWi-Fi


Password: x x x x x x

 Next

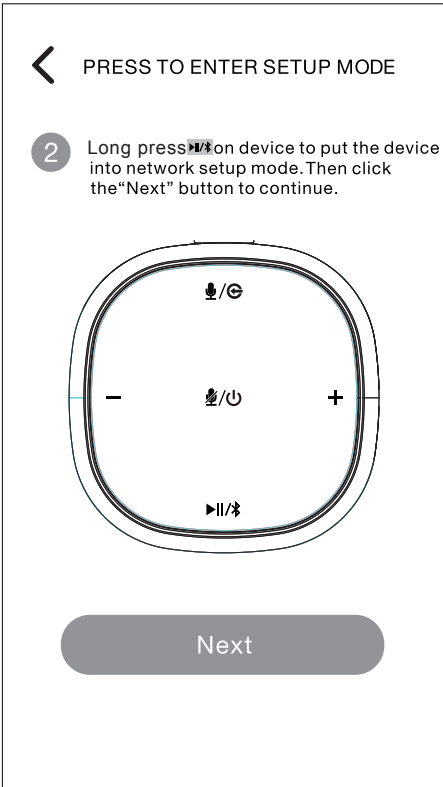


PRESS TO ENTER SETUP MODE

  2 Long press  on device to put the device into network setup mode. Then click the "Next" button to continue.

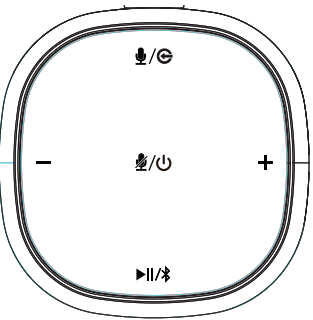


Next

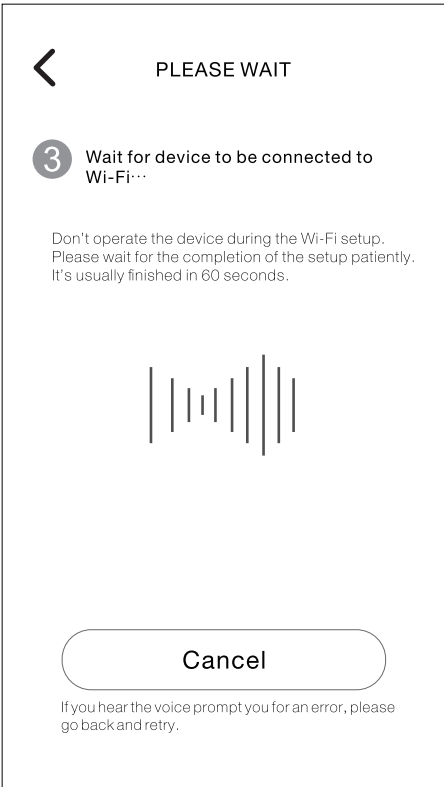 

PLEASE WAIT

 
3 Wait for device to be connected to Wi-Fi...

Don't operate the device during the Wi-Fi setup. Please wait for the completion of the setup patiently. It's usually finished in 60 seconds.



Cancel

If you hear the voice prompt you for an error, please go back and retry.

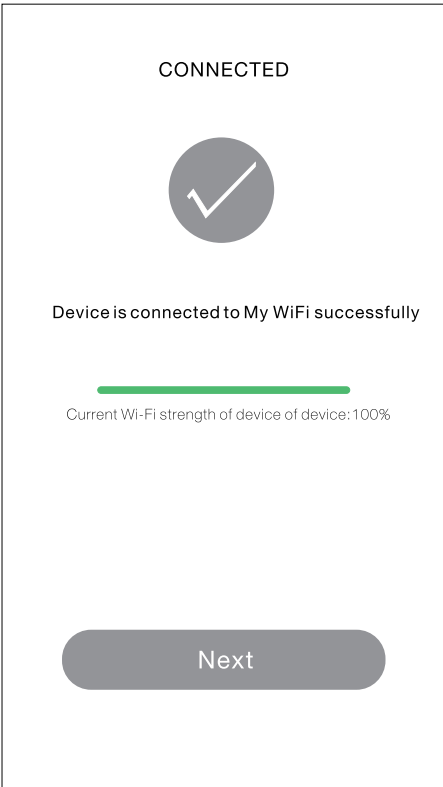



CONNECTED

Device is connected to My WiFi successfully

Current Wi-Fi strength of device of device:100%

 Next

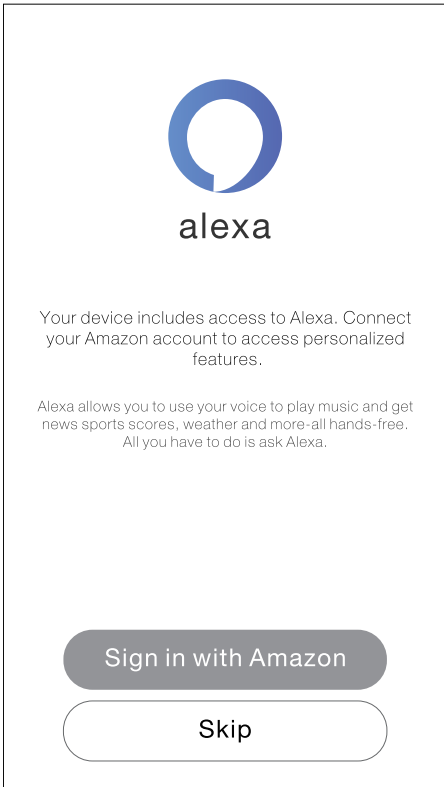




alexa

Your device includes access to Alexa. Connect your Amazon account to access personalized features.

Alexa allows you to use your voice to play music and get news sports scores, weather and more all hands-free. All you have to do is ask Alexa.

Sign in with Amazon

 Skip

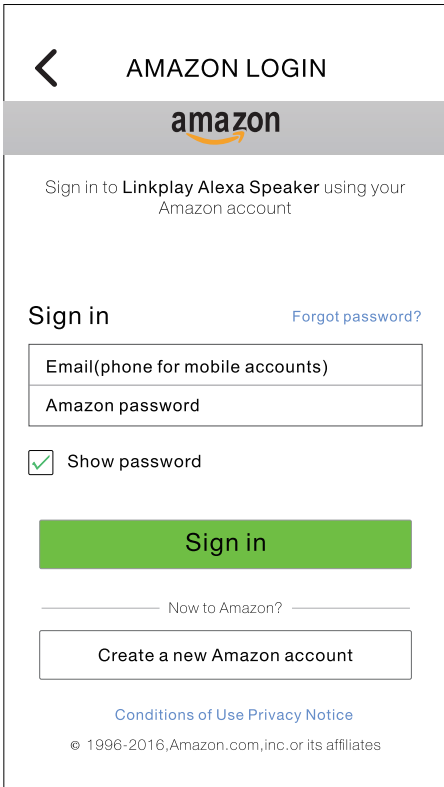

AMAZON LOGIN

amazon

Sign in to Linkplay Alexa Speaker using your Amazon account

Sign in [Forgot password?](#)

Email(phone for mobile accounts)

Amazon password

☒ Show password

Sign in

Now to Amazon?

Create a new Amazon account

[Conditions of Use](#) [Privacy Notice](#)

© 1996-2016 Amazon.com, Inc. or its affiliates

展开尺寸	580X154MM
成型尺寸	72.5X154MM
材质要求	105g铜版纸
印刷要求	单黑正反印刷
工艺要求	无处理
页码数(页)	折页