

USER GUIDE

Bluetooth Speaker



Wirelessly
stream your music
over Bluetooth


FCC ID: 2AAOSFLS-BASS

Package Contents

- LFS portable speaker
- Micro USB to USB-A
- 3.5mm AUX cable
- User manual

Overview

Front view

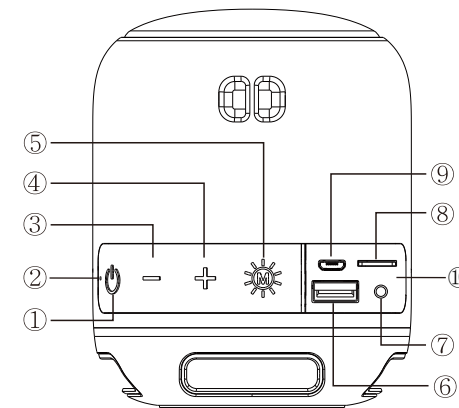

Functionality

- 1. Power button:** Long press to turn on / off the speaker
Press once to play and pause when play music
Hands-free: Press once to Answer / Hang up
Pressing & hold to reject a call
- 2. LED indicator**
- 3. “ — ” button:** Press once to decrease volume
Press & hold to revert to previous song
- 4. “ + ” button:** Press once to increase volume
Press & hold to skip song
- 5. Mode Switch button:** Press once to switch LED light
Press twice to switch Bluetooth mode or TF card mode
Long press to pair / unpair TWS
- 6. USB-A port**
- 7. 3.5mm AUX input**
- 8. TF/Micro SD card slot**
- 9. Micro USB charging port**
- 10. Attention:** Open the silicon cover from the right!

Specifcations

Model No.	LFS-Bass	Input Voltage	DC 5V / 1A
Water Res.	IPX5 Rating	Net Weight	278 g
Dimensions	74 x 74 x 91 mm		

LED Indicators

	Indicator	Status
⚡	RED	Charging
	LED OFF	Fully Charged
BT	Flashing Blue	Pairing Mode
	Steady Blue	Connected
	Slow Blue Flash	Music Playing

How to charge your LFS Bass

1. Connect the USB connector from the cable to the “**LFS-Bass**”
2. Plug the USB connector to a USB compatible wall charger with 1A current output (DC5V).
Red LED light will appear to indicate charging.
3. Red LED light will turn off once the “**LFS-Bass**” is fully charged.
4. It is recommended that you charge for 10 minutes before use if you haven't used it in over a week.

Playing audio from your Bluetooth device

1. Press & hold the power button on the silicone of the speaker for 3 seconds.
2. Go into the Bluetooth source and search for Bluetooth
3. Connect to “**LFS-Bass**” Once connected simply play your music.

True Wireless Stereo (TWS)

Under bluetooth mode

To Pair - Press & hold **M** button for 3 seconds
To Unpair - Press & hold **M** button for 3 seconds

1. To pair two “**LFS-Bass**” together, first ensure both speakers are turned on.
2. Press & hold **M** button for 3 seconds on either speaker to enter TWS Pairing mode.
Pairing should take a few seconds. (The first connection may takes longer time)
3. Once pairing is successful, you will hear a short prompt sound. Connect to “**LFS-Bass**”, Once connected you can simply play music via two speakers sync.
4. To disconnect TWS, Press & hold **M** button for 3 seconds on either speaker. You will hear a short prompt sound.

Note:

1. This function is based on two speaker using together, only one speaker cannot realize it, you need to buy two.

2. If you have paired one speaker before, there will be a “**LFS-Bass**” show on your bluetooth setting. If you cannot connect the twin speaker “**LFS-Bass**”, please delete the earlier “**LFS-Bass**” on your bluetooth setting, then Press & hold **M** button for 3 seconds on either speaker to connect two speakers, after connected, turn off the bluetooth on your mobile device and turn on again, search for new “**LFS-Bass**” on the bluetooth setting and make a pair, then the mobile device will connect with twin speaker, the twin speaker can play music sync.

3. When twin speaker connected with the mobile device, Press & hold **M** button for 3 seconds on either speaker to disconnect the twin speaker, one speaker will remain playing music, this speaker is the host speaker, another one without playing music is the vice speaker, if you want to connect again, please Press & hold **M** button for 3 seconds of the host speaker to reconnect the twin speaker. Press vice speaker cannot reconnect.

Playing audio from your wired device

Power the speaker on, connect a 3.5mm audio cable to the AUX IN port. Connect the other end of your audio cable to your device and play.

Playing audio from your Micro SD card or USB stick

Power the speaker on, plug your card into the TF/Micro SD card slot. The music will then play.

Troubleshooting

Failed connection

1. Make sure the speaker is fully charged.
2. Make sure the speaker is in Bluetooth mode.
3. Make sure your Bluetooth device is available for connection.
4. Make sure the speaker is in range (10m) of your Bluetooth device.
5. If your device has connected with other speaker or this speaker has connected with other device, please disconnect them first, and then reconnect with your device with this speaker.

Note: If your device isn't paired to your speaker within 3 minutes, turn the speaker off & on again (ensure Bluetooth mode is re-activated).

Device successfully paired, but no audio
Make sure the Bluetooth device's volume is set to a reasonable listening level.

Device is connected with AUX cable, but no audio
1. Make sure the AUX cable is correctly plugged in to the speaker and the device.

2. Make sure the device's volume is set to a reasonable listening level.

SD Card or USB stick is plugged in, but no audio
Make sure the card or stick is correctly plugged in to the speaker.

Music quality low

1. Ensure there are not any solid obstacles between the device and speaker.
2. View the distance between the device and the speaker has not exceeded effective Bluetooth connection range of 8-12 metres.
3. Check the playback device or whether the speaker is in a low power state.

Safety Warnings

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speaker in a stable position to avoid fall and cause damage or personal injury.
2. Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.
3. Do not keep close to any heat source (such as radiators, heating tools, stoves or other heat generating sources)
4. Please send professional maintenance staff to repair for any damage related reasons.
5. Before wiping with a dry cloth to clean the speaker, ensure the speaker is turned fully off and is not connected to a power outlet.
6. Health considerations, please adjust the sound to a suitable level to avoid damage to hearing.
7. Only charge with devices rated and marked with 5V to avoid damage to the speaker.

8. To keep the warranty valid, never try to repair the product yourself.
9. Beware of rough handling as this can break the internal circuit boards and the mechanics.
10. All LFS products are tested comprehensively to ensure quality.
11. Children should be supervised to ensure that they do not play with this product.

Aftersale service

If there is any problem with the product, please contact us directly for all customer services.

1. 30-Day Money Back Guarantee for ANY Reason
For 30days after the date of purchase, return your undamaged LFS product and receive a full refund for ANY reason.

2. 12-Month Limited Product Warranty for quality -related issues. For 12 months after the date of purchase. We take care of all quality-related issues with a replacement or a limited refund.
Reminder: Be sure to use your product as directed.

Limitations

Our return and exchange service is limited to all purchases made from LFS-Direct. If you purchased through a different retailer of other stores, please contact them directly.

<p>FCC Warning:</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">• Reorient or relocate the receiving antenna.• Increase the separation between the equipment and receiver.• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.• Consult the dealer or an experienced radio/TV technician for help. <p>Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.</p>	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
---	---