WIRELESS SPEAKER INSTRUCTION

INSTRUCTIONS

- 1. Switch "OFF/ON" for power off when "OFF" and power on when "ON".
- 2. Press 🗊 momentarily to pause or play or BT Telephone, press and hold it to switch Bluetooth / TF / Line in / USB drive
- 3. Press + momentarily, it turns to next song, press and hold it to volume up
- 4. Press momentarily, it turns to previous song, press and hold it to volume down

BASIC FEATURES

- · Bluetooth play
- Playing songs in MP3 format which saved in TF card / USB drive
 Support PC / iPod / iPhone / iPad / MP3 / MP4 and another smartphones and
- tablet by connecting with 3.5 mm jack
- Bluetooth telephone function

TROUBLE SHOOTING

- Failed to read TF card / USB drive : formatting TF card / USB drive or change the format of song to MP3
- No audio input when connecting with other devices: Press and hold $\widehat{_{H}}$ button to switch it or shut down to reboot it
- Cannot turn on the speaker: check if the speaker does not have power, if no power, charge it first
- Cannot connect with Bluetooth devices: check if speaker connected with the third Bluetooth device, if yes, disconnect it first, if still can not connect, reboot it and try again

CHARGING VIA USB CABLE

- · Switch ON, and connect it with the PC via USB cable. It could play songs during charging
- Switch OFF, and connect it with PC for charging only
- USB cable is not for the use of data transferring

FM082

SPECIFICATIONS

- Built-in Li-Ion Battery; 1200 mA.
- USB charging Voltage: 5V DC
- Speaker: 4 ohm 3W *2
- · Frequency Range: 100 Hz-18KHz
- S/N: ≥ 82 ± 2 DB
- Distortion ≤ 0.5%
- Size: 16*7*7.5 (H) cm

INTERFACES

- Micro USB Port: Use charging cable to connect the speaker with USB power adaptor or PC for charging
- Line in Port: Use audio cable to connect the speaker with your music device, such as MP3, cell and PC, the speaker will change to AUX mode automatically and play music directly
- · Microphone: Hands-free telephone available only for the Bluetooth mode
- TF card slot: Plug TF card into the card slot and the speaker will enter into TF card mode
- USB Port: Plug USBdrive into the USB port, and the speaker will enter into USB drive model automatically
- LED indicator:
 - D Indicator:
 o Blue: Bluetooth connected or playing music
 o Red: charging status (red indicator off when Fully charged)

CAUTIONS

- · Keep out of reach of children
- Never knock the speaker
- · Keep it away from fire, water, high and low temperature
- Never block speakers nets
- Never open it by yourself
 Do not charge it for too long time in case of damage to the battery, 3 hours is
- the best charging time





Made In China

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.