

INSTRUCTIONS

CHARGING

1. To charge the Snap-on® Portable Bluetooth® Speaker/Device Charger, plug the provided USB cord into a USB outlet.
2. The LED (green) will illuminate while charging and then turn solid when fully charged.
3. The Portable Bluetooth Speaker/Device Charger will require a few hours to fully charge the internal battery.

WIRELESS CONNECTION

1. Move the ON/OFF switch on your Portable Bluetooth Speaker/Device Charger to the "ON" position (See Figure 1) on page 3. The (blue) light will flash and the Portable Bluetooth Speaker/Device Charger will announce "Power on" and "Bluetooth Mode".
2. Turn on the Bluetooth wireless capability on your device to make it discoverable to the Portable Bluetooth Speaker/Device Charger. See your device's instructions to add or setup a Bluetooth wireless device. The Bluetooth wireless option can be found in the "Settings" or "Tools" on most devices.
3. A menu will come up on your device showing the recognized Bluetooth wireless device. Tap on the "Portable BT Speaker" option and the Portable Bluetooth Speaker/Device Charger will acknowledge by saying "Connecting".
4. While the speaker is scanning to pair with your device, the (blue) light on the back of the speaker will continue to flash. Once your device is discovered, the (blue) light will remain solid.
5. You can now arrow back on your device to your applications menu where your music is to start playing your song selections.

AUX CONNECTION

 
1. Connect the Portable Bluetooth Speaker/Device Charger to any device with a headphone jack or line out using the included 3.5mm audio cable.
2. The LED (blue) will illuminate indicating a connection.
3. The Portable Bluetooth Speaker/Device Charger will require a few hours to fully charge the internal battery.

WARRANTY

Thank you for purchasing the Snap-on® Portable Bluetooth® Speaker/Device Charger. Your Snap-on® Portable Bluetooth® Speaker/Device Charger is guaranteed against defects in material and workmanship for the period of one year (1 – year) from the date of purchase. This warranty is limited to the original purchaser of product. Product found to be defective during that period will be repaired or replaced by 4J International Inc. at no charge. Warranty does not cover any shipping damage. This warranty is void if it's determined that unauthorized parties have attempted repairs or alterations of any nature. 4J International Inc. disclaims any liability for other incurred damages resulting from product defects. Any expenses in the removal and re-installation of products are not covered by this warranty. 4J International's total liability will not exceed the purchase price of the product. A Return Goods Authorization number (RGA) is required before shipping product back to 4J International Inc. Please call 1-262-656-1956 to obtain an RGA number or email us at customerservice@4j-intl.com.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by Snap-on Incorporated and 4J International is under license. Other trademarks and trade names are those of their respective owners.

Snap-on and Wrench "S" are trademarks of Snap-on Incorporated and used under license.
©Snap-on Incorporated 2017. Designed and Engineered in USA. Made in China.
2017 4J International Inc. All rights reserved.
4J International Inc., 7001-30th Avenue, Kenosha, WI 53142



4

Snap-on®



SSX17P113

BT Speaker/Device Charger

SNAPON.COM

SNAPON.COM

WARNING

Please read and follow these safety warnings and cautions before using your **Portable Bluetooth® Speaker/Device Charger** to ensure your personal safety and to prevent property damage.

FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Portable Bluetooth Speaker/Device Charger to liquid, moisture, humidity or rain.
- Do not use the Portable Bluetooth Speaker/Device Charger near a bathtub, sink, sauna, pool or steam room. Exposure to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, microwave, incinerate, paint or insert foreign objects into the Portable Bluetooth Speaker/Device Charger. Such actions could result in electric shock.
- Clean the Portable Bluetooth Speaker/Device Charger only with a dry cloth.
- Do not expose your Portable Bluetooth Speaker/Device Charger to extremely high or low temperatures.
- Do not leave your Portable Bluetooth Speaker/Device Charger in direct sunlight for extended periods of time.
- Do not leave your Portable Bluetooth Speaker/Device Charger near open flames such as cooking burners, candles or fireplaces.
- Do not block any ventilation openings.

BATTERY/CHARGER HAZARD

- Do not dispose of your Portable Bluetooth Speaker/Device Charger in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the Portable Bluetooth Speaker/Device Charger.
- Do not attempt to disassemble the Portable Bluetooth Speaker/Device Charger or force open the built-in battery. This may result in electric shock.
- Do not charge the Portable Bluetooth Speaker/Device Charger in damp areas or in extremely high or low temperatures. This could result in electric shock.
- Do not clean the Portable Bluetooth Speaker/Device Charger when it is being charged. Always unplug the charger first before cleaning the Portable Bluetooth Speaker/Device Charger

Automobile Accident Hazard

- Do not leave or store the Portable Bluetooth Speaker/Device Charger or any of its accessories near or over your automobile's airbag because serious injury may result when an airbag deploys.

CAUTION

- Do not use abrasive cleaners on your Portable Bluetooth Speaker/Device Charger, as this will cause damage.
- Do not insert anything into your Portable Bluetooth Speaker/Device Charger unless otherwise specified in the user instructions. This could result in damaging the internal components.
- Do not attempt to repair, replace, modify or disassemble your Portable Bluetooth Speaker/Device Charger yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Portable Bluetooth Speaker/Device Charger battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your Portable Bluetooth Speaker/Device Charger. Other chargers may look similar, but using them may result in electric shock or damage the unit.
- Do not use your Portable Bluetooth Speaker/Device Charger on any aircraft.
- Observe all signs and displays that forbid any electrical device or RF radio use in designated areas.
- Dispose of your Portable Bluetooth Speaker/Device Charger in accordance with local regulations. Do not dispose of battery with regular household waste.

2

SNAPON.COM

PORTABLE BLUETOOTH® SPEAKER/DEVICE CHARGER FEATURES

- Bluetooth Speaker
- Portable power charger
- Phone, Tablets, MP3, MP4, PSP holder
- Rechargeable Lithium battery with capacity 5000Mahor 19.25Wh
- Input: 5V 1.0A
- Output: 5V 1.0A
- Input (charging) USB Port
- Capable of charging phones, tablets, MP3, MP4, PSP, Digital cameras
- Power level indicator
- Speaker Output: 6W
- AUX plug-in for MP3/MP4
- Frequency response: 20HZ – 20K HZ
- RF range: 33 feet
- Distortion: <0.5%
- Signal to Noise: ≥85±2dB
- Safety protection: OVP, OCP, OSP
- Recommended operation temperature: 0C to 35C

CONTROL FUNCTIONS (See Figure – 1)

1. ON/OFF – Power button
2. INPUT (Charging) USB Port
3. Holder for Phone, Tablets, MP3, MP4, PSP
4. AUX plug-in for MP3/MP4
5. Output: 5V 1.0A
6. Power level indicator
7. Bluetooth mode LED – (blue) indicator – During the pairing mode the LED (blue) will be flashing. When connection has been completed, LED (blue) will be solid.



Figure – 1

3

SNAPON.COM

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The distance between user and products should be no less than 20cm

