


INSTALLATION

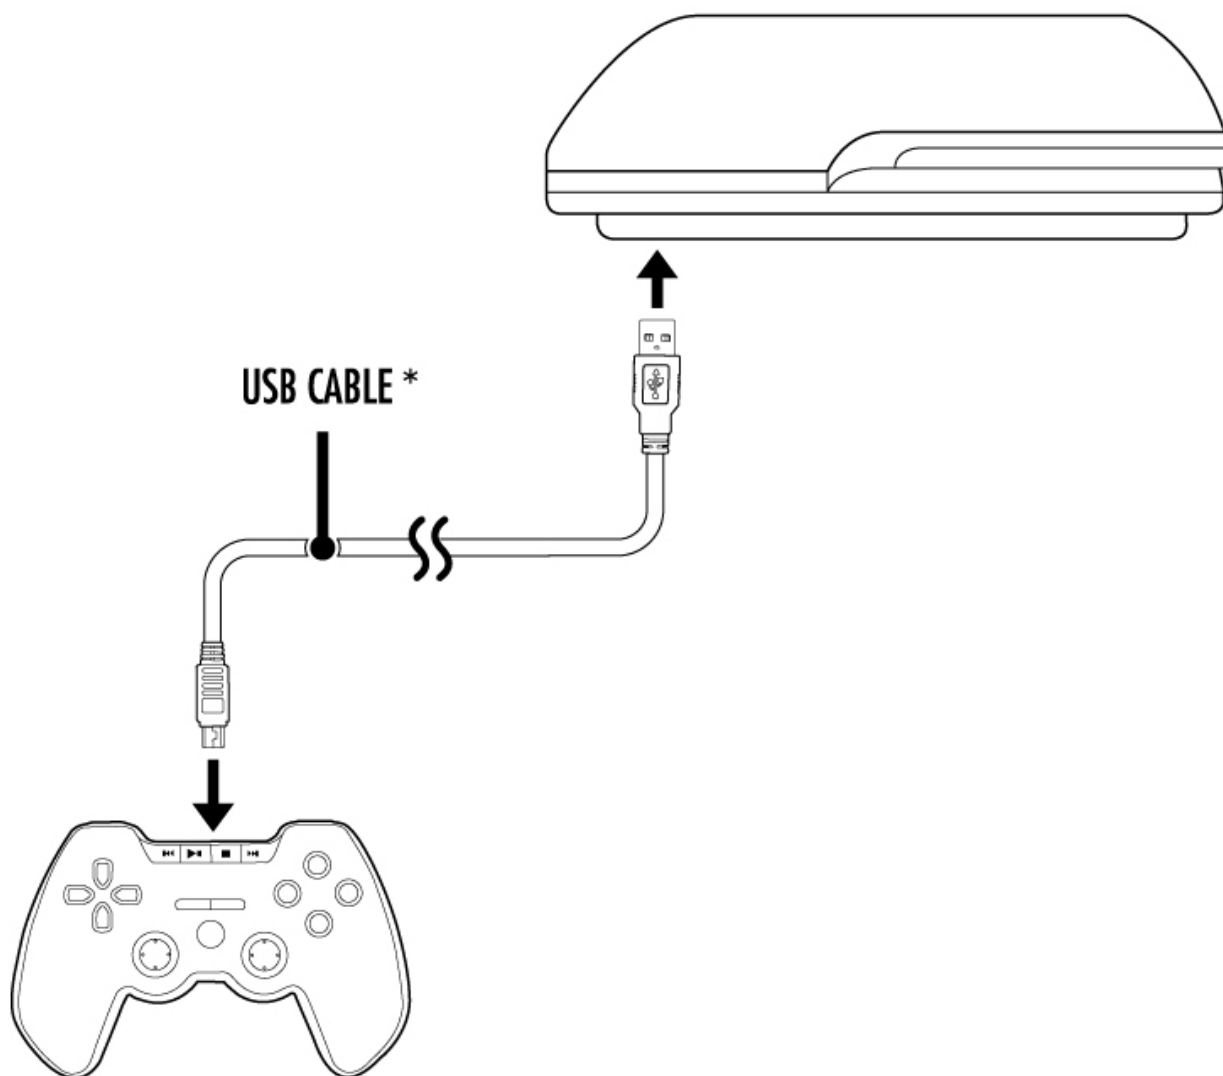

*PROVIDED WITH THE CONSOLE
FOURNI AVEC LA CONSOLE
INCLUIDO CON LA CONSOLA
MET DE CONSOLE GELEEVERT
FORNITO CON LA CONSOLE
FORNECIDO COM O SISTEMA
IM LIEFERUMFANG DER KONSOLE ENTHALTEN

English

1. Introduction

Thank you for purchasing the Controller.

Before using the controller, please read this instruction manual carefully and keep it for future reference.

2. Installing the Controller on Playtation®3

- 1- Switch on your PS3™ system.
- 2- Connect Controller to the console with the USB cable provided with your console. The 4 LEDs will flash slowly.
- 3- Press the Home button of the Controller to start the sync operation. The 4 LEDs will flash quickly. Then the LED showing the number of the controller will remain lit and the controller will be ready to use.

NOTES:

.Once the controller has been installed, Controller is identified by the PS3™ system. Simply press the Home button to active Controller, it sill automatically synchronize with the console.


.To synchronize Controller with another PS3™ system, repeat the above installation procedure.

.Controller uses Bluetooth® technology. You can simply press the Home button to swith on the PS3™ system when it is in standby mode.

For further information regarding the use of the controller, please refer to the instruction manual of your PS3™ system.

3. Multimedia functions

Controller has unique multimedia features. A built-in remote control can command the playback of Blu-Ray, DVD,MPEG,-4, CD, MP3, ATRAC™, AAC, and JPEG.

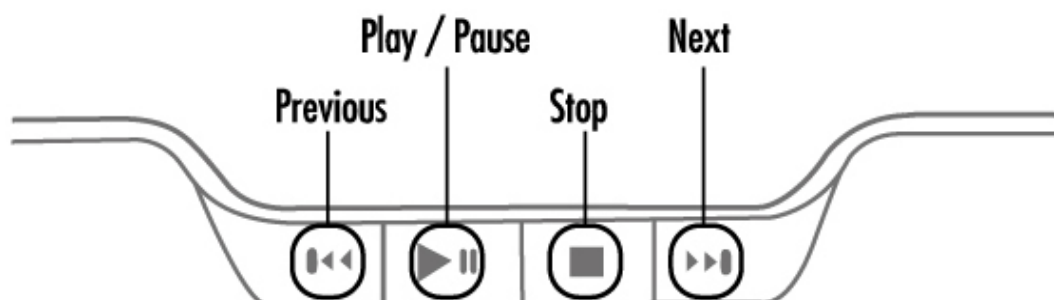

For further information regarding the use of your console as a multimedia player, please refer to the instruction manual of the PS3™ system.

4. Economy mode

To save battery life, Controller switches off automatically after 10 minutes of inactivity. Press the Home button to reactivate the controller.

5. Battery level

.Battery level indicator

Controller has a low battery level indicator. If the LED showing the number of the controller flashed it means the level is low and you must recharge the controller.

You can also press the Home button to see the battery level of Controller on-screen.

.Recharging the Controller

To recharge the battery of Controller, connect it to one of the of USB ports of your console with the recharge cable provided with your PS3™ system.

You can also recharge one or several Controllers on the Charging Station Deluxe from Subsonic™.

If the controller is active, the LED showing the number of the controller will flash quickly while being charged.

If the controller is not active, the 4 LED will flash slowly while being charged.

The controller switches off automatically once it is fully charged.

Do not charge your controller for more than 3 hours.

6. Vibration

The vibration function comes from software data. Make sure the game you are playing has been developed with this function.

The vibration function is automatic on the PS3™ system. If Controller does not vibrate on the PS3™ system, check if the vibration function is activated in the game and in the Home Menu of the PS3™ system. Make sure your PS3™ system is updated with firmware 2.0 or a higher version.

NOTE:

The Controller is not compatible with the motion sensor function of the PS3™ system.

7. Warning

-To avoid electrical incidents, make sure to keep the product in a dry place, protected from the rain or humidity.

-Do not dismantle.

-Do not insert any objects in the product as this could cause electrical incidents.

-Immediately put down the product if you feel tired or feel pain in your hands or arms while using the product. If the symptoms persist, consult your doctor.

-The vibration function of this product can aggravate wounds on your hands. Make sure to deactivate the vibration function in the Home Menu of the PS3™ system if your hands or arms are wounded.

-Take breaks during the game on a regular basis.

8. Contact and Customer Support

The Subsonic team is available if you should require more information about Controller or other products from our range of accessories for the PS3™ system.

In order to improve the user-friendliness of products we are open to any comment you would like to give us.

9. Respect the environment



■ In order to protect the environment, electric and electronic must not be discarded with household garbage. Please take them to a recycling centre.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

