



## Charging the Battery and the Handset

- Charge the battery for a minimum of 8 hours
- Charge the handset for a minimum of 2 hours

(LED indicator turns green when fully charged)

## Getting Started

OUTDOOR use only. Practice first, in a wide-open area, away from any obstacles:

1. Power ON CaddyTrek (switch is on the Control Box)
2. Position yourself to directly face the large wheels of CaddyTrek, then power on the handset.
3. Point the handset towards CaddyTrek to establish communication. You will hear two short beeps once the communication link is established.  
CaddyTrek will be in the "STAND-BY" mode with the SB LED light flashing.

## Follow mode (FL)

1. Position yourself in front of the large wheels of CaddyTrek with your back towards the caddy.
2. Clip the handset in your back pocket or on a belt as shown.
3. Press the **Follow** button (you will hear a short beep).
4. Start walking. CaddyTrek will follow at your pace.
5. When you are ready to hit a shot or putt, press the **Follow** button again or the **STOP** button to stop the caddy.



Caddy will go into Stand-By (SB) mode. You will hear one long and one short beep when CaddyTrek is switched to SB mode.

## Remote Control mode (RC)

1. Position yourself behind the large wheels of CaddyTrek with your chest facing the caddy. You must always have CaddyTrek in front of you while in Remote Control mode.
2. Hold down the **LEFT** directional button on the RC for 3 seconds. You will hear a short beep and the RC LED (Remote Control) light will turn on.
  - Press UP, DOWN, LEFT, or RIGHT directional buttons to move CaddyTrek
  - Long Press or keep pressing the UP directional button will quickly accelerate CaddyTrek to its maximum forward speed.
3. Press the STOP button to stop the caddy. CaddyTrek will remain in the RC mode.
4. Press the STOP button again will get CaddyTrek out of the Remote Control mode and into the Stand-By mode.

## Manual Push/Pull Mode

1. Make sure the caddy is on a leveled ground
2. Power off CaddyTrek and the handset
3. Push or pull CaddyTrek with the handle bar

## Folding CaddyTrek

Folding CaddyTrek is easy after you've practiced a few times. Refer to the setup photos and follow in reverse order:

- Make sure CaddyTrek is placed on leveled ground and is powered off.
- Loosen the two black knobs on the Upper Bag Support Bar, lower the handle, and tighten the two black knobs.
- Fold in the 5<sup>th</sup> wheel (pull wheel arm to the left then slide the wheel under the Control Box).
- Loosen the two red knobs on the lower frame. Release the yellow flap (lock) on the Frame Lock in the middle.
- Step on the 5<sup>th</sup> wheel bracket. Use one hand to grab the Small Wheel Bar and push it inward, while your other hand grabs the Upper Bag Support Bar and lowers it over the Small Wheels Bar. Make sure the caddy is tucked in tightly and securely. Refer to the user manual for complete details (reverse steps of the unfolding instructions shown on the opposite side of this card).
- Tighten the two red knobs.
- CaddyTrek is now ready to be picked up by the Handle and stored away.

## Precautions

- Use CaddyTrek on golf courses only. Do not operate CaddyTrek in other environments. RF interference from other environments may occur when outside of a golf course which may cause abnormal or erratic behavior of the caddy.
- DO NOT let any object or towel block or hang in front of the sensors.
- CaddyTrek will follow best when you position your body directly in front of the large wheels. Position yourself as close as possible to CaddyTrek to perform U-turns or sharp turns. Walk slowly when turning.
- Use caution when operating CaddyTrek in a confined area, on steep slopes, or side hills. Walk slowly or use Manual Mode as needed. Walk slowly and guide CaddyTrek carefully to clear hazardous areas, water bodies, bunkers, cliffs, etc. We recommend you practice, practice, practice, and after a few holes, your CaddyTrek will become your best friend!
- Do not direct CaddyTrek towards people, or other carts.
- Do not discard the original shipping carton after unpacking your CaddyTrek. Should your CaddyTrek need to be shipped for service, repacking in the original shipping carton would be needed. Keep the carton in a safe and dry place.





**CAUTION: OUTDOOR use only! Practice first, in a wide-open area, away from any obstacles and people. Avoid pinch hazards when folding and unfolding!**

Congratulations on your purchase of FTR's CaddyTrek™ - the world's most compact robotic following golf caddy! We strongly recommend that you read the user manual thoroughly (user manual is downloadable from [www.caddytrek.com](http://www.caddytrek.com)) and do a practice run of CaddyTrek in a wide-open area to get yourself familiarized with the caddy prior to using it on the golf course. A common-sense of approach to the operation and care of your CaddyTrek will ensure years of enjoyable and trouble-free golfing.




1. Place on flat surface



2. Loosen red knobs



3. Place foot under base and raise handles. Wheels will move forward.

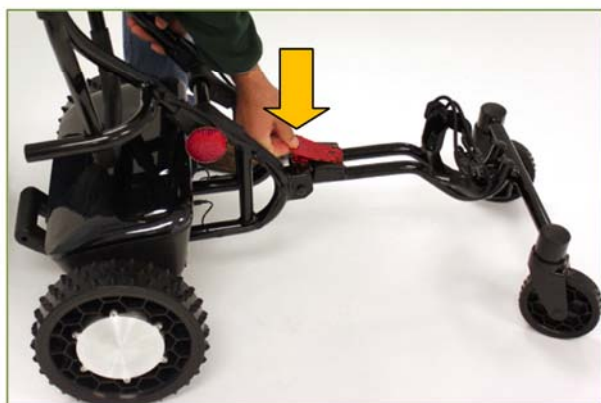

4. Push tab down to lock wheels in place



5. Loosen black knobs to position push-handle. Tighten all knobs.



6. Extend 5<sup>th</sup> wheel (optional for enhancing balance)



7. Lift battery cover



8. Insert battery and push down into place.



9. Power on the cart and handset to initialize\*



10. Clip handset to your belt, exposed, and let the CaddyTrek follow you.

\*For best results, charge battery fully and do not cover the handset with clothing; stand directly behind the CaddyTrek to initialize handset.

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.