

BluNor BM833/A are powerful, highly flexible, ultra low power Bluetooth Low Energy (BLE) modules using Nordic nRF52 SoC. With an ARMCortex<sup>TM</sup> M4(F) MCU, up to 512KB flash, 128KB RAM, embedded 2.4GHz multi-protocol transceiver, and an integrated PCB trace antenna or an u.FL for external antenna. It allows faster time to market with reduced development cost.

BM833A/AF are designed to minimize PCB cost and to maximize efficiency in production line dedicated for Bluetooth modules. The cost of using BM833A module can be lower than designing-in SoC at any quantity. At low cost, BM833A are full feature modules. Inductors for

DCDC converter are integrated. All 32 GPIOs are accessible.

BM833/F/E, an nRF52833 module has compatible footprint for upgrading. It offers more GPIOs, more memories, +8 dBm TX.

Array antenna will be supported in BT833 Series modules.

## **BM833A Specifications:**

- Nordic nRF52 with ARM Cortex M4 at 64 MHz.
- Supported data rate:
  - ◆ BLE 5.1: 2Mbps, 1Mbps, 500kbps, 125kbps
- Angle-of-Arrival (AoA) and Angle-of-Departure (AoD) direction finding using Bluetooth.
- RSSI, 1 dB resolution
- Serial Wire Debug (SWD)
- Nordic SoftDevice Ready
- Over-the-Air (OTA) firmware update
- Flash/RAM: 192KB/24KB
- 32 General purpose I/O pins
- 12 bit/200KSPS ADC, 8 configurable channels with programmable gain.
- 2X SPI Master/Slave (8Mbps)
- 4-channel pulse width modulator (PWM)
- Low power comparator
- 2-wire Master/Slave (I<sup>2</sup>C compatible)
- Digital microphone interface (PDM)
- UART (with CTS/RTS and DMA)
- 20 channel CPU independent Programmable Peripheral Interconnect (PPI).
- Quadrature Demodulator (QDEC)

- AES HW encryption
- 3 x 32 bit timer with counter mode
- 2x realtime counter
- SoC receiver Sensitivity: -97 dBm at 1Mbps; -104 dBm at 125 kbps
- SoC TX power: +/- 0 dBm; programmable 4 dBm to 20dBm in 4 dB steps.
- Hybrid pins: 16 castellated and 24 LGA.
- Operation voltage: 1.7V to 3.6V
- 4.6 mA peak current at RX or +0dBm TX.
- Integrated DC-DC converter.
- Embedded inductors for DCDC converter
- Operation temperature:  $-40 \,^{\circ}$ C to  $+85 \,^{\circ}$ C

## **Major BM833 Enhancement**

- Cortex M4F at 64 MHz
- Max SoC TX power: +8 dBm.
- Secure boot ready
- 1.7V to 5.5V supply voltage
- USB 2.0 full speed controller (12 Mbps)
- Operation temperature  $-40^{\circ}$ C to  $+105^{\circ}$ C

#### **Model Summaries**

module	BM833A	BM833AF	BM833	BM833F	BM833E	
SoC	nRF52811 QFAA	nRF52811 QFAA	nRF52833 QIAA	nRF52833 QIAA	nRF52833 QIAA	
Flash/RAM	512KB/64KB	192KB/24KB	512KB/128KB	512KB/128KB	512KB/128KB	
Size	10.2x15x1.9mm	15x20.6x1.9mm	10.2x15x1.9mm	15x20.6x1.9mm	10.2x15x1.9mm	
GPIO	32	32	42	42	42	
Antenna	PCB trace	PCB trace	PCB trace	PCB trace	u.FL	
Antenna Gain	0.01dBi	-0.88dBi	-0.56dB	0.51dBi	6dBi	


1



## **Table Of Contents**

	BM833A Specifications:	
	Major BM833 Enhancement	
	Model Summaries	
1.	Introduction	
	BM833, BM833F, BM833E Block Diagram	2
	BM833	2
	BM833F	
	BM833E	
	BM833A, BM833AF Block Diagram	
	BM833A	
	BM833AF	
2.	Codes Development Using Nordic Tools	
	Easy, fast and safe code development	
	Over-The-Air DFU	
	SoftDevices	
	Development Tools	
3.	Product Overview	
	Nordic nRF52811 SoC	
	Nordic nRF52833 SoC	
	Mechanical Drawings BM833A	
	Mechanical Drawings BM833	
	Mechanical Drawings BM833E	
	Mechanical Drawings BM833AF	
	Mechanical Drawings BM833F	
	http://www.fanstel.com/download-document/	
	BM833A Pin Functions	
	BM833 Pin Functions	
	Mounting BM833 on the Host PCB	
4.	Evaluation Board	
	Nordic Development Environment	
	Loading Firmware into Evaluation Board Through a Nordic DK	25



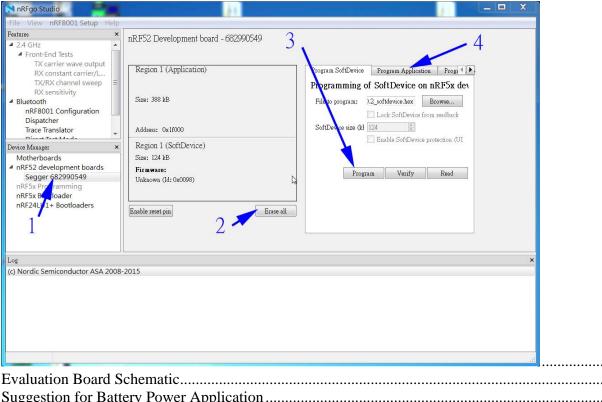

Evaluation Board Schematic	29
Suggestion for Battery Power Application	30
5. Miscellaneous	
Soldering Temperature-Time Profile for Re-Flow Soldering	
Cautions, Design Notes, and Installation Notes	
Packaging	
FCC Label	
Revision History	
Contact Us	



### 1. Introduction

BluNor BM833 is powerful, highly flexible, ultra low power Bluetooth Low Energy (BLE) modules using Nordic nRF52 SoCs. With an ARMCortex<sup>™</sup> M4F MCU, available 512KB flash, 128KB RAM, embedded 2.4GHz multiprotocol transceiver, and an integrated antenna or an u.FL connector for external antenna, it allows faster time to market with reduced development cost.


The following is a block diagram of BM833. Antenna circuit and main clock are integrated. All 32 GPIOs of nRF52833 can be accessed from main board. For lower power consumption at idle state, a 32.768 kHz crystal is added on the host board.

BM833A is sister module of BM833 using nRF52811 instead. BM833 has 42 GPIOs comparing to 32 GPIOs for BM833A. Soldering pad footprints are compatible.

In these data sheets, BM833, BM833F, and BM833E are referred as BM833. BM833A and BM833AF are referred as B833A.

## BM833, BM833F, BM833E Block Diagram

A block diagram of BM833 Series is shown below.

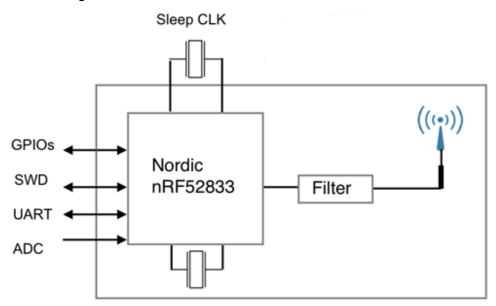

BM833 Series modules have the same features except the followings.

#### **BM833**

- Uses an nRF52833 QIAA with Cortex M4F MCU
- 512KB flash, 128 KB RAM
- 68 pins, 42 GPIOs
- Support Bluetooth 5.1 radio protocols.
- Up to + 8dBm TX.
- CODED PHY



Size: 10.2x15x1.9 mm

#### **BM833F**

BM833 offers the same features as BM833 except:

High performance PCB trace antenna

Size: 10.2 (15mm antenna area) x20.6x1.9mm


### **BM833E**

BM833E offers the same features as BM833 excepts:

An u.FL connector for external antenna

Size: 10.2 x20.6mm

## BM833A, BM833AF Block Diagram

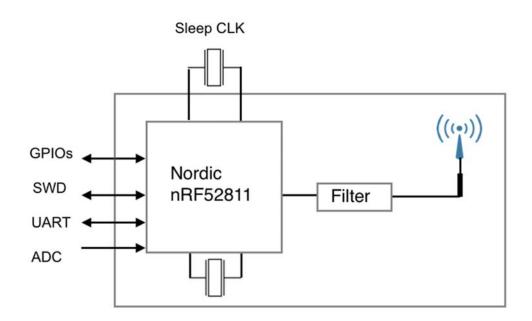

### **BM833A**

- Uses an nRF52811 QFAA with Cortex M4 MCU
- 192 KB flash, 24 KB RAM
- 47 pins, 32 GPIOs



- Size: 10.2x15x1.9mm
- Bluetooth 5.1 radio protocols.
- Does not support NFC
- Up to + 4 dBm TX
- Support CODED PHY at 125 Kbps for longer range

## BM833AF

- Size: 10.2 (15 antenn area) x20.6x1.9mm
- Integrated high performance PCB trace antenna



## 2. Codes Development Using Nordic Tools

Development tools by Nordic and other third party development tools recommended by Nordic should be used.

## Easy, fast and safe code development

Nordic development environment for nRF52 offers a clean separation between application code development and embedded protocol stacks. This means compile, link and run time dependencies with the embedded stack and associated debugging challenges are removed. The Bluetooth low energy stack is a pre-compiled binary, leaving application code to be compiled stand-alone. The embedded stack interface uses an asynchronous and event driven model removing the need for RTOS frameworks.

#### Over-The-Air DFU

The nRF52 SoC is supported by an Over-The-Air Device Firmware Upgrade (OTA DFU) feature. This allows for in the field updates of application software and SoftDevice.

#### **SoftDevices**

The Nordic protocol stacks are known as SoftDevices and complement the nRF52 Series SoCs. All nRF52 Series are programmable with software stacks from Nordic. This bring maximum flexibility to application development and allows the latest stack version to be programmed into the SoC.

SoftDevices available from Nordic:

#### S112 SoftDevice

The S112 SoftDevice is a *Bluetooth* low energy peripheral protocol stack solution. It supports up to four peripheral connections with an additional broadcaster role running concurrently. The S112 SoftDevice integrates a *Bluetooth*low energy Controller and Host, and provides a full and flexible API for building *Bluetooth* low energy nRF52 System on Chip (SoC) solutions. S112 can be used for for BM832A.

#### S132 SoftDevice

The S132 SoftDevice is a *Bluetooth* low energy Central and Peripheral protocol stack solution. It supports up to twenty connections with an additional observer and a broadcaster role all running concurrently. The S132 SoftDevice integrates a *Bluetooth* low energy Controller and Host, and provides a full and flexible API for building *Bluetooth* low energy nRF52 System on Chip (SoC) solutions.

#### **Development Tools**


Nordic Semiconductor provides a complete range of hardware and software development tools for the nRF52 Series devices. nRF52 DK board is recommended for firmware development.



## 3. Product Overview

### Nordic nRF52811 SoC

For full description of the SoC, please download data sheets from Nordic Semiconductor website. https://www.nordicsemi.com/eng/Products/Bluetooth-low-energy

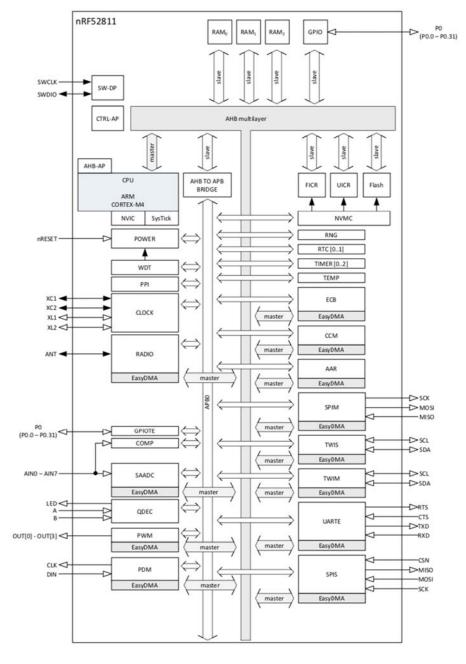

The following is a block diagram of Nordic nRF52811 Bluetooth Low Energy (BLE) SoC.



The 32 bit ARM Cortex M4F MCU with hardware supports for DSP instructions and floating point operations, code density and execution speed are higher than other Cortex M MCU. The Programmable Peripheral Interconnect (PPI) system provides a 20-channel bus for direct and autonomous system peripheral communication without CPU intervention. This brings predictable latency times for peripheral to peripheral interaction and power saving benefits associated with leaving CPU idle. The device has 2 global power modes ON/OFF, but all system blocks and peripherals have individual power management control which allows for an automatic switching RUN/IDLE for system blocks based only on those required/not required to achieve particular tasks.

The radio supports Bluetooth low energy. Output power is scalable from a maximum of +4dBm down to -20 dBm in 4dB steps. BLE Sensitivity is increased to -97 dBm at 1Mbps and -104 dBm at 125 kbps with CODED PHY.

### Nordic nRF52833 SoC


The following is a block diagram of Nordic nRF52833 SoC.



## **Mechanical Drawings BM833A**

The followings are mechanical drawings of BM833A, top view. Size of module is 10.2x15.0x1.9mm. X-axis and Y-axis coordinate of each pin is shown in table.

BM833 drawings are on the following page. If you can use BM833 footprint for BM833A, your host board is upgradeable to an nRF52833 module.

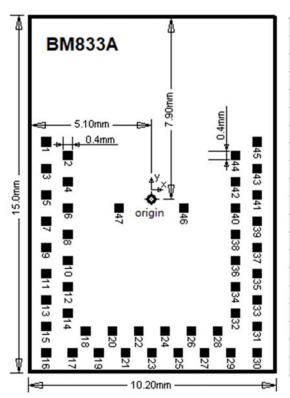


A	В	C	D	E	F	G	Н	I
	X (mm)	Y (mm)		X(mm)	Y (mm)		X (mm)	Y (mm)
Zero								
1	-4. 4	2.35	45	4.4	2.35	17	-3.3	-6.45
3	-4. 4	1.25	43	4. 4	1.25	19	-2.2	-6. 45
5	-4. 4	0.15	41	4. 4	0.15	21	-1.1	-6.45
7	-4.4	-0.95	39	4. 4	-0.95	23	0	-6. 45
9	-4.4	-2.05	37	4. 4	-2.05	25	1. 1	-6. 45
11	-4.4	-3. 15	35	4. 4	-3. 15	27	2.2	-6.45
13	-4.4	-4. 25	33	4. 4	-4. 25	29	3.3	-6.45
15	-4.4	-5.35	31	4. 4	-5.35			
16	-4.4	-6.45	30	4. 4	-6.45	18	-2.75	-5.55
						20	-1.65	-5.55
2	-3.5	1.8	44	3.5	1.8	22	-0.55	-5.55
4	-3.5	0.7	42	3.5	0.7	24	0.55	-5.55
6	-3.5	-0.4	40	3.5	-0.4	26	1.65	-5.55
8	-3.5	-1.5	38	3.5	-1.5	28	2.75	-5.55
10	-3.5	-2.6	36	3.5	-2.6			
12	-3.5	-3.7	34	3.5	-3.7	46	1.35	-0.4
14	-3.5	-4.8	32	3.5	-4.8	47	-1.35	-0.4



## **Mechanical Drawings BM833**


The followings are mechanical drawings of BM833, top view. X-axis and Y-axis coordinate of each pin is shown in table.

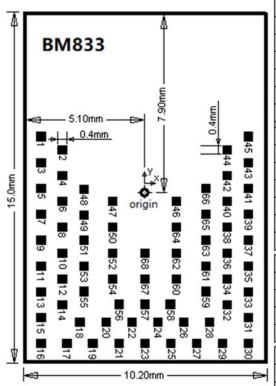

,								
	X(mm)	Y (mm)		X(mm)	Y (mm)		X(mm)	Y (mm)
Zero	0	0						
1	-4.4	2.35	45	4.4	2.35	17	-3.3	-6.45
3	-4. 4	1.25	43	4. 4	1.25	19	-2.2	-6.45
5	-4.4	0.15	41	4. 4	0.15	21	-1. 1	-6.45
7	-4.4	-0.95	39	4. 4	-0.95	23	0	-6.45
9	-4.4	-2.05	37	4. 4	-2.05	25	1. 1	-6.45
11	-4. 4	-3. 15	35	4. 4	-3. 15	27	2.2	-6.45
13	-4. 4	-4. 25	33	4. 4	-4. 25	29	3.3	-6.45
15	-4. 4	-5.35	31	4. 4	-5.35			
16	-4. 4	-6. 45	30	4.4	-6. 45			
2	-3.5	1.8	44	3.5	1.8	18	-2.75	-5.55
4	-3.5	0.7	42	3.5	0.7	20	-1.65	-5.55
6	-3.5	-0.4	40	3.5	-0.4	22	-0.55	-5.55
8	-3.5	-1.5	38	3.5	-1.5	24	0.55	-5.55
10	-3.5	-2.6	36	3.5	-2.6	26	1.65	-5.55
12	-3.5	-3.7	34	3.5	-3.7	28	2.75	-5.55
14	-3.5	-4.8	32	3.5	-4.8			
48	-2.6	0.15	66	2.6	0.15	68	0	-2.6
49	-2.6	-0.95	65	2.6	-0.95	67	0	-3.7
51	-2.6	-2.05	63	2.6	-2.05	57	0	-4.8
53	-2.6	-3. 15	61	2.6	-3. 15			
55	-2.6	-4. 25	59	2.6	-4. 25			
47	-1.35	-0.4	46	1.35	-0.4	56	-1. 1	-4.8
50	-1.35	-1.5	64	1.35	-1.5	58	1. 1	-4.8
52	-1.35	-2.6	62	1.35	-2.6			
54	-1.35	-3.7	60	1.35	-3.7			




**Mechanical Drawings BM833E**The following is mechanical drawings of B833E. Its footprint is the same as that of BM833.

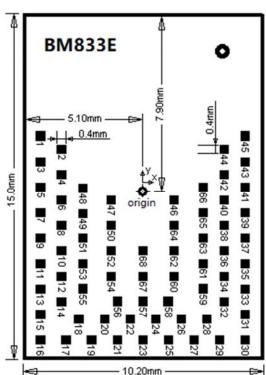

	V()	v/)		v/)	v()		v()	v()
7	X(mm)	Y (mm)		X(mm)	Y (mm)		X(mm)	Y (mm)
Zero	0	0		7040 1041	127 2720		7227 520	524 5552
1	-4. 4	2.35	45	4.4	2.35	17	-3.3	-6.45
3	-4. 4	1.25	43	4. 4	1.25	19	-2.2	-6.45
5	-4. 4	0.15	41	4.4	0.15	21	-1.1	-6.45
7	-4.4	-0.95	39	4.4	-0.95	23	0	-6.45
9	-4. 4	-2.05	37	4. 4	-2.05	25	1. 1	-6. 45
11	-4.4	-3. 15	35	4.4	-3. 15	27	2.2	-6.45
13	-4.4	-4. 25	33	4. 4	-4. 25	29	3.3	-6.45
15	-4. 4	-5.35	31	4. 4	-5.35			
16	-4.4	-6. 45	30	4. 4	-6.45			
2	-3.5	1.8	44	3.5	1.8	18	-2.75	-5.55
4	-3.5	0.7	42	3.5	0.7	20	-1.65	-5.55
6	-3.5	-0.4	40	3.5	-0.4	22	-0.55	-5.55
8	-3.5	-1.5	38	3.5	-1.5	24	0.55	-5.55
10	-3.5	-2.6	36	3.5	-2.6	26	1.65	-5.55
12	-3.5	-3.7	34	3.5	-3.7	28	2.75	-5.55
14	-3.5	-4.8	32	3.5	-4.8			
48	-2.6	0.15	66	2.6	0.15	68	0	-2.6
49	-2.6	-0.95	65	2.6	-0.95	67	0	-3.7
51	-2.6	-2.05	63	2.6	-2.05	57	0	-4.8
53	-2.6	-3. 15	61	2.6	-3. 15			
55	-2.6	-4. 25	59	2.6	-4. 25			
47	-1.35	-0.4	46	1.35	-0.4	56	-1. 1	-4.8
50	-1.35	-1.5	64	1.35	-1.5	58	1. 1	-4.8
52	-1.35	-2.6	62	1.35	-2.6			
54	-1.35	-3.7	60	1.35	-3.7			




## **Mechanical Drawings BM833AF**

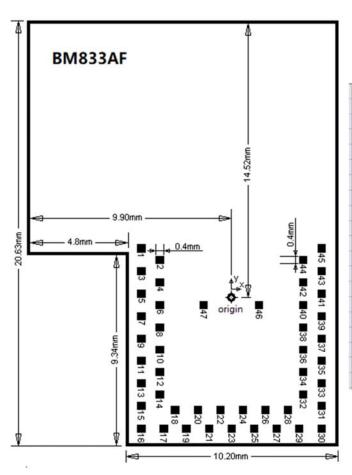

A	В	С	D	E	F	G	Н	I
	X(mm)	Y (mm)		X(mm)	Y (mm)		X(mm)	Y (mm)
Zero				, , , , , , ,				
1	-4. 4	2.35	45	4. 4	2.35	17	-3.3	-6. 45
3	-4. 4	1. 25	43	4. 4	1.25	19	-2.2	-6. 45
5	-4. 4	0.15	41	4.4	0.15	21	-1.1	-6. 45
7	-4. 4	-0.95	39	4.4	-0.95	23	0	-6. 45
9	-4. 4	-2.05	37	4. 4	-2.05	25	1. 1	-6. 45
11	-4. 4	-3. 15	35	4.4	-3. 15	27	2.2	-6. 45
13	-4. 4	-4. 25	33	4. 4	-4. 25	29	3.3	-6. 45
15	-4. 4	-5.35	31	4. 4	-5.35			
16	-4. 4	-6.45	30	4. 4	-6.45	18	-2.75	-5.55
						20	-1.65	-5.55
2	-3.5	1.8	44	3.5	1.8	22	-0.55	-5.55
4	-3.5	0.7	42	3.5	0.7	24	0.55	-5.55
6	-3.5	-0.4	40	3.5	-0.4	26	1.65	-5.55
8	-3.5	-1.5	38	3.5	-1.5	28	2.75	-5.55
10	-3.5	-2.6	36	3.5	-2.6			
12	-3.5	-3.7	34	3.5	-3.7	46	1.35	-0.4
14	-3.5	-4.8	32	3.5	-4.8	47	-1.35	-0.4



## **Mechanical Drawings BM833F**

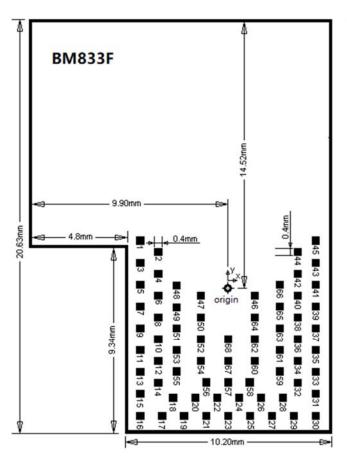

	X (mm)	Y (mm)		X(mm)	Y (mm)		X (mm)	Y (mm)
Zero	0	0						
1	-4.4	2.35	45	4. 4	2.35	17	-3.3	-6. 45
3	-4. 4	1.25	43	4. 4	1. 25	19	-2.2	-6.45
5	-4. 4	0.15	41	4. 4	0.15	21	-1. 1	-6.45
7	-4.4	-0.95	39	4. 4	-0.95	23	0	-6.45
9	-4. 4	-2.05	37	4. 4	-2.05	25	1. 1	-6.45
11	-4.4	-3. 15	35	4. 4	-3. 15	27	2.2	-6.45
13	-4. 4	-4. 25	33	4. 4	-4. 25	29	3.3	-6. 45
15	-4. 4	-5.35	31	4. 4	-5.35			
16	-4. 4	-6. 45	30	4. 4	-6.45			
2	-3.5	1.8	44	3.5	1.8	18	-2.75	-5.55
4	-3.5	0.7	42	3.5	0.7	20	-1.65	-5.55
6	-3.5	-0.4	40	3.5	-0.4	22	-0.55	-5.55
8	-3.5	-1.5	38	3.5	-1.5	24	0.55	-5.55
10	-3.5	-2.6	36	3.5	-2.6	26	1.65	-5.55
12	-3.5	-3.7	34	3.5	-3.7	28	2.75	-5.55
14	-3.5	-4.8	32	3.5	-4.8			
48	-2.6	0.15	66	2.6	0.15	68	0	-2.6
49	-2.6	-0.95	65	2.6	-0.95	67	0	-3.7
51	-2.6	-2.05	63	2.6	-2.05	57	0	-4.8
53	-2.6	-3. 15	61	2.6	-3. 15			
55	-2.6	-4. 25	59	2.6	-4. 25			
47	-1.35	-0.4	46	1.35	-0.4	56	-1. 1	-4.8
50	-1.35	-1.5	64	1.35	-1.5	58	1. 1	-4.8
52	-1.35	-2.6	62	1.35	-2.6			
54	-1.35	-3.7	60	1.35	-3.7			



Library components for PADS and EAGLE can be downloaded from

http://www.fanstel.com/download-document/

For other PCB layout tools, please download evaluation Gerber files and extract library component.




#### **BM833A Pin Functions**

The followings are BM833A pin assignment. Pin functions are in a table below. Please refer to Nordic nRF52811 Product Specifications for detailed descriptions and features supported.

https://www.nordicsemi.com/?sc\_itemid=%7B7CBDF55C-9745-4A7D-A491-5B66AE9454B6%7D

You may develop your host board using BM833 footprint described in next section. Your host board will then upgradable to BM833 module for more memories and higher TX power.

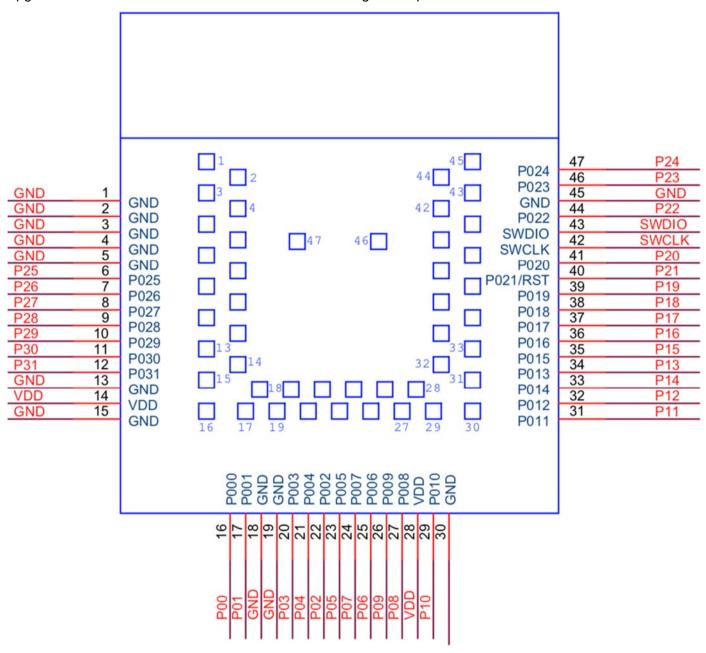



BM833	3A	nRF528	11	
pin#	pin name	pin#	pin name	Descriptions
1	GND	45	VSS	Ground
2	GND			Ground
3	GND			Ground
4	GND			Ground
5	GND			Ground
6	P025	37	P0.25	GPIO
7	P026	38	P0.26	GPIO
8	P027	39	P0.27	GPIO
9	P028	40	P0.28/AIN4	GPIO, Analog input
10	P029	41	P0.29/AIN5	GPIO, Analog input
11	P030	42	P0.30/AIN6	GPIO, Analog input
12	P031	43	P0.31/AIN7	GPIO, Analog input
13	GND			Ground
14	VDD	36	VDD	DC supply 1.7V to 3.6V
15	GND			Ground
16	P000	2	P0.00/XL1	GPIO, connection for 32.768kHz crystal
17	P001	3	P0.01/XL2	GPIO, connection for 32.768kHz crystal
18	GND			Ground
19	GND			Ground
20	P003	5	P0.03/AIN1	GPIO, Analog input
21	P004	6	P0.04/AIN2	GPIO, Analog input
22	P002	4	P0.02/AIN0	GPIO, Analog input
23	P005	7	P0.05/AIN3	GPIO, Analog input
24	P007	9	P0.07	GPIO
24	P006	8	P0.06	GPIO
24	P009	11	P0.09	GPIO
27	P008	10	P0.08	GPIO
28	VDD		VDD	DC supply 1.7V to 3.6V
29	P010	12	P0.10	GPIO



30	GND			Ground
31	P011	14	P0.11	GPIO, used as UART RX on evaluation board
32	P012	15	P0.12	GPIO, used as UART TX on evaluation board
33	P014	17	P0.14	GPIO
34	P013	16	P0.13	GPIO
35	P015	18	P0.15	GPIO
36	P016	19	P0.16	GPIO
37	P017	20	P0.17	GPIO
38	P018	21	P0.18	GPIO
39	P019	22	P0.19	GPIO
40	P021/RST	24	P0.21/RST	GPIO, configurable as RESET pin
41	P020	23	P0.20	GPIO
42	SWDCLK	25	SWDCLK	Serial Wire Debug clock input
43	SWDIO	26	SWDIO	Serial Wire Debug I/O
44	P022	27	P0.22	GPIO
45	GND			Ground
46	P023	28	P0.23	GPIO
47	P024	29	P0.24	GPIO

BM833A Pin Functions




### **BM833 Pin Functions**

BM833 uses an nRF52833 QIAA, Nordic Product Specifications:

http://infocenter.nordicsemi.com/pdf/nRF52840 PS v1.0.pdf

Pin assignments are below. Pins 1 to 47 are exactly at the same locations as those of BM833A. Pins 48 to 68 as shown in solid square are for BM833 only.

- •For BM833 exclusive pins, names are in green color.
- •For shares pins,BM833 pin names are in red color.

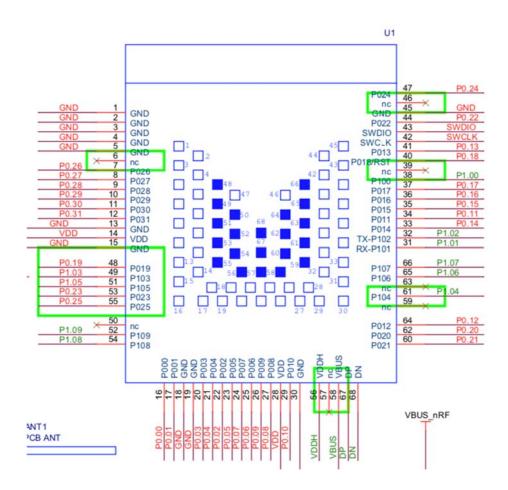

•BM833A pin names are in blue color.



BM833A (BM833AF), BM833 (BM833F, BM833E) Pin Functions:

BM833A	5281 1		BM833	52833		
pin#	pin #	name	pin#	pin#	pin	Descriptions
1	45	GND	1	B7	VSS	Ground
2		GND	2			Ground
3		GND	3			Ground
4		GND	4			Ground
5		GND	5			Ground
6	37	P025	6			NC
7	38	P026	7	G1	P0.26	GPIO
8	39	P027	8	H2	P0.27	GPIO
9	40	P028	9	B11	P0.28/AIN4	GPIO, Analog input
10	41	P029	10	A10	P0.29/AIN5	GPIO, Analog input
11	42	P030	11	B9	P0.30/AIN6	GPIO, Analog input
12	43	P031	12	A8	P0.31/AIN7	GPIO, Analog input
13		GND	13			Ground
14	36	VDD	14	B1	VDD	DC supply 1.7V to 3.6V
15		GND	15			Ground
16	2	P000	16	D2	P0.00/XL1	GPIO, connection for 32.768kHz crystal
17	3	P001	17	F2	P0.01/XL2	GPIO, connection for 32.768kHz crystal
18		GND	18			Ground
19		GND	19			Ground



20	5	P003	20	B13	P0.03/AIN1	GPIO, Analog input
21	6	P004	21	J1	P0.04/AIN2	GPIO, Analog input
22	4	P002	22	A12	P0.02/AIN0	GPIO, Analog input
23	7	P005	23	K2	P0.05/AIN3	GPIO, Analog input
24	9	P007	24	M2	P0.07	GPIO
25	8	P006	25	L1	P0.06	GPIO
26	11	P009	26	L24	P0.09	GPIO
27	10	P008	27	N1	P0.08	GPIO
28		VDD	28		VDD	DC supply 1.7V to 3.6V
29	12	P010	29	J24	P0.10	GPIO
30		GND	30			Ground
31	14	P011	31	Y23	P1.01	GPIO, used as UART RX on evaluation board
32	15	P012	32	W24	P1.02	GPIO, used as UART TX on evaluation board
33	17	P014	33	AC9	P0.14	GPIO
34	16	P013	34	T2	P0.11	GPIO
35	18	P015	35	AD10	P0.15	GPIO
36	19	P016	36	AC11	P0.16	GPIO



37	20	P017	37	AD12	P0.17	GPIO
38	21	P018	38	AD22	P1.00	GPIO
39	22	P019	39			NC
40	24	P021/RST	40	AC13	P0.18/RST	GPIO, configurable as RESET pin
41	23	P013	41	AD8	P0.13	GPIO
42	25	SWDCLK	42	AA24	SWDCLK	Serial Wire Debug clock input
43	26	SWDIO	43	AC24	SWDIO	Serial Wire Debug I/O
44	27	P022	44	AD18	P0.22	GPIO
45		GND	45			Ground
46	28	P023	46			NC
47	29	P024	47	AD20	P0.24	GPIO
			48	A14	P0.19	GPIO
			49	B15	P1.03	GPIO
			50			NC
			51	A16	P1.05	GPIO
			52	R1	P1.09	GPIO
			53	B17	P0.23	GPIO




54	P2	P1.08	GPIO
55	A20	P0.25	GPIO
56	Y2	VDDH	High voltage power supply
57			NC
58	AD2	VBUS	5V input for USB3.3V regulator
59	V2		NC
60	AC17	P0.21	GPIO
61	U24	P1.04	GPIO
62	AD16	P0.20	GPIO
63			NC
64	U1	P0.12	GPIO
65	R24	P1.06	GPIO
66	P23	P1.07	GPIO
67	AD6	D+	USB D+
68	AD4	D-	USB D-



### Mounting BM833 on the Host PCB

The following figure shows recommended mounting of BM833 module on the host PCB.

- For the best Bluetooth range performance, the antenna area of module shall extend 11.2 mm outside the edge of host PCB board, or 11.2 mm outside the edge of a ground plane.
- The next choice is to place a module on a corner of host PCB, the antenna area shall extend 11.2 mm from the edge of ground plane. Ground plane shall be at least 5 mm from the edge of the antenna area of module.

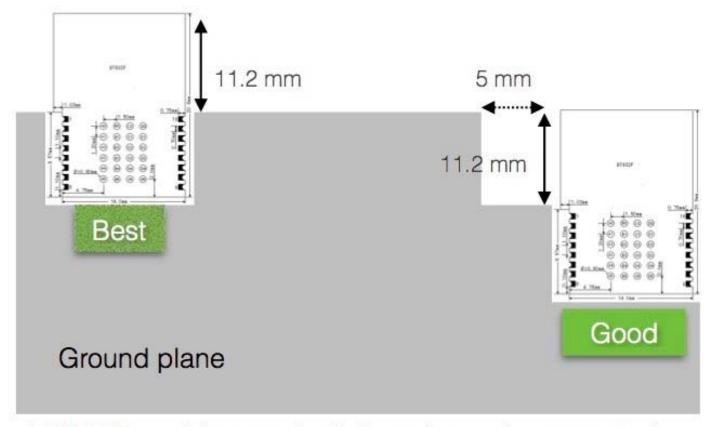

- 1.BT832F module extends 11.2 mm from edge or ground plane of the host PCB board.
- 2.No ground plane on all layers for at least 5mm from edge of module. Longer distance for longer Bluetooth range.
- We don't recommend mounting BM833 module in the middle of a host PCB.

For the best Bluetooth range performance, keep all external metal at least 30mm from the antenna area.

## 4. Evaluation Board

An evaluation board can be used to evaluate performance of module and to develop and test your firmware before an application-specific host board is developed.

## **Nordic Development Environment**

Nordic Semiconductor provides a complete range of hardware and software development tools for the nRF52 Series devices. nRF52 DK board is recommended for firmware development. Document and Software development tools can be downloaded by the following links.

#### Get started with Nordic chip and all online documents.

http://infocenter.nordicsemi.com/index.jsp?topic=/com.nordic.infocenter.nrf52/dita/nrf52/development/nrf52 dev kit.html&cp=1 1

#### Nordic SDK with many example projects.

https://developer.nordicsemi.com/nRF5 SDK/

### Nordic development zone.

https://devzone.nordicsemi.com/tutorials/b/getting-started/posts/development-with-gcc-and-eclipse

### **Programming the Nordic chip**

Download and install Nrf5x-Command-Line Tools

https://www.nordicsemi.com/eng/nordic/Products/nRF52840/nRF5x-Command-Line-Tools-Win32/58850

#### Download and install nRF ConnectPC software

https://www.nordicsemi.com/Software-and-Tools/Development-Tools/nRF-Connect-for-desktop

Download and install Segger Embedded Studio.

https://www.nordicsemi.com/Software-and-Tools/Development-Tools/Segger-Embedded-Studio

#### nRF52DK

The nRF52 DK is a versatile single board development kit for *Bluetooth*® low energy applications using the nRF52833 SoC.

It supports the standard Nordic Software Development Tool-chain using SES, Keil, IAR and GCC. Program/Debug options on the kit is Segger J-Link OB.

#### nRF52840DK

Nordic Semiconductor nRF52840 Development Kit (nRF52840-DK) is a versatile, single-board development tool for Bluetooth® 5 / Bluetooth Low Energy (BLE) applications using the nRF52840 Multi-Protocol SoC (System on Chip).

The nRF52840-DK supports the standard Nordic tool-chain software using SES, Keil, IAR, and GCC. Program/debug options are available for Segger J-Link OB and external target boards.


## Loading Firmware into Evaluation Board Through a Nordic DK

Procedures to connect a Nordic DK to a Fanstel nRF52 module evaluation board.

- Connect Nordic nRF52DK debug out to Fanstel evaluation board debug in using the 10-pin flat cable as shown below.
- Connect Nordic nRF52DK to PC.




• Connect a DC power source to micro or mini USB port of evaluation board.

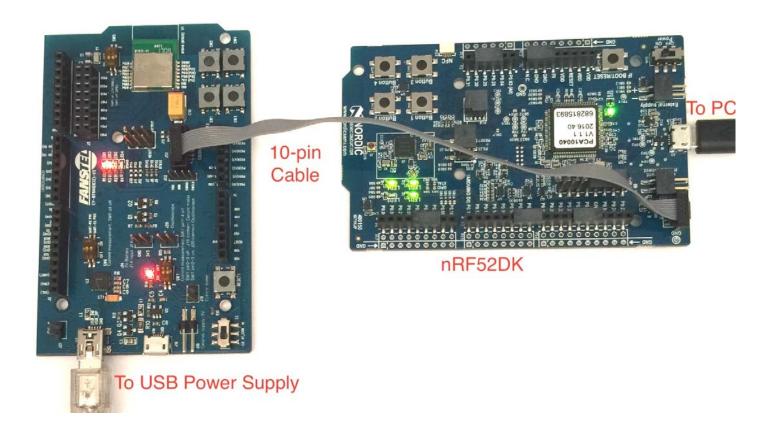



#### **Check COM Port Connection**

After connecting nRF52DK and an nRF52 sensor/evaluation board, you can see You canJ-Link device and COM port on the PC control panel Device Manager.

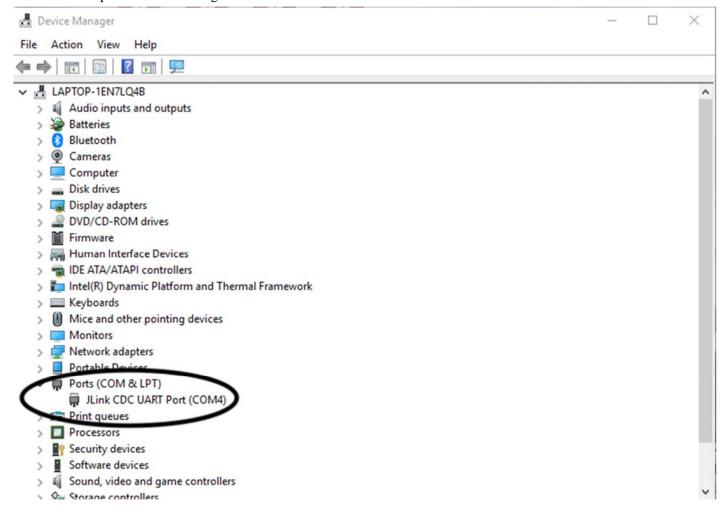


### Starting Nordic nRFgo

Open nRFgo Studio.


- 1. Click **Segger 682990549** as in the example below.
- 2. Erase all if needed
- 3. Browse for Bootloader and program. After programming bootloader, you can use OTA for firmware update.
- 4. Browse for the Soft Device and program.
- 5. Browse for the application hex file and program



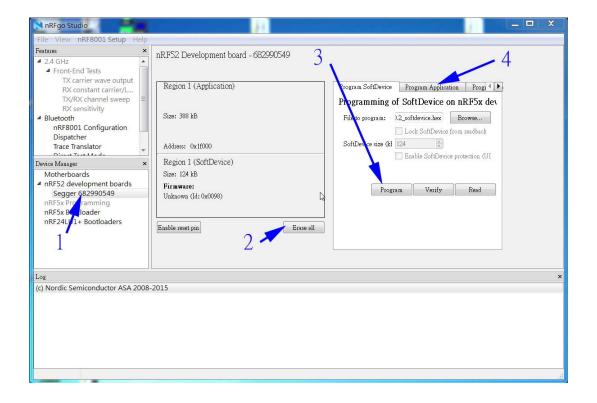



## **Evaluation Board Schematic**

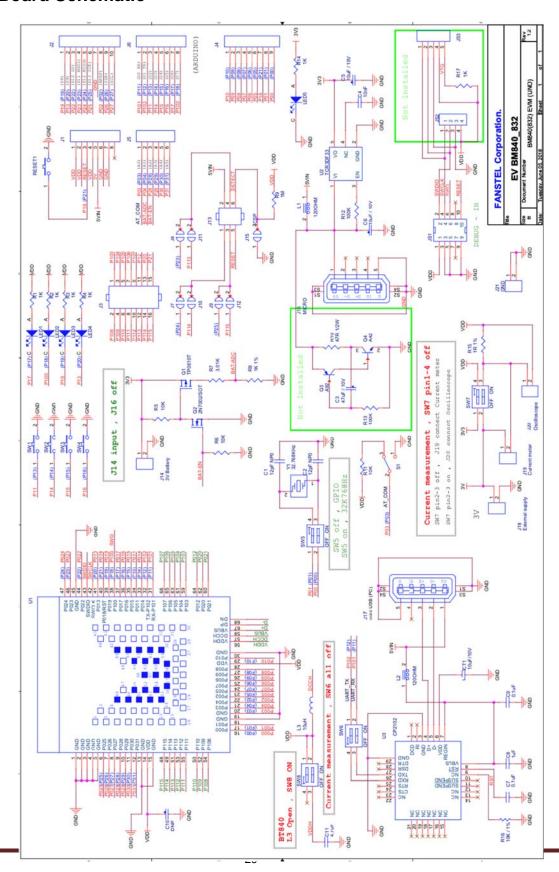



## **Suggestion for Battery Power Application**


Standby current consumption is important for battery-powered product. We suggest adding a 32.768 kHz crystal and 2 capacitors as shown in the upper left corner of the evaluation board schematics. The 32MHz main clock won't be active at idle state to save power.

Two inductors required for DCDC converter are inside BM832 module. You can enable DCDC to lower power consumption.

## 5. Miscellaneous

### **Soldering Temperature-Time Profile for Re-Flow Soldering**

Maximum number of cycles for re-flow is 2. No opposite side re-flow is allowed due to module weight.

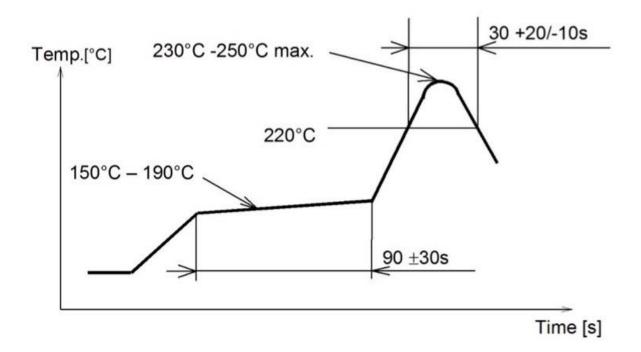

## Cautions, Design Notes, and Installation Notes

Failure to follow the guidelines set forth in this document may result in degrading of the product's functions and damage to the product.

#### **Design Notes**

- (1) Follow the conditions written in this specification, especially the control signals of this module.
- (2) The supply voltage has to be free of AC ripple voltage (for example from a battery or a low noise regulator output). For noisy supply voltages, provide a decoupling circuit (for example a ferrite in series connection and a bypass capacitor to ground of at least 47uF directly at the module).
- (3) This product should not be mechanically stressed when installed.
- (4) Keep this product away from heat. Heat is the major cause of decreasing the life of these products.



- (5) Avoid assembly and use of the target equipment in conditions where the products' temperature may exceed the maximum tolerance.
- (6) The supply voltage should not be exceedingly high or reversed. It should not carry noise and/or spikes.
- (7) this product away from other high frequency circuits.

#### Notes on Antenna and PCB Layout

(1) Don't use a module with internal antenna inside a metal case.

### (2) For PCB layout:

- · Avoid running any signal line below module whenever possible,
- No ground plane below antenna,
- If possible, cut-off the portion of main board PCB below antenna.

#### Installation Notes

- (1) Reflow soldering is possible twice based on the time-temperature profile in this data sheets. Set up the temperature at the soldering portion of this product according to this reflow profile.
- (2) Carefully position the products so that their heat will not burn into printed circuitboards or affect the other components that are susceptible to heat.
- (3) Carefully locate these products so that their temperatures will not increase due to the effects of heat generated by neighboring components.
- (4) If a vinyl-covered wire comes into contact with the products, then the cover will melt and generate toxic gas, damaging the insulation. Never allow contact between the cover and these products to occur.
- (5) This product should not be mechanically stressed or vibrated when reflowed.
- (6) If you want to repair your board by hand soldering, please keep the conditions of this chapter.
- (7) Do not wash this product.
- (8) Refer to the recommended pattern when designing a board.
- (9) Pressing on parts of the metal cover or fastening objects to the metal will cause damage to the unit.

#### **Usage Condition Notes**

- (1) Take measures to protect the unit against static electricity. If pulses or other transient loads (a large load applied in a short time) are applied to the products, check and evaluate their operation before assembly on the final products.
- (2)Do not use dropped products.
- (3)Do not touch, damage or soil the pins.
- (4) Follow the recommended condition ratings about the power supply applied to this product.
- (5) Electrode peeling strength: Do not add pressure of more than 4.9N when soldered on PCB
- (6) Pressing on parts of the metal cover or fastening objects to the metal cover will cause damage.



(7) These products are intended for general purpose and standard use in general electronic equipment, such as home appliances, office equipment, information and communication equipment.

#### **Storage Notes**

- (1) The module should not be stressed mechanically during storage.
- (2)Do not store these products in the following conditions or the performancecharacteristics of the product, such as RF performance will be adversely affected:
  - Storage in salty air or in an environment with a high concentration of corrosive gas.
  - Storage in direct sunlight
  - Storage in an environment where the temperature may be outside the range specified.
  - Storage of the products for more than one year after the date of delivery storage period.
- (3) Keep this product away from water, poisonous gas and corrosive gas.
- (4) This product should not be stressed or shocked when transported.
- (5) Follow the specification when stacking packed crates (max. 10).

#### **Safety Conditions**

These specifications are intended to preserve the quality assurance of products and individual components. Before use, check and evaluate the operation when mounted on your products. Abide by these specifications, without deviation when using the products. These products may short-circuit. If electrical shocks, smoke, fire, and/or accidents involving human life are anticipated when a short circuit occurs, then provide the following failsafe functions, as a minimum.

- (1) Ensure the safety of the whole system by installing a protection circuit and a protection device.
- (2)Ensure the safety of the whole system by installing a redundant circuit or anothersystem to prevent a dual fault causing an unsafe status.

### **Other Cautions**

- (1)This specification sheet is copyrighted. Reproduction of this data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices.
- (2)Do not use the products for other purposes than those listed.
- (3)Be sure to provide an appropriate failsafe function on your product to prevent anadditional damage that may be caused by the abnormal function or the failure of the product.
- (4)This product has been manufactured without any ozone chemical controlled under the Montreal Protocol.
- (5)These products are not intended for other uses, other than under the special conditions shown below. Before using these products under such special conditions, check their performance and reliability under the said special conditions carefully to determine whether or not they can be used in such a manner.
  - In liquid, such as water, salt water, oil, alkali, or organic solvent, or in places where liquid may splash.



- In direct sunlight, outdoors, or in a dusty environment
- In an environment where condensation occurs.
- In an environment with a high concentration of harmful gas.
- (6) If an abnormal voltage is applied due to a problem occurring in other componentsor circuits, replace these products with new products because they may not beable to provide normal performance even if their electronic characteristics and appearances appear satisfactory.
- (7) When you have any question or uncertainty, contact Fanstel.

## **Packaging**

Production modules are delivered in reel, 1000 modules in each reel.

#### **FCC LABEL**

The Original Equipment Manufacturer (OEM) must ensure that the OEM modular transmitter must be labeled with its own FCC ID number. This includes a clearly visible label on the outside of the final product enclosure that displays the contents shown below. If the FCC ID is not visible when the equipment is installed inside another device, then the outside of the device into which the equipment is installed must also display a label referring to the enclosed equipment

The end product with this module may subject to perform FCC part 15 unintentional emission test requirement and be properly authorized.

This device is intended for OEM integrator only.



# **Revision History**

• Sep. 2019, Ver. 0.50: The first draft release



## **Contact Us**

**United States:** 

Fanstel Corp.

7466 E. Monte Ctisto Ave. Scottsdale AZ 85260

Tel. 1 480-948-4928 Fax. 1-480-948-5459

Email: module@fanstel.com Website: www.fanstel.com

### Taiwan:

Fanstel Corp.

10F-10, 79 Xintai Wu Road

Xizhu, New Taipei City, Taiwan 22101

泛世公司

臺灣省新北市汐止區新臺五路 79號 10樓之 10,22101

Tel. 886-2-2698-9328 Fax. 886-2-2698-4813 Email: **tp@fanstel.com** Website: www.fanstel.com

#### China:

Fanstel Technologies Corp.

11 Jiale Street

Ping-Dih, Long-Gang, Shen Zhen, GD 518117

泛世康科技(深圳)有限公司

廣東省深圳市龍崗區坪地鎮佳樂街 11 號

Tel. 86-755-8409-0928 Fax. 86-755-8409-0973 QQ. 3076221086 Email: sz@fanstel.com

Website: www.fanstel.com



### Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

#### **FCC RF Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) usedfor this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and mustnot be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposurecompliance.

#### **Industry Canada (IC) Statement**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this devicemust accept any interference, including interference that may cause undesired operation of the device.



#### Canada, avis d'Industry Canada (IC)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Informations concernant l'exposition aux fréquences radio (RF)

Cet équipement est conforme avec l'exposition aux radiations IC définies pour un environnement noncontrôlé. Cet équipement doit être installé et utilisé à une distance minimum de 20 cm entre le radiateuret votre corps. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec une autreantenne ou transmetteur. Les utilisateurs finaux et les installateurs doivent être informés des instructions d'installation de l'antenne et des conditions de fonctionnement de l'émetteur afin de satisfaire à la conformité d'exposition RF.

Note: The end product shall has the words "Contains Transmitter Module FCC ID:X8WBM833, IC: 4100A-BM833"

Information for the OEM and Integrators

The following statement must be included with all versions of this document supplied to an OEM or integrator, but should not be distributed to the end user.

- (1) This device is intended for OEM integrators only.
- (2) Please see the full Grant of Equipment document for other restrictions.