

clarion®

Owner's manual & Installation manual

CZ502

CD/USB/MP3/WMA RECEIVER

CLARION PRODUCT REGISTRATION INFORMATION

For USA and Canada only
www.clarion.com

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic products. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at www.clarion.com to register your Clarion product.

We have made product registration simple with our easy to use website. The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at www.clarion.com - it's easy to keep your Clarion product up to date.

INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION

Pour les États Unis et le Canada seulement
www.clarion.com

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web www.clarion.com pour enregistrer votre produit Clarion.

Nous avons facilité la tâche d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits.

Enregistrer à www.clarion.com - c'est facile de mettre à jour votre produit Clarion.

INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION

Para USA y Canada nomas
www.clarion.com

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet www.clarion.com para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Regístrate en www.clarion.com - es fácil mantener su producto de Clarion actualizado.

Contents

Thank you for purchasing this Clarion product.

- Please fully read this owner's manual before operating this equipment.
- Check the contents of the enclosed warranty card and store it in a safe place with this manual.


1. FEATURES	2
Expanding Systems	2
2. PRECAUTIONS	2
Front Panel / Generalities	3
USB Port	3
3. CONTROLS	3
Operational Panel	3
Names of Button	3
Remote Control (RCX003)	4
Notes of remote control using	4
4. OPERATIONS	4
Basic Operations	4
System Setup	5
Radio Operations	5
Satellite Radio Mode	6
HD Radio Operations	7
iTunes® Tagging	7
SiriusXM Satellite Radio Operations	8
USB Operations	9
iPod & iPhone Operations	10
AUX Operations	10
Bluetooth Operations	11
5. TROUBLE SHOOTING	12
6. ERROR DISPLAYS	12
7. SPECIFICATIONS	13
8. INSTALLATION / WIRE CONNECTION GUIDE	13

1. FEATURES

- Built-in Bluetooth® Hands free(HFP) and Audio Streaming(A2DP & AVRCP)
- 4ch RCA Output with HPF/LPF and BEAT-EQ with 3 Band Parametric Equalizer
- HD Radio Ready™ and SIRIUS Radio Direct Connect Ready



Expanding Systems

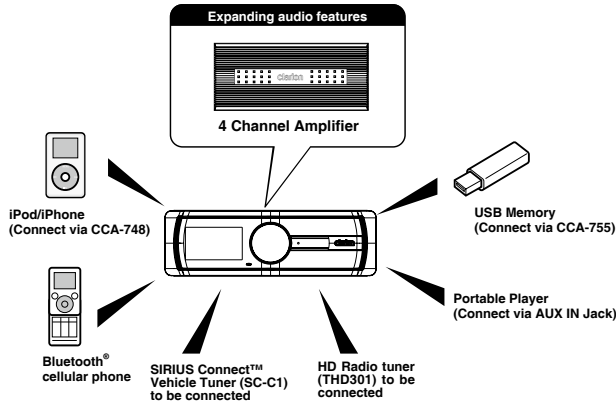

Note:

- The items listed outside of the frames are the commercial products generally sold.
- CCA-748 and CCA-755: Sold by separately.

2. PRECAUTIONS

⚠ WARNING

For your safety, the driver should not operate the controls while driving. Also, while driving, keep the volume to a level at which external sounds can be heard.

 
1. If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.
2. Do not open the case, disassemble the unit, or lubricate the rotating parts.
3. SIRIUS, the SIRIUS Dog logo and related marks are trademarks of SIRIUS XM Radio, Inc.
4. HD Radio™, HD Radio Ready™, and the HD Radio Ready logo are proprietary trademarks of iBiquity Digital Corporation.
5. FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
6. "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.
7. Pandora, the Pandora logo and other Pandora marks are trademarks or registered trademarks of Pandora Media, Inc. or its subsidiaries worldwide. "If you have any issues with the Pandora application on your mobile phone, please direct them to pandora-support@pandora.com."



INFORMATION FOR USERS:

Changes or modifications to this product unapproved by the manufacturer will void the warranty and will violate FCC approval.

Front Panel / Generalities

For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the set from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the set in any way. Doing so may result in damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the body.
- If a problem should occur, have the set inspected at your store of purchase.

Cleaning the body

- Use a soft, dry cloth and gently wipe off the dirt.
- For tough dirt, apply some neutral detergent diluted in water to a soft cloth, wipe off the dirt gently, then wipe again with a dry cloth.
- Do not use benzene, thinner, car cleaner, etc., as these substances may damage the body or cause the paint to peel. Also, leaving rubber or plastic products in contact with the body for long periods of time may cause stains.

USB Port

- The USB memory stick may stick out when inserted, so it may cause danger during driving. When connect USB memory stick to the main unit, please use a USB extension cable (CCA-755).
- The USB memory sticks must be recognized as "USB mass storage class" to work properly. Some models may not operate correctly.


When the memorized data is lost or damaged by any chance, Clarion shall not be liable for any damage.

When using a USB memory stick, we recommend that you backup your data stored on it before using a personal computer etc.

- Data files may be broken when using USB memory sticks in the following situation: When disconnecting the USB memory stick or turning the power off during reading data. When affected static electricity or electric noise. Connect/disconnect the USB memory stick when it is not accessed.
- Connecting with the computer is not covered.

3. CONTROLS

Operational Panel

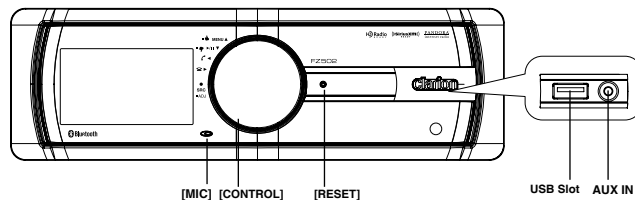

Names of Button

[CONTROL] Knob

- Power on (press)
- Power off (long press -> rotate it select "POWER OFF" ->press)
- Adjust volume level (rotate)
- Toggle the audio source (press)
- Previous/Next search (press - left/right)
- Select tuner band (press - up)(long press)

- BT mode – Terminate call
- RADIO mode – No function.
- HD RADIO mode – SUB channels select.
- SIRIUS mode – Direct search
- AUX mode – No function.
- USB mode – Search function
- iPod mode – iPod menu

[MIC] Hole

- Internal microphone

Remote Control (RCX003)

[SRC/⏻] Button

- Toggle the audio source
- Power on (short press) / off (long press)

[◀, ▶] Buttons

- Preset station up / down
- Previous / next track
- Search (long press)

[SCN/PS/AS] Button

- Scan play / Preset scan
- Auto memory store (long press)

[BAND/TOP] Button

- MP3/WMA mode – Top play (long press)
- HD RADIO mode – Select tuner band
- SIRIUS mode – Select tuner band/Select category (long press)

[▲, ▼] Buttons

- Volume up / down

[▶/||] Button

- Play / Pause

[ISR] Button

- Recall ISR station stored in memory
- Store current station in ISR memory (long press)
- iTunes Tagging (When connected with HD Radio tuner and displayed "DIGITAL" indicator and "TAG" indicator on display at HD Radio-mode.)

[DISP] Button

- Display switch

[RDM] Button

- Random play

[RPT] Button

- Repeat play

[MUTE] Button


- Mute the volume

[1-6] Buttons

- [1] Button: Preset station 1.
- [2] Button: Preset station 2.
- [3] Button: Preset station 3.
- [4] Button: Preset station 4.
- [5] Button: Preset station 5.
- [6] Button: Preset station 6.

[SOUND] Button

- Sound effect setting

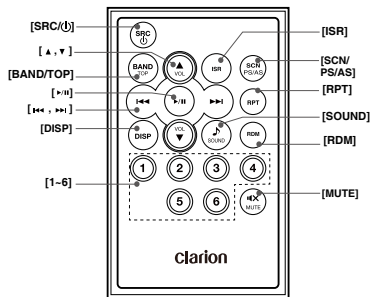

Notes of remote control using

Replacing the lithium battery of remote control unit.

When the range of the operation of the card remote control becomes short or no functions while operating. Replace the battery with a new lithium battery. Make sure the battery polarity replacement is correct.

1. Pull out the battery holder while pressing the stopper.
2. Insert the button-type battery with the stamped(+) mark facing upward.
Insert the battery holder into the remote control.



4. OPERATIONS

Basic Operations

Note:

- Refer to the diagrams in "3. CONTROLS" when reading this chapter.

CAUTION

When the unit is turned on, starting and stopping the engine with its volume raised to the maximum level may harm your hearings.

Be careful about adjusting the volume.

Power on / off

Notes:

- Start the engine before using this unit.
 - Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.
1. Start the engine. The power button / knob illumination on the unit will light up.



2. Press the [CONTROL] knob on the front panel or [SRC / ⏻] button on the remote control to turn off the power under standby mode. The unit goes back to the last status after power on.
3. Press and hold the [CONTROL] knob (center long press) on the front panel, and rotate the [CONTROL] knob choose POWER OFF, then press the [CONTROL] knob on the front panel to turn off the power.
Or press and hold [SRC / ⏻] button on remote control to turn off the power.

Mute

Press the [MUTE] button on the remote control to mute the volume from the unit.

Note:

Doing the operation above again or adjusting volume will release muting.

Volume adjustment

Turn the [CONTROL] knob on the front panel.
The adjustable range of volume is 0 to 40.

CAUTION

While driving, keep the volume level at which external sounds can be heard.

Playing source selection

Press [CONTROL] knob on the front panel repeatedly to choose desired playing source.

Notes:

- Playing source selection means selecting work mode, such as RADIO mode and AUX mode, etc.

 
Display system time

Press the [DISP] button on the remote control to switch the display information, system time and playing source.

RESET

Note:

* When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.



RESET

System Setup

At all mode, press and hold **[CONTROL]** knob (center long press), and rotate the **[CONTROL]** knob choose **ADJUST**, then press the **[CONTROL]** knob to enter system setup. Press **[CONTROL]** knob (left / right) to select options, rotate the **[CONTROL]** knob to adjust.

CLOCK

Press the **[CONTROL]** knob (right) to choose minute, and rotate the **[CONTROL]** knob to set minute.

Press the **[CONTROL]** knob (left) to choose hour, and rotate the **[CONTROL]** knob to set hour.

Then long press **[CONTROL]** knob (center) to confirm the time setting.

PASSWORD (SIRIUS mode)

Press the **[CONTROL]** knob to enter old password, rotate the **[CONTROL]** knob to select a digit, press the **[CONTROL]** knob (left / right) to move the cursor. Press the **[CONTROL]** knob to confirm after input all 4 digit. Then input a new 4-digit number as above. (Original password: 0000)

LOCK (SIRIUS mode)

Press the **[CONTROL]** knob to lock current station, rotate the **[CONTROL]** knob to select a digit, press the **[CONTROL]** knob (left / right) to move the cursor. Long press the knob to confirm after input all 4 digit password.

UNLOCK (SIRIUS mode)

Press the **[CONTROL]** knob to unlock all locked stations, rotate the **[CONTROL]** knob to select a digit, press the **[CONTROL]** knob (left / right) to move the cursor. Press the **[CONTROL]** knob to confirm after input all 4 digit password.

UNSKIP (SIRIUS mode)

Press and hold the **[CONTROL]** knob to unskip all channels.

DX/LO (RADIO mode)

Rotate the **[CONTROL]** knob to choose radio local or distant at **RADIO** mode.

- **LO:** Only stations with strong signal can be received.

- **DX:** Stations with strong and weak signals can be received.

PCH MEMO (RADIO/HD RADIO/SIRIUS mode)

Rotate the **[CONTROL]** knob to choose PCH 1 / PCH 2 / PCH 3 / PCH 4 / PCH 5 or PCH 6, press and hold **[CONTROL]** knob (center long press) to store it in the memory.

AUX SENS (AUX mode)

Rotate the **[CONTROL]** knob to choose AUX input sensitivity LOW, MID or HIGH at **AUX** mode.

AUTO CON (BT mode): ON/OFF

Rotate the **[CONTROL]** knob to choose AUTO CON ON or OFF.

PIN CODE

Press the **[CONTROL]** knob, rotate the **[CONTROL]** knob to select a digit, press the **[CONTROL]** knob (left / right) to move the cursor. Press the **[CONTROL]** knob to confirm.

The PIN CODE default setting is "0000".

MIC SEL (BT mode)

Rotate the **[CONTROL]** knob to choose microphone EXTERNAL or INTERNAL.

MIC GAIN (BT mode)

Rotate the **[CONTROL]** knob to choose Mic gain: 1, 2, 3, 4, 5.
You can change the gain of MIC when a telephone partner cannot hear your voice.

SCRN SVR: ON/OFF

Rotate the **[CONTROL]** knob to choose SCR N SVR (screen saver) ON or OFF.

SCROLL: ON/OFF

For track information that is longer than the display panel:

When **SCROLL** is ON, the LCD will display ID3 TAG information cyclely, e.g.: TRACK-> FOLDER-> FILE-> ALBUM-> TITLE-> ARTIST-> TRACK->...

When **SCROLL** is OFF, the LCD will display one of the ID3 TAG information, the default is TRACK, but user can adjust it to other ID3

System Setup

TAG information by pressing **[DISP]** button on the remote control.

S-CTRL (iPod mode) : ON/OFF

Rotate the **[CONTROL]** knob to choose S-CTRL (Simple control) ON or OFF.

* Refer to P18.

DIMMER: ON/OFF

Rotate the **[CONTROL]** knob to choose DIMMER ON or OFF.

- **ON:** LCD dimmer is active when small light of vehicle is turned ON.
- **OFF:** LCD always maximum brightness regardless of the vehicle small light.

REAR/S-W

Rotate the **[CONTROL]** knob to choose REAR or S-WOOFER(SUB-WOOFER).

SW PHASE

Rotate the **[CONTROL]** knob to choose REVERSE or NORMAL.

BEEP: ON/OFF

Rotate the **[CONTROL]** knob to choose button beep sound ON or OFF.

SOUND

Press the **[CONTROL]** knob to enter sound effect setting mode. First press shows current EQ. Rotate the **[CONTROL]** knob to choose BEAT EQ in this order:
OFF -> B-BOOST -> IMPACT -> EXCITE -> CUSTOM

To change CUSTOM setting, and press the **[CONTROL]** knob (center), then press **[CONTROL]** knob (right/left) to select EQ effects including: BASS-G -> BASS-F -> BASS-Q -> MID-G -> MID-F -> MID-Q -> TREBLE-G -> TREBLE-F, rotate the **[CONTROL]** knob to select a value.

BASS-G / MID-G / TREBLE-G: (-7) - (+7)

BASS-F: 50 / 100 / 200

BASS-Q: 0.7 / 1.0 / 1.4 / 2.0

MID-F: 500 / 1K / 2K

MID-Q: 0.7 / 1.0 / 1.4 / 2.0

TREBLE-F: 5K / 10K / 15K

TREBLE-Q: 0.7 / 1.0 / 1.4 / 2.0

Then press the **[CONTROL]** knob (left / right) to select USER preset including:

BALANCE -> FADER -> M-B EX -> HPF (high pass filter) -> LPF (low pass filter) -> S-W VOL (Subwoofer Volume), rotate the **[CONTROL]** knob to select a value.

BALANCE: LEFT 1-7 -> CENTER -> RIGHT 1-7

FADER: FRONT 1-7 -> CENTER -> REAR 1-7

M-B EX: ON/OFF

HPF: THROUGH/60/90/120

LPF: THROUGH/60/90/120

SUBW VOL: (-6) - (+6)

12/24H

Rotate the **[CONTROL]** knob to choose time format: 12 or 24 hour.

Radio Operations

Select tuner as playing source

Press the **[CONTROL]** knob or **[SRC / 0]** button on the remote control to switch to the **RADIO** source.

Select one radio band

Press the **[CONTROL]** knob (up long press) on the panel or **[BAND/TOP]** button on the remote control to select one radio band among FM1, FM2, FM3 and AM.

Manual tuning

During manual tuning, the frequency will be changed in steps.

Press the **[CONTROL]** knob (left/right) on the panel or **[◀▶]** buttons on the remote control to tune in a higher / lower station.

Auto tuning

Press and hold **[CONTROL]** knob (left/right) on the panel or **[◀▶]** buttons

Radio Operations

the remote control to seek a higher / lower station.

To stop searching, repeat the operation above or press other buttons having radio functions.

Note:

When a station is received, searching stops and the station is played.

Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [SCN/PS/AS] button on the remote control.
2. When a desired station is tuned in, press the [SCN/PS/AS] button on the remote control again to continue receiving that station.

Note:

Be careful not to press and hold the [SCN/PS/AS] button, otherwise the auto store function is engaged and the unit starts storing stations.

Auto store

Only stations with sufficient signal strength will be detected and stored in the memory. Press and hold the [SCN/PS/AS] button on the remote control to start automatic station

search.

To stop auto store, press other buttons having radio functions.

Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, such as FM1, FM2, FM3 and AM. FM3 and AM can store by AS function. Each bands can store 6 stations, FZ501 can store 24 stations in total.

Manual store

When one expected radio station has been detected, press and hold number button on the remote control 1-6 to store it in the memory.

Recall the stored stations

Press one numeric button among 1 to 6 on the remote control or on the panel to select the corresponding stored station.

Local seeking

When LOCAL seeking is on, only those radio stations with strong radio signal could be received.

Refer to System Setup page 9.

Note:

The number of radio stations that can be received will decrease after the local seeking mode is on.

Satellite Radio Mode

Listeners can subscribe to SIRIUS® Radio on the Web by visiting www.sirius.com, or by calling (888) 539-SIRIUS. Customers should have their SIRIUS ID ready (SIRIUS ID is located on the SC-C1 SIRIUS Connect Vehicle Tuner, sold separately). Customers can listen to music samples by tuning to channel 184.

Accessing satellite radio mode

Press the [CONTROL] knob or [SRC / ⏸] button on the remote control to switch to the SAT source.

Displaying the Identification (ID) Code

Before you listen to satellite radio, you must subscribe to the service using your radio's identification number. To display the radio ID, use the [CONTROL] knob (left) or [◀] tuning button on the remote control to tune to channel "0". The screen displays the radio ID where the channel name is usually displayed.

Check SC-C1 SIRIUS Connect Vehicle Tuner

Satellite Radio Mode

If SIRIUS tuner is not connected, "NO TUNER" will appear on the LCD.

Select a band

Press the the [CONTROL] knob (up long press) on the panel or [BAND/TOP] button on the remote control to change between three SAT bands (SR1, SR2 and SR3). Each band stores up to six preset stations.

Select a station

Press the [CONTROL] knob (left / right) on the panel or [◀, ▶] buttons on the remote control to tune to another station.

Preset mode

Six numbered preset buttons on the remote control store and recall stations for each band.

Preset scan

Short press the [SCN/PS/AS] button on the remote control to start category scanning. Long press the [SCN/PS/AS] button on the remote control to start preset station scanning for 10 seconds each.

Storing a station

1. Select a band (if needed), then select a station.
2. Press and hold a preset button (numbers 1-6) on the remote control.
3. The preset number and station is displayed and highlighted.

Recalling a station

1. Select a band (if needed).
2. Press a remote control preset button (numbers 1-6) to select the corresponding stored station.

Category and Channel search

To access Category and Channel Search mode, press the [CONTROL] knob (up long press) on the panel or [BAND/TOP] button on the remote control long press.

1. Rotate the rotary knob on the panel to select the desired category.
2. Press the [CONTROL] knob (left / right) on the panel or [◀, ▶] buttons on the remote control to select the channel name.

Direct search

To access Direct Search mode, press the [CONTROL] knob button on the front panel.

1. Rotate the [CONTROL] knob on the panel to select the desired direct, and press the [CONTROL] knob to confirm the selection.
2. Rotate the [CONTROL] knob on the panel or press the [▲] or [▼] button on the remote control to select the direct name, and press the knob to confirm the selection.

PASSWORD

Refer to System Setup page 9.

LOCK

Refer to System Setup page 9.

UNLOCK

Refer to System Setup page 9.

UNSKIP

Refer to System Setup page 9.

HD Radio Operations


About HD Radio™ Technology

HD Radio Technology allows CD-quality digital broadcasting of your local AM and FM radio stations. HD Radio broadcasts can include multiple channels on the same frequency, which is called multicasting. With multicasting, you can receive up to eight additional multicast channels: HD1–HD8.

With an HD Radio tuner connected, you will receive HD Radio digital broadcasts automatically when tuned to a station that offers HD Radio Technology.

NOTE: Not all FM or AM stations offer HD Radio (digital) broadcasting. You can receive both analog and digital stations with the unit.

Accessing radio mode

 
 
Press the [CONTROL] knob or [SRC / ] button on the remote control to switch to the HD RADIO source, and HD icon will illuminate.

Select a band



Press and hold the [CONTROL] knob (up long press) on the panel or [BAND/TOP] button on the remote control to change between three FM and one AM bands. Each band stores up to six preset stations.

Tuning

- Seek Tuning

Press and hold the [CONTROL] knob (left / right) on the panel or [ , ] buttons on the remote control to seek the next/previous station automatically.

- Manual Tuning

Press the [CONTROL] knob (left / right) on the panel or [ , ] buttons on the remote control to move the radio frequency number up or down one step.

HD Radio multicast channels

To tune to an HD Radio multicast channel, tune to the main signal and then press the [CONTROL] knob on the panel. PTY and SUB CH are displayed. Select PTY or SUB CH by rotate [CONTROL] knob and push to confirm.

- Select PTY type from the category list by rotate [CONTROL] knob and push.
- Select SUB CH by rotate [CONTROL] knob

and push.

- Multi channel is available when a digital signal is detected, the DIGITAL icon will illuminate. If the digital signal becomes unavailable, the unit will revert to Analog reception.

Preset stations

Up to six stations on each band can be stored as presets, which can then be instantly recalled by pressing the associated preset button. To store a station, turn the radio on and select the desired band and station. Press and hold the desired preset button (numbered one through six on the remote control). When stored, the preset number will appear in the display. The station is now stored and can be recalled by pressing the corresponding preset button. Repeat for the remaining five presets on the current band and for presets on the other four bands.

NOTE: Multicast stations can be stored as presets, but the unit must be in Digital or Auto reception mode to receive them.

Preset scan

Press [SCN/PS/AS] button on the remote control to scan and play all preset stations for 10 seconds each. Press [SCN/PS/AS] button on the remote control again to stop scanning and play the current station.

Note:

Be careful not to press and hold the [SCN/PS/AS] button on the remote control, otherwise the auto store function is engaged and the unit starts storing stations.

Automatic store (AS)

Press the [SCN/PS/AS] button on the remote control to select six strong stations and store them in the FM3 or AM band using the auto store function. After entering the stations into memory, the unit will automatically stop at each station for five seconds, allowing you to preview each selection. When using the auto store function, the new stations replace any stations already stored in preset memory.

Note:

You can stop the auto store function at any time by pressing the [SCN/PS/AS] button on the remote control again.

iTunes® Tagging

The unit offers iTunes® Tagging, which allows the user to "Tag" songs playing on HD Radio™ stations for purchase later through iTunes. When press [ISR] button on the remote control, the unit stores the title and artist song information that can then be transferred to your iPod when connected to the unit. A list titled "Tagged" will appear in iTunes, allowing you the option to purchase your tagged songs.

Note:

"iTunes® Tagging" function works by connecting THD301 (sold separately).

iPod compatibility

For detailed information on the playable iPod models, see our home page: www.clarion.com

Note:

- iPhones can also be connected to this system and "iPod" appearing in this manual should be referred to as "iPod/iPhone".
- This system will not operate or may operate improperly with unsupported versions.

Tagging music

To begin tagging music, tune to an HD Radio station. The DIGITAL icon at the display must be illuminated, indicating a digital station is being received. TAG icon lights up when Tagging function is ready. Press the [ISR] button on the remote control. The tagging function is highly depends on the receptions of the radio station. If the channel reception is insufficient, it will effect the operation of the tagging function.

"Stored Tag ## of 64" will appear in the display. The song information is saved to the unit memory until your iPod is connected. You can tag up to 64 songs before the tags must be transferred to your iPod or deleted. When the Tag memory reaches capacity (64 tags) the bottom of the screen displays "Memory Full".

Table 5: TAG Messages

Tag Message	Reason
STORED TAG ## OF 64	If the Tag data is ready, and [ISR] button on the remote control is pressed
SENDING TAG ##	Tag data is sending to iPod

MEMORY FULL	Tag storage is full
TAG DATA IS NOT AVAILABLE	Tag data is not available
iPOD FULL	iPod memory is full
TAG NOT SUPPORT	When connect and press [ISR] button on the remote control, the iPod without Tagging function

Note:

Tags saved to your iPod can be managed using the iTunes software, available at www.apple.com/itunes.

Downloading tags to your iPod

To download tags to your iPod, plug your iPod into the unit. All existing tags are automatically transferred to the iPod and deleted from the head unit's memory. If your iPod is connected when a song is tagged, the Tag will be immediately transferred to the iPod.

Note:

When transferring Tags to your iPod, the unit must remain in HD RADIO mode. To purchase tagged songs, you must sync your iPod to iTunes and then click the "Tagged" list on the left side of the iTunes software screen. Click the "view" button for purchasing information.

Note:

- How to enter the iTunes tagging function? "TAG" and "DIGITAL" light up when Tagging function is ready, press [ISR] button on the remote control to start iTunes Tagging.
- What is seen on the radio's display to let me know I have tagged the tune? Press [ISR] button on the remote control to show "STORED TAG ## OF 64". After connect to your iPod, the display shows "SENDING TAG ##". If no connection, the display will show "STORED TAG ## OF 64". You could save 64 Tag into E2PROM in total. When you connect to your iPod, Tag information will be saved in the iPod, and the data in E2PROM will be cleared.
- Then how do I get the tagged tune from my iPod to the computer? If you have install iTunes, connect your iPod to your computer and buy songs online.



SiriusXM Satellite Radio Operations

SiriusXM Tuner operation:

When a SiriusXM Tuner is connected to this unit, the following operations may be performed.

Receiving Channels with the SiriusXM Tuner

About SiriusXM Satellite Radio

Everything worth listening to is on SiriusXM. get over 130 channels, including the most commercial-free music, plus the best sports, news, talk and entertainment. A SiriusXM Tuner and Subscription are required. For more information, visit www.siriusxm.com.

Notes:

- The SiriusXM Tuner Satellite Radio controls on this unit are available only when a SiriusXM Tuner is connected.

- Press [SRC / ϕ] button to activate the Satellite Radio (SIRIUSXM) mode.
- Press [◀◀] or [▶▶] to select the desired channel.

Holding down [◀◀] or [▶▶] will rapidly browse through the channels. alternatively, you can enter the number of the desired channel using the numeric keypad on an optional remote control.

Checking the SiriusXM Radio ID Number

To subscribe to the SiriusXM Satellite Radio service, it is necessary to locate and identify the Radio ID of your SiriusXM Tuner. The Radio ID contains 8 characters and can be found on the bottom of your SiriusXM Tuner or can be displayed on when selecting Channel 0 by following the steps below:

- While in the Satellite Radio Mode, press [◀◀] or [▶▶] to select channel "0". The unit displays "RADIO ID" and ID number alternately.

Notes:

- The Radio ID does not include the letters I, O, S or F.
- To cancel the ID number display, select a channel other than "0".

Storing Channel Presets

- Press [BAND] to select the desired band you want to store the preset in. There are 3 Satellite Radio Preset bands. Each press of [BAND] changes the band: SXM1 -> SXM2 -> SXM3 -> SXM1

- Tune to the desired channel and then press and hold one of the preset buttons (1 through 6), for at least 2 seconds, to store the channel.

The display then shows the stored Band and p r e s e t number (for example, SXM1-3 is shown when preset 3 of band 1 is selected).

- Repeat the procedure to store up to 5 other channels on to the same band.

Notes:

- A total of 18 channels can be stored in the preset memory, 6 channels for each band (SXM1, SXM2 and SXM3).
- If you store a new channel into a preset which the new one.

Tuning Channels using Presets

- Press [BAND] to select the desired band of Presets you wish to access.
- Press the preset buttons (1 through 6) that has your desired Satellite Radio channel stored in memory.

Category Browsing

- Press [▲] or [▼] to select the SiriusXM mode to activate the Category Browsing mode.
- Press [▲] or [▼] to select desired category.
- Rotate the [VOLUME] knob to select to desired channel within the selected Category, and then press [VOLUME] enter.

Notes:

- If no operation is performed for 10 seconds, the Category Browsing mode is canceled.

Tuning Channels using Presets

While listening to SiriusXM Satellite Radio, you can be alerted when your favorite songs or artists are playing on other channels. An interruption ALERT will be displayed when a matching artist or song is found on another channels.

- Press and hold FUNC./VIEW for at least 2 seconds when a Song or the song of an Artist you want to store is playing. The [F] indicator lights up.
- Press the 1 (preset) button to store the Artist/Song. A note to memorize the ART(artist

SiriusXM Satellite Radio Operations

name) or the SNG(song title) is displayed.

Notes:

- If either the artist or song title is not available to save, UNAVAILABLE will be displayed.
- Rotate the [VOLUME] knob to choose SAVE ART or SAVE SNG(when available) and then press [VOLUME] knob enter.
 - The new alert was stored in memory. An "ART/SONG SAVED" pop-up screen is following by an "XU(sed)/YE(mpty)". X is the total number of song titles or artist names stored in memory, and Y is the total number of memory locations still available for storage.

Notes:

- If you try to store when memory is full, "MEM FULL" is displayed followed by "REPLACE/CANCEL". If you want to replace an existing alert item, select "REPLACE" by rotating the [VOLUME] knob, and then press [VOLUME] enter, the existing alert list stored in memory is displayed. Select one of the stored alerts using the [VOLUME] knob. To replace the selected alert, press [VOLUME] knob and an "ART/SONG SAVED" pop-up screen is followed by an "XU(sed)/YE(mpty)".
- You can manage the stored Alert memory setting on setup mode.
- If no operation is performed for 10 seconds, the setting mode is canceled.

Receiving and Tuning to an Alert

Whenever a stored sports team, artist, or song is playing on another channel, an interruption ALERT appears on the unit display. To tune to game, artist or song identified by the alert, follow the steps below:

- Rotate the [VOLUME] knob to select the desired game, artist or song from the list of active alerts.
- Press [VOLUME] knob enter.

Notes:

- If no operation is performed for 5 seconds, the unit returns to normal mode.
- Sports teams/Artist name and Song title which you have stored and which are currently playing will be displayed in a category called "MY GAMES"/"MY MUSIC" in search mode.

Search Function

You can search for SiriusXM programming content by Category or by Channel.

- Press [VOLUME] knob in the SiriusXM mode.
- Rotate the [VOLUME] knob to select the desired Category/Channel, and then press [VOLUME] knob enter.

Notes:

- During channel search, pressing [▲] or [▼] to select another Category.

Receiving and Tuning to an Alert

- When SiriusXM mode, select your favorite SiriusXM Channel.
- Press and hold [F] for at least 2 seconds. The channel you selected is stored as the jump Source.
- Press and hold [▲] for at least 2 seconds to recall and tune to the saved jump Source channel.

Notes:

- Pressing and holding [▲] again for at least 2 seconds will jump back to the previous mode or SiriusXM channel.

Instant Replay Function

When SiriusXM mode, you can pause, rewind and replay up to 30 minutes of live SiriusXM Satellite Radio.

- While listening to a SiriusXM channel, press [▶|] to enter the Replay mode, which mutes the audio. The display will show "PAUSE" while in this mode.
- Press [▶|] again to resume playback of the stored audio from the point at which it was paused.

During playback, the SiriusXM Tuner will continue to store the channel audio until you exit the Instant Replay mode (up to 30 minutes).

During REPLAY playback:

- Fast rewind: Press and hold [◀◀].
- Fast forward: Press and hold [▶▶].
- Returning to the beginning of the current song: Press [◀◀]. (If you press [◀◀] in the first 2 seconds of a song, you return to the beginning of the previous song.)
- Advancing to the beginning of the next song: press [▶▶].



SiriusXM Satellite Radio Operations

Notes:

- If you continue to press Fast forward until the end, the Instand Replay mode is canceled, and the unit will change to live SiriusXM radio mode.
- If you change channels while in Replay mode, the unit will exit Replay mode to live Satellite Radio mode and clear the Replay memory.

Using iTunes tagging

iTunes Tagging lets you tag songs you hear on SiriusXM channels with your new CZ702 and then preview, buy, and download then later from your iTunes Tagged playlist the next time you sync your iPod/iPhone.

Notes:

- For details on the iPod/iPhone modes usable with this unit, refer to "Connecting an iPod/iPhone" on page 9.

1. A song may be tagged while listening to a SiriusXM channel if the display shows the "Tag" icon.
2. Press and hold Tag for at least 2 seconds while the desired song is playing. The "Tag" blinks at the same time the "TAGGING" is displayed.
3. When completed, "TAG STORED" is displayed and the "Tag" indicator lights up.

Notes:

- During tagging, the iPod/iPhone takes priority to save the tag information. If no iPod/iPhone is connected, the tag information is saved to this unit.
- When the memory of iPod/iPhone is full, "iPod FULL" is displayed. The tag information will be stored to the unit.
- If the tagging operation is interrupted by a source or channel change, the tagging operation will be canceled and the unit may not display "CANNOT TAG".
- This unit can store up to 50 pieces of tag information. When the memory of the unit is full, "MEMO FULL" may be displayed.
- When iPod/iPhone that doesn't support the tagging function is connected, "NON-TAGGING IPOD" may be displayed.
- When the iPod/iPhone is disconnected from the unit during tagging, its tag information will be stored in the unit.

- If there is stored tag information on the unit, when an iPod/iPhone supporting the tag function is connected, the stored tag information will be transferred to be iPod/iPhone automatically. When the iPod/iPhone memory becomes full, "iPod FULL" will be displayed, and any remaining tag information on the unit will not be transferred to the iPod/iPhone.
- If tag information already exists, "ALREADY TAGGED" will be displayed when you try to tag information again.
- Tagging may be canceled by changing the frequency or station, and the message "CANNOT TAG", etc, may not be displayed.
- If a song is tagged and the remaining storage volume of the connected iPod/iPhone is sufficient to hold the song's tag information, it will be saved on the iPod/iPhone.
- If there is stored tag information on CZ702, when iPod/iPhone models supporting the tag function are connected, the Tag information will be transferred to be the iPod/iPhone with which the USB terminal is activated automatically. When the iPod/iPhone memory becomes full, "iPod FULL" will be displayed, and any remaining tag information on the unit will not be transferred to be iPod/iPhone.


Changing the Display

Text information, such as the channel name, artist name/feature and song/program title, is available with each SiriusXM channel. The unit can display this text information as explained below.

1. In SiriusXM mode, press VIEW. Each time you press this button, the display changes as shown below.
Band/channel Number -> Clock -> Channel Name* -> Artist Name* -> Song Title* -> Content info.* -> Category Name* -> Band/Channel Number
* If there is no text information, nothing will be displayed.

USB Operations

1. Move the cover of the USB slot to the left. Insert a USB cable (CCA-755) into the USB slot. Insert a USB device into the USB cable.
When connecting a USB device, the unit will read the files automatically.
2. To remove the USB device, you should first select another source or turn off the power, in order to avoid damaging the USB device. Then take off the USB device. Move the cover to the right.

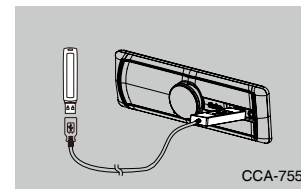

CCA-755

Pausing play

1. Press the [▶||] button on the remote control to pause play.
"PAUSE" appears in the display.
2. To resume MP3/WMA play, press the [▶||] button on the remote control again.

Selecting a track

Track-up

1. Press the [CONTROL] knob (right) on the panel or [▶] button on the remote control to move to the beginning of the next track.
2. Each time you press the [CONTROL] knob (right) on the panel or [▶] button on the remote control, the track advances to the beginning of the next track.

Track-down

1. Press the [CONTROL] knob (left) on the panel or [◀] button on the remote control to move back to the beginning of the current track.
2. Press the [CONTROL] knob (left) on the panel or [◀] button on the remote control twice to move back to the beginning of the previous track.

Fast-forward/Fast-reverse

Fast-forward

Press and hold the [CONTROL] knob (right) on the panel or [▶▶] button on the remote control.

Fast-reverse

Press and hold the [CONTROL] knob (left) on the panel or [◀◀] button on the remote control.
* For MP3/WMA USB device, it takes some time until the start of searching and between tracks. In addition, some errors may occur in the play time.

Folder Select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

1. Press and hold [CONTROL] knob (up) on the panel.
Press and hold [CONTROL] knob (up) on the panel to move the next folder.
2. To select a track, press the [CONTROL] knob (right / left) on the panel or [◀▶] button on the remote control.

Search Function

1. Press the [CONTROL] knob (up) to enter FOLD SCH mode, and press [CONTROL] knob (center) to confirm, then rotate [CONTROL] knob to select the folder list search mode.
2. Rotate the [CONTROL] knob to select a folder.
3. Press the [CONTROL] button (center) to enter the file list search mode. And then the track list appears in the display.
4. Turn the [CONTROL] knob to select a track.
5. Press the [CONTROL] knob (center) to play.
* When play back MP3 / WMA file, this function is performed in the current folder.

Top function

The top function resets the USB player to the first track of the USB device. Press and hold the [CONTROL] knob (down) to play the first track (track No. 1) on the USB device.

- * In case of MP3/WMA, the first track of the current folder will be played.

USB Operations

Other various play functions

Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a USB.
Press the [**SCN/PS/AS**] button on the remote control to perform scan play.

Repeat play

This function allows you to play the current track repeatedly or play a track currently being played in the MP3/WMA folder repeatedly.

1. Press the [**RPT**] button on the remote control once or more until "TRK RPT" appears on the display to perform repeat play, and "RPT" segment lights on.

2. For MP3/WMA files, press [**RPT**] button on the remote control repeatedly until "FOLD RPT" appears on the display for folder repeat play.
3. Press [**RPT**] button on the remote control repeatedly until "RPT OFF" appears on the display to cancel repeat playback, and "RPT" segment goes off.


Random play

This function allows you to play all tracks recorded on a USB device in a random order. Press the [**RDM**] button on the remote control to perform random play.

iPod & iPhone Operations

Connect

Connect your iPod or iPhone to the USB slot via CCA-748 cable.
When connecting a device, the unit will read the files automatically. The track information display on the screen once playback start.

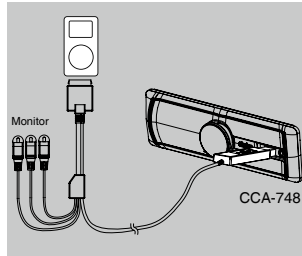

MENU

In the S-CTRL OFF mode, press the [**CONTROL**] knob (up), rotate the knob select "MUSIC" or "VIDEO".

Select "MUSIC", press the [**CONTROL**] knob, then rotate the [**CONTROL**] knob to show PLAY LISTS / ARTISTS / ALBUMS / GENRES / SONGS / COMPOSERS, then press the [**CONTROL**] knob to confirm.

Select "VIDEO", press the [**CONTROL**] knob, then rotate the [**CONTROL**] knob to show MOVIES / MUSIC VIDEO / TV SHOWS / VIDEO PODCASTS / RENTALS, then press the [**CONTROL**] knob to confirm.

NOTE:

- In case of VIDEO Playback, CCA-748 cable and monitor (sold separately) are required.
- VIDEO MENU item is different by the model of connected iPod and language setting.

iPod & iPhone Operations

Random play

This function allows you to play all tracks in a random order.

1. Press the [**RDM**] button on the remote control once or more until "RDM ALBUM" appears on the LCD for album random play.
2. Press the [**RDM**] button on the remote control once or more until "RDM SONG" appears on the LCD to perform random play.
3. Press the [**RDM**] button on the remote control once or more until "RDM OFF" appears on the LCD to cancel random playback.

Setting iPod simple control mode

Use this function if you wish to operate through your iPod connected to this unit via the USB cable.

* The factory default setting is " OFF ".

1. Press and hold [**CONTROL**] knob (center), and rotate the [**CONTROL**] knob choose **ADJUST**, then press the [**CONTROL**] knob (center) to enter system setup.
2. Press the [**CONTROL**] knob (left / right) to select " S-CTRL".
3. Rotate the [**CONTROL**] knob to select " ON " or " OFF ".
 - **ON**: Operations are made through your iPod.
 - **OFF**: Operations cannot be made through your iPod.

Notes:

- When performing iPod operations using simple control mode, make the operations slowly. If repetitive operations are performed too quickly, unforeseen errors may occur.
- When performing iPod operations using simple control mode, please do not operate the iPod and the unit at the same time, otherwise there may be unexpected event happened.
- Some iPod models do not support this function. Consult your nearest Clarion dealer or website to confirm which models do not support this function.

iPod menu alphabet search

This function searches the subfolders for desired alphabetical letters.

1. Press the [**CONTROL**] knob (up), and rotate [**CONTROL**] knob to select the iPod menu mode.
2. Rotate the [**CONTROL**] knob to switch between categories.
MUSIC: PLAYLISTS, ARTISTS, ALBUMS, GENRES, SONGS, COMPOSERS
VIDEO: MOVIES, MUSIC VIDEOS, TV SHOWS VIDEO PODCASTS, RENTALS
3. Press the [**CONTROL**] knob. (The contents of the category are displayed.)
4. Press and hold the [**CONTROL**] knob (down).
5. Rotate the [**CONTROL**] knob to select the desired letter to search.
6. Press the [**CONTROL**] knob to perform search.

AUX Operations

Press the [**CONTROL**] knob on the panel or [**SRC**] button on the remote control once or more to select "AUX".

AUX is just for audio content with 3.5mm Jack connector plugged into audio-in socket on the front panel on the right of USB slot.

AUX Input sensitivity setting

1. Press and hold the [**CONTROL**] knob .
2. Turn the [**CONTROL**] knob to select "AUX SENS".

3. If the output level of connected external audio player is "HIGH", rotate the [**CONTROL**] knob and choose "LOW". And if the output level is "LOW", choose "HIGH".

Bluetooth Operations

The Bluetooth allows you to utilize your car's built-in audio system for wireless mobile phone or music handsfree communication. Some Bluetooth mobile phones have the audio features, and some portable audio players support Bluetooth feature. This system can play audio data stored in a Bluetooth audio device. The car stereo with Bluetooth will be able to retrieve phonebook contacts, received call, dialed call, missed call, incoming calls, outgoing call and listen to music.

Note:

- Leaving it exposed to high temperatures or direct sunlight can cause distortion or discoloration which may result in a malfunction.
- This system will not operate or may operate improperly with some Bluetooth audio players.
- Clarion cannot guarantee the compatibility of all mobile phones together with unit.
- Audio playback will be set to the same volume level as set during telephone call. This might cause problems, if extreme volume level is set during telephone call.

Handsfree Operations

Pairing

- Turn on Bluetooth function of your mobile phone.
- Enter mobile phone's Bluetooth setup menu.
- Search for new Bluetooth devices.
- Select **F2502** from the pairing list on the mobile phone.
- Enter **"0000"** as the password (The password default setting is **"0000"**).
- After pairing successfully, the unit will enter Bluetooth mode automatically, and **"BLUETOOTH CONNECTED"** will appear on the LCD.

Making a call

Operation from Bluetooth menu

Press the **[CONTROL]** knob to switch the source to **"BLUETOOTH"**.

• Dial Number

Press and hold the **[CONTROL]** knob (center) choose **ADJUST**, then rotate the **[CONTROL]** knob select **CALL LST.**

- Press the **[CONTROL]** knob.

- Rotate the **[CONTROL]** knob on the front panel to switch: **DIAL NUMBER / DIALLED CALL / MISSED CALL / RECEIVED CALL / MEMORY PHONEBOOK / SIM PHONEBOOK**
- Press the **[CONTROL]** knob to confirm the selection, **"WAITING"** will appear on the LCD.
- Press the **[CONTROL]** knob to dial.
- Press the **[CONTROL]** knob to dial.
- Press the **[CONTROL]** knob (right) to terminate call.

• Dialed/Missed/ Received Call History

You can search any Dialed/Missed/Received Call History.

- Rotate the knob to select **"DIALED CALL"**, **"MISSED CALL"** or **"RECEIVED CALL"**.
- Press the knob to enter the selected call history.
- Rotate the **[CONTROL]** knob to scroll the contacts.
- When the contact name or mobile phone No. is displayed, press the **[CONTROL]** knob (center) to call the mobile phone No. of that contact.
 - Press the **[CONTROL]** knob (right) to end the call.

• Call from Phonebook

User can search the contact name in the phonebook and make call.

- Rotate the **[CONTROL]** knob to select **"SIM PHONE BOOK"** or **"MEMORY PHONE BOOK"**.
- Press the **[CONTROL]** knob (center) to enter the selected phonebook.
- Rotate the **[CONTROL]** knob to scroll the contacts.
- When the contact name is displayed, press the **[CONTROL]** knob (center) to call the mobile phone No. of that contact.
 - Press the **[CONTROL]** knob (right) to end the call.

• Answering a call

You can answer an incoming call by pressing the **[CONTROL]** knob.
 * Press the **[CONTROL]** knob (right) to reject an incoming call.

Audio Streaming Operations

What is audio streaming?

Audio streaming is a technique for transferring

Bluetooth Operations

audio data such that it can be processed as a steady and continuous stream. Users can stream music from their external audio player to their car stereo wirelessly and listen to the tracks through the car's speakers. Please consult your nearest **Clarion** dealer for more information on the product of wireless audio streaming transmitter offered.

CAUTION

Please avoid operating your connected mobile phone while audio streaming as this may cause noise or sound choppy on the song playback.

Audio streaming may or may not resume after telephone interrupt as this is dependent on mobile phone.

System will always return to Radio mode if audio streaming is disconnected.

Note:

Be sure to read the chapter "Pairing" before proceeding.

Play / Pause a track

- Push the **[CONTROL]** knob (down) to pause audio playback.
- To resume audio playback, push the **[CONTROL]** knob (down) again.

Selecting a track

Track-up

- Press the **[CONTROL]** knob (right) to move to the beginning of the next track.
- Each time the **[CONTROL]** knob (right) is pressed, playback proceeds to another track in the advancing direction.

Track-down

- Press the **[CONTROL]** knob (left) to move to the beginning of the previous track.
- Each time the **[CONTROL]** knob (left) is pressed, playback proceeds to previous track in the reverse direction.

Note:

Playing order will depend on Bluetooth audio

5. TROUBLE SHOOTING

GENERAL

Problem	Cause	Measure
Unit can not power on.	Unit fuse blown.	Replace with new fuse of correct rating.
	Car battery fuse blown.	Replace with new fuse of correct rating.
Unit can not power on. Nothing happens when buttons are pressed.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power. Press the [RESET] button with a thin rod.
Display is not accurate.		Note: When the [RESET] button is pressed, turn off the ACC power.* * When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.
No/low audio output.	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
Poor sound quality or distortion.	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
Unit resets itself when engine is off.	Speaker is shorted.	Check wiring and correct.
	Incorrect connection between ACC and Battery.	Check wiring and correct.

USB Devices

Problem	Cause	Measure
USB device cannot be inserted.	The USB device has been inserted with wrong direction.	Reversing the connection direction of the USB device, try it again.
	The USB connector is broken.	Replace with a new USB device.
USB device is not recognized.	The USB device is damaged.	Disconnect the USB device and reconnect. If the device is still not recognized, try replacing with a different USB device.
	Connectors are loose.	
No sound heard with the display "No File" shown.	No MP3/WMA file is stored in the USB device.	Store these files properly in the USB device.
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.

Bluetooth

Problem	Cause	Measure
Cannot pair the Bluetooth enabled device with the car audio system.	The device does not support the profiles required for the system. The Bluetooth function of the device is not enabled.	Use another device to connect. Refer to the user manual of the device for how to enable the function.
The audio quality is poor after connection with a Bluetooth-enabled device.	The internal microphone gain is not set correctly. The external microphone is not set correctly nor properly positioned.	Adjust the gain of the internal microphone in System Setup. Adjust the gain and position of the external microphone. For example, stick the microphone onto the dashboard so it is close to the driver.

6. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed. Take the measures described below to solve the problem.

Display	Cause	Measure
ERROR 2	Do not support iPod & iPhone.	Change another device. * The head unit will return to RADIO mode.

If an error display other than the ones described above appears, press the **[RESET]** button. If the problem persists, turn off the power and consult your store of purchase.

* When the **[RESET]** button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.

7. SPECIFICATIONS

FM Tuner

Frequency range: 87.9-107.9MHz
 Usable sensitivity: 8dBμ
 Frequency response: 30Hz-15kHz
 Stereo separation: 30dB(1kHz)
 Signal/noise ratio: >55dB

AM Tuner

Frequency range: 530-1710kHz
 Usable sensitivity (S/N=20dB): 30dBμ

MP3/WMA mode

MP3 sampling rate: 8 kHz to 48 kHz
 MP3 bit rate: 8 kbps to 320 kbps / VBR
 WMA bit rate: 8 kbps to 320 kbps
 Logical format: ISO9660 level 1.2
 Joliet or Romeo file system

USB

Specification: USB 1.0/2.0
 Playable audio format:
 MP3(.mp3); MPEG 1/2/Audio Layer-3
 WMA(.wma); Ver 7/8/9.1/9.2

Bluetooth

Specification: Bluetooth Ver. 2.0+EDR
 Profile: HFP (Hands-free Profile)
 PBAP(Phone Book Access Profile)
 A2DP (Advanced Audio Distribution Profile)
 AVRCP (AV Remote Control Profile)
 Send/Receive Sensitivity: Class 2

Audio Amplifier

Maximum power output:
 200W (50W x 4)
 Speaker impedance: 4Ω (4 to 8Ω allowable)


Input

Audio input sensitivity:
 High: 320mV (at 1V output)
 Mid: 650mV (at 1V output)
 Low: 1.3V (at 1V output)
 (input impedance 10 kΩ or greater)

Aux-in level: ≤2V
 FZ502

General

Power supply voltage:
 14.4VDC (10.8 to 15.6V allowable),
 negative ground
 Fuse: 15A
 Dimensions of the Main Unit:
 188mm Width x 58mm Height x 190mm Depth
 7-2/5(width) x 2-7/25(Height) x 7-12/25(Depth)
 Weight of the Main Unit: 1.94lb. (0.88kg)
 Dimensions of the Remote Control unit:
 52mm Width x 7.5mm Height x 85.5mm Depth
 2-3/64(Width) x 19/64(Height) x 3-11/32(Depth)
 Weight of the Remote Control Unit:
 0.77oz. (24g) (including battery)

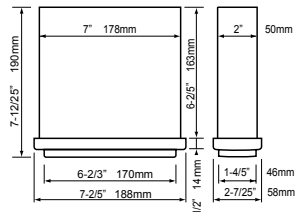

Notes:

- Specifications and design are subject to change without notice for further improvement.

Power Output:
 18W x 4 Channels RMS
 (40 @ 14.4V ≤ 1% THD+N)

Signal to Noise Ratio:
 79 dBA (reference: 1 W into 4 Ω)



8. INSTALLATION / WIRE CONNECTION GUIDE

CONTENTS

1) Before Starting	25
2) Package Contents	25
3) General Cautions	25
4) Cautions on Installation	26
5) Installing the Source Unit	26
6) Removing the Source Unit	28
7) Wiring and Connections	29
8) Connecting the accessories	30

1) Before Starting

- This set is exclusively for use in cars with a negative ground 12 V power supply.
- Read these instructions carefully.
- Be sure to disconnect the battery "terminal" before starting. This is to prevent short circuits during installation. (Figure 1)

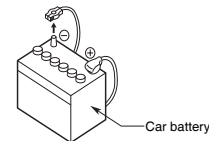


Figure 1

2) Package Contents

Source unit	1	Wire connector	1
Trim ring	1	Owner's manual	1
Mounting bracket	1	Warranty card	1
Screws M5x6 mm	4	Remote control (with battery)	1
L-key	2		

3) General Cautions

- Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized **Clarion** service center.
- Use a soft, dry cloth to clean the case. Never use a rough cloth, thinner, benzene, or alcohol etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

4) Cautions on Installation

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane. (Figure 2)
3. If you have to do any work on the car body, such as drilling holes, consult

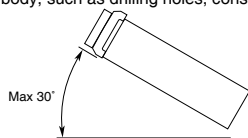


Figure 2

- your car dealer beforehand.
4. Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)

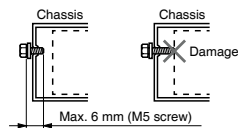


Figure 3


5) Installing the Source Unit

1. Place the mounting bracket into the instrument panel, use a screwdriver to bend each stopper of the mounting bracket inward, then secure the stopper.
2. Wire as shown in Section 7).
3. Insert the source unit into the mounting bracket until it locks.
4. Take care of the top and bottom of the trim ring and mount it so that all the hooks are locked.

Notes:

1. Some car models require special mounting kits for proper installation. Consult your **Clarion** dealer for details.
2. Fasten the front stopper securely to prevent the source unit from coming loose.

• Console opening dimensions

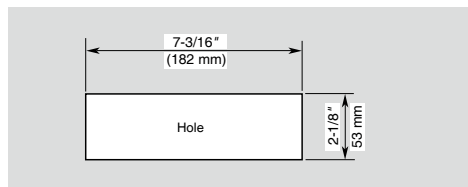


Notes of installation



1. Before installation, please make sure proper connections are conducted and the unit operates normally. Improper connection may result in damage to the unit.
2. Use only accessories designed and manufactured for this unit and other unauthorized accessories may result in damage to the unit.
3. Before installation, please fasten all power cables.
4. DO NOT install the unit in the place where close to hot area to prevent damage to electrical components such as the laser head.
5. Install the unit horizontally. Installing the unit more than 30 degree vertically may result in worse performance.
6. To prevent electric spark, connect the positive pole first and then the negative pole.

7. DO NOT block the cooling fan exit to ensure sufficient heating dissipation of this unit, or it may result in damage to this unit.

Unit installation Method A

 1. Insert mounting bracket into dash board, choose appropriate mounting tab according to the gap width, bending the mounting tab outwards with a screwdriver to fix the mounting bracket in place.
2. Slide the unit into the bracket until you hear a click sound.

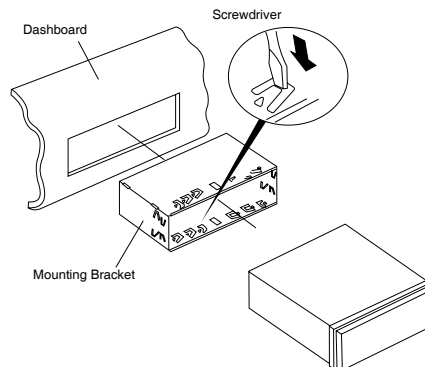

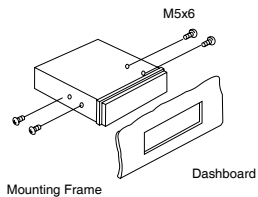Method B

 
1. Insert this unit directly to the opening of the dashboard.
2. Place M5x6 cylindrical screw through the holes of the mounting frame located inside the opening to holes of the unit and fasten the screws to left and right.

Trim ring installation


Attach the trim ring around the front panel.

6) Removing the Source Unit**Disassemble trim ring**



1. Push the trim ring to right and pull out the right part.




 2. Push the trim ring to left and pull out the left part.

**Disassemble the unit**

 1. Switch off the power.
2. Remove the trim ring.
3. Insert the removal keys straight back until they lock, then pull the unit out.
4. Disconnect all the wires.

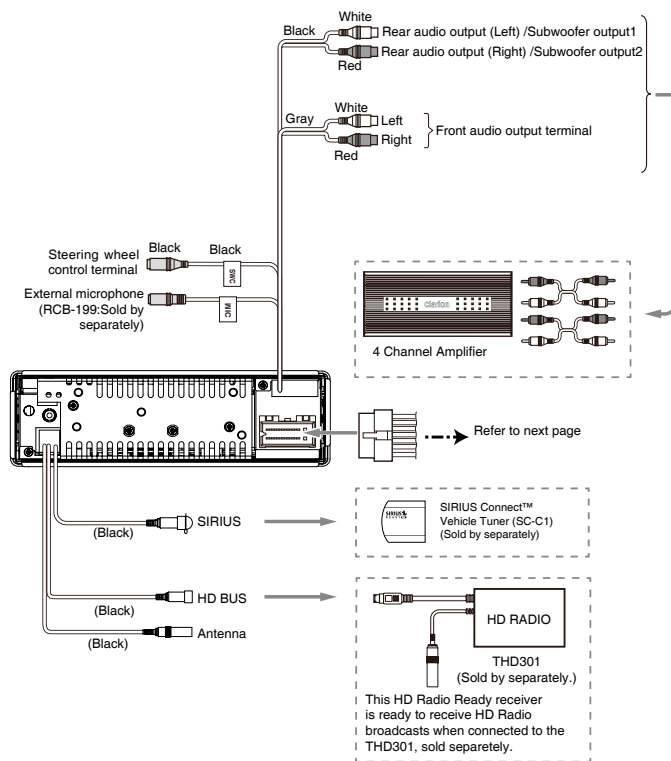**7) Wiring and Connections**

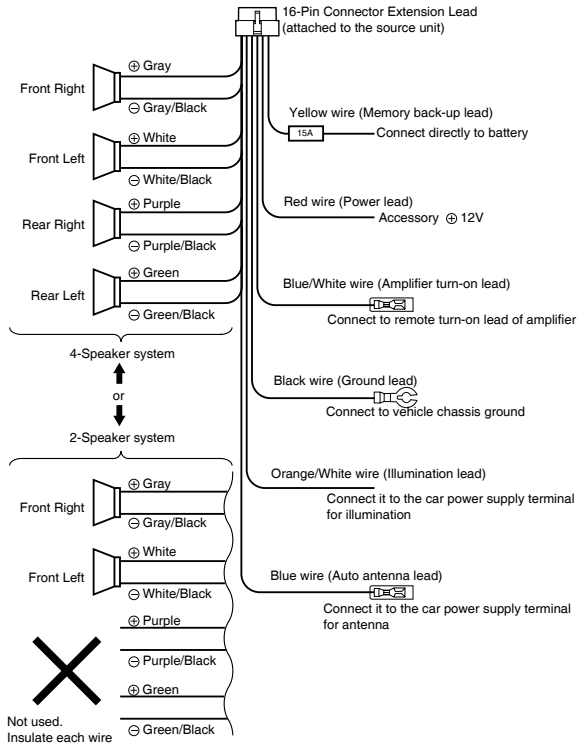

8) Connecting the accessories

• Connecting to the external amplifier

External amplifiers can be connected to the 4 channel RCA output connections. Ensure that the connectors are not grounded or shorted to prevent damage to the unit.