

# Squier<sup>®</sup> by Fender<sup>®</sup>

## Electronic Tuner Instructions



- 1) For electric instruments, insert the cable in the "IN" jack.
- 2) The "Out" jack is provided to use your tuner in line with other electric devices, without affecting the sound. To use this feature connect the cable from your amplifier to this jack.
- 3) For other instruments, position the tuner so that the instrument sound source is within 4-6 inches of the "Mic" holes on the front of the tuner.
- 4) Press the On/Off switch, making sure it is depressed (In).
- 5) If you are using a guitar (or any other higher pitched instrument) make sure the "Guitar/Bass" button is released (Out). If you are using a bass make sure the "Guitar/Bass" button is depressed (In).
- 6) The note "E" should be lit up to begin tuning to that note.
- 7) If you wish to tune to another note press the "String" button until it get to the note you would like.
- 8) While tuning, if the needle stops to the left of the "0" the pitch of the note is flat. Adjust the instrument tuning and play the note again. If the needle stops to the right of the "0" the pitch of the note is sharp. Adjust the instrument tuning and play the note again. Repeat until the needle lines up under the "0" on the meter. The note is then in tune.
- 9) If the "Low Battery" light comes on you should have approximately 5-10 hours of use left on the battery (depending on the type of battery used). Replace the battery as soon as possible.
- 10) When done using your tuner make sure to turn off the tuner to conserve battery power.

**FENDER®  
ACCESSORY  
1-YEAR LIMITED WARRANTY**

Fender Musical Instruments Corporation warrants that the Fender accessory you have purchased shall be free of any defects in parts and workmanship if used under normal operating conditions for a period of one (1) year from the date of purchase, except that light bulbs, vacuum tubes, meters and batteries are warranted for a period of ninety (90) days from the date of purchase. This warranty shall apply only to the original purchaser. PLEASE RETAIN YOUR SALES RECEIPT, AS IT IS YOUR PROOF OF PURCHASE COVERING YOUR LIMITED WARRANTY. THIS WARRANTY IS VOID WITHOUT SUCH PROOF OF PURCHASE.

Defective accessories will be repaired or replaced without charge, at Fender's discretion, with a like or comparable product by the Dealer if presented with proof of purchase to the Authorized Fender Dealer from whom the accessory was purchased. Any repair or service performed by any person or entity other than FMIC is not covered by this limited warranty. Transportation costs are not included in this warranty.

This limited warranty becomes void if the product has been damaged by alteration, misuse, accident, or neglect; or the product has been repaired or serviced by persons not authorized by Fender. THE FOREGOING CONSTITUTES THE ONLY WARRANTY MADE BY FENDER WITH RESPECT TO THE PRODUCT AND IS MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. Any implied warranties, including without limitation, any implied warranties of merchantability or fitness for any particular purpose, imposed under state law are limited to the duration of this limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not be applicable to you.

FMIC ASSUMES NO LIABILITY FOR PROPERTY DAMAGE RESULTING FROM FAILURE OF THIS PRODUCT NOR ANY LOSS OF INCOME, SATISFACTION OR DAMAGES ARISING FROM THE LOSS OF USE OF SAME DUE TO DEFECTS OR AVAILABILITY OF SAME DURING SERVICE.

\*This warranty applies only to products purchased and serviced within the U.S.A. and Canada. Warranties outside these countries are as defined by the authorized Fender Distributor for your country or region, and may vary from the above in terms and/or length.

EFFECTIVE DATE: SEPTEMBER 1, 2001

FENDER MUSICAL INSTRUMENTS CORP.  
8860 EAST CHAPARRAL ROAD - SUITE 100  
SCOTTSDALE, ARIZONA 85250-2618 - USA

Phone: 480-596-9690

[www.fender.com](http://www.fender.com)