



AXV150BT

Quick Start Guide

Multimedia DVD Receiver with Bluetooth

Not all features listed in this QSG are available on all models.



To download the complete, model-specific manual, please visit www.axxeraaudio.com/support/manuals.php or call 1-866-382-5476, 9AM-5PM EST (Monday-Friday).

General Operation

Power On/Off	Press the ⏻ button to turn the unit on. Press ⏻ again to turn unit off.
Faceplate Removal	Press RELEASE and pull away from the left side to remove. To re-install, insert right side of faceplate first then push left side to secure.
Changing Modes	Press MODE to select between AM/FM, Disc (DVD/CD RW/CD R/CD DA), Rear AV Input, Front AUX Input, Bluetooth Modes do operation are shown in the display.
Volume	Adjust volume using volume knob.
Mute	Press MUTE to silence the audio. Press MUTE again to resume listening at the previously selected volume.
Auxiliary Inputs	Insert a 3.5mm cable in the units front AUX port, or RCA cables into the rear AV-IN connectors.
Reset	Press the RESET button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located behind the front panel.
Setting the Clock	With the unit on, press and hold DISP until the clock begins to flash, then release. Press TUNE ◀◀ to adjust the hours and TUNE ▶▶ to adjust the minutes. Press DISP momentarily to save the selected time.
Display	Press DISP to toggle display between various displayed information.
Audio / Menu	Press and hold AUDIO/MENU for more than three seconds to access the setup menu. Press AUDIO/MENU momentarily to select between the menu functions and rotate the volume knob left/right to adjust or activate the desired function.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

Installation

Before You Start

- Consult a qualified technician for instructions. Dual always recommends professional installation.
- Disconnect negative battery terminal.
- Remove trim ring from unit (if installed).
- Remove 2 transit screws located on top of the unit (if applicable).
- Insert the removal keys, and remove the mounting sleeve from the head unit.

Note: Most vehicles require an installation kit, wiring harness and/or antenna adapter (all sold separately) to properly install the head unit in the vehicle.

Installation Process

- Carefully remove the existing head unit.
- Connect wiring harness. Consult a qualified technician if you are unsure.
- Mount the head unit using brackets.
- Connect wiring harness and antenna. Test the head unit for correct operation.
- Screw the left and right mounting brackets into head unit and fix the head unit into the dashboard.
- Put the trim ring on the head unit.

Wiring Connections

The chart below the connection for each wire in the wiring harness.

 
Color	Connection
Red	12V Ignition / Accessory
Yellow	12V Battery / Memory
Black	Ground
Blue	Power Antenna / Amp Turn-on
Grey	Right Front (+) / Zone 1
Grey/Black	Right Front (-) / Zone 1
White	Left Front (+) / Zone 1
White/Black	Left Front (-) / Zone 1
Violet	Right Rear (+) / Zone 2
Violet/Black	Right Rear (-) / Zone 2
Green	Left Rear (+) / Zone 2
Green/Black	Left Rear (-) / Zone 2

Tip:
When a suitable ground wire is not present in the vehicle wiring harness, connect the black ground wire to the vehicle chassis.


Fuse:
When replacing the fuse, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the radio.

Installation


Step 1:
Install the AXV150BT into the dashboard

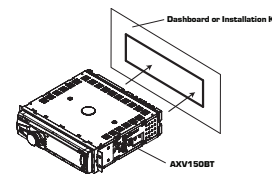

 Step 2:
Screw the AXV150BT mounting brackets into the dashboard or installation kit.

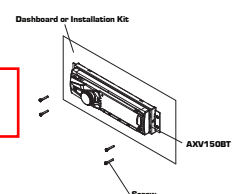

 Step 3:
Put the trim ring on the AXV150BT.

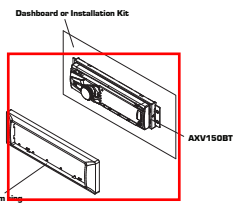

AM/FM Tuner Operation

Seek Tuning	Press TUNE ◀◀ or TUNE ▶▶ for more than one second to seek to the next strong station.
Manual Tuning	Press TUNE ◀◀ or TUNE ▶▶ momentarily to move radio frequency up or down one step at a time. Press and hold to advance quickly.
Band	Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
Storing Presets	Up to 18 FM and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display.
Recalling Presets	Preset stations can be recalled any time by pressing the corresponding preset button.

Speaker Zone Operation

Zone 1 Button	Press Zone 1 to turn the sound from Zone 1 on or off.
Zone 2 Button	Press Zone 2 to turn the sound from Zone 2 on or off.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

CD Operation *

Insert CD	With the label facing up, insert a standard size CD into the CD slot. Playback will begin automatically.
Eject CD	Press EJECT (located behind the front panel) to eject the CD. The unit will change to previous mode of operation.
Track Select	Press TUNE ▶▶ to skip to the beginning of the next track. Press TUNE ◀◀ to return to the beginning of the current track. Pressing TUNE ◀◀ again skips to the beginning of the previous track.
Fast Forward/Reverse	Press and hold TUNE ▶▶ or TUNE ◀◀ to fast forward or reverse a track.
Pause	Press ⏸ to temporarily stop CD playback. Press ⏸ again to resume playback.
Intro	Press INT to access the Intro menu, then turn the volume knob to select one of the following: <ul style="list-style-type: none"> OFF - Cancels the INT function. ALL - Plays the first 10 seconds of each track.
Repeat	Press RPT to access the Repeat menu, then turn the volume knob to select one of the following: <ul style="list-style-type: none"> ALL - Plays all tracks on CD. TRACK - Continuously repeats selected track.
Random	Press RDM to access the Random menu, then turn the volume knob to select one of the following: <ul style="list-style-type: none"> OFF - Cancels the RDM function. On - Plays all tracks in random order.
CD-R/CD-RW Compatibility	Some CD-Rs and CD-RWs may be incompatible with this unit, depending on media type and recording method. Refer to the online owner's manual for details.

* Not available on all models.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

MP3 Operation *

Playing MP3 Files	To play MP3 files, insert a data CD, SD card or USB device containing MP3 files.
Track Select	Press TUNE ▶▶ to skip to the beginning of the next song. Press TUNE ◀◀ to return to the beginning of the current song. Pressing TUNE ◀◀ again skips to the beginning of the previous song.
Fast Forward and Reverse	Press and hold TUNE ▶▶ or TUNE ◀◀ to fast forward or reverse a track.
Pause	Press ⏸ to temporarily stop playback. Press ⏸ again to resume playback.
Folder Access	Press ⏮ to select the next folder. Press ⏭ to select the previous folder. Folder access is only available on discs or devices with more than one folder.
Repeat	Press RPT to enter the Repeat menu, then turn the volume knob to select one of the following options: <ul style="list-style-type: none"> ALL - Plays all tracks on disc or device. TRACK - Continuously repeats selected track. FOLDER - Continuously repeats all files in folder.
Random	Press RDM to enter the Random menu, then turn the volume knob to select one of the following options: <ul style="list-style-type: none"> OFF - Cancels RDM function. ALL - Plays all tracks in random order. FOLDER - Plays all tracks in folder in random order.
Intro	Press INT to enter the Intro menu, then turn the volume knob to select one of the following options: <ul style="list-style-type: none"> OFF - Cancels the INT function. ALL - Plays first 10 seconds of each track. FOLDER - Plays first 10 seconds of each track in the selected folder.

* Not available on all models.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

DVD Operation *

Insert DVD	With the label facing up, insert a standard size DVD into the DVD slot. Playback will begin automatically.
Eject DVD	Press EJECT (located behind the front panel) to eject the DVD. The unit will change to previous mode of operation.
Track Select	Press TUNE ▶▶ to skip to the beginning of the next track. Press TUNE ◀◀ to return to the beginning of the current track. Pressing TUNE ◀◀ again skips to the beginning of the previous track.
Fast Forward/Reverse	Press and hold TUNE ▶▶ or TUNE ◀◀ to fast forward or reverse a track.
Pause	Press ⏸ to temporarily stop DVD playback. Press ⏸ again to resume playback.
Intro	Press INT to access the Intro menu, then turn the volume knob to select one of the following: <ul style="list-style-type: none"> OFF - Cancels the INT function. ALL - Plays the first 10 seconds of each track.
Repeat	Press RPT to access the Repeat menu, then turn the volume knob to select one of the following: <ul style="list-style-type: none"> ALL - Plays all tracks on DVD. TRACK - Continuously repeats selected track.
Random	Press RDM to access the Random menu, then turn the volume knob to select one of the following: <ul style="list-style-type: none"> OFF - Cancels the RDM function. On - Plays all tracks in random order.
DVD-R/DVD-RW Compatibility	Some DVD-Rs and DVD-RWs may be incompatible with this unit, depending on media type and recording method. Refer to the online owner's manual for details.

* Not available on all models.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

Bluetooth® Operation *


Preparation	Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
Pairing a New Device	The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details. The device name is "Axxera BT" The Bluetooth passcode is "1234"
Pairing Additional Devices	If a device is currently connected, press and hold ⏮ to disconnect the current device before a new device can be paired. Then begin the pairing sequence from the new Bluetooth device.
Disconnecting a Device	Press and hold ⏮ for 3 seconds to disconnect a connected device. The device will remain paired and appear in the SEARCH menu, but not be connected.
Streaming Audio Troubleshooting	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music: <ul style="list-style-type: none"> Press ▶▶ to skip to the next available audio track. Press ◀◀ to skip to the previous audio track. Press ⏸ to toggle between play and pause during playback.

* Not available on all models.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

Remote Control

 - Power
- Mode
- Play/Pause
- Mute
- Title
- Sub-T
- Setup
- Zone1
- Zone2
- Volume Up
- Zoom
- SEL
- Seek UP/Next Track
- Volume Down
- Audio
- Goto
- EQ
- Number keys
- PBC
- OSD
- (On Screen Display)
- Local/Random
- Seek Down/Previous Track
- AMS/RPT
- Stereo/Program
- Stop
- Enter
- Band/SYS

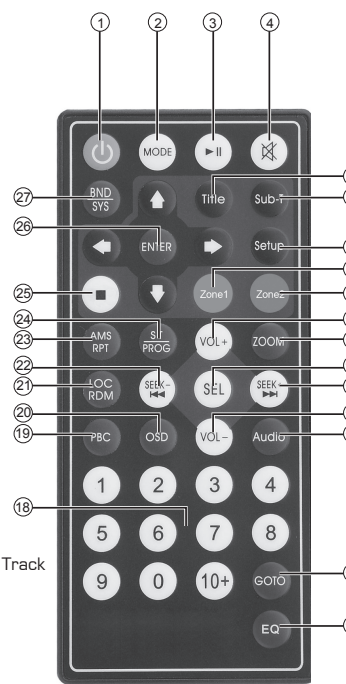

Limited One-Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Dual Electronics Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase. (Note that select marine products carry a 2-year warranty. Please visit www.dualav.com for details.) Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.

What to do?

- Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
- If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
- Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
- For more information and for the location of the nearest authorized service center please contact us toll-free at 1-866-382-5476 or by email at cs@dualav.com.

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Dual Electronics Corp.
Toll Free: 1-866-382-5476
Monday-Friday, 9AM-5PM
www.axxeraaudio.com

©2017 Dual Electronics Corp. All rights reserved.
The SD logo is a trademark of the SD Card Association.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Namsung is under license.
Pandora, the Pandora logo, and the Pandora trade dress are trademarks of Pandora Media, Inc., used with permission.
Other trademarks and trade names are those of their respective owners.