





7inch Tablet PC

PC687 User Manual



Introducing

Features:

Power key 	Press and hold to power on/off the tablet. Short press to put the TABLET into sleep mode. Press any key to awaken TABLET
Home key 	Press to return to the Home screen from anywhere.
Menu key 	Press to open a list of actions available on the current screen. Press and hold to see the menu shortcuts for that screen. The shortcuts will blink in place as you hold down this Menu key.
Back key 	Press to go back to the previous screen or to dismiss a dialog box or menu.

Battery

You can charge your tablet via the charger provided. The tablet has an internal charging battery. We suggest to charge up the battery only when the battery power is low. Do not keep the charger plugged in after charging has completed. This may reduce the battery life.

Charge via the charger

1. Plug in the Power adapter to Power adaptor port of device, Charging procedure will be completed once it shows that charging is finished..
2. During battery charging, you can still operate tablet.
The charging time will be longer when operating and charging at same time.

Battery Status view

1. Touch **settings**. Touch **Advanced setting**.
2. Touch Battery information

Micro SD card

Your device comes with a removable microSD memory card where you can store multimedia files, such as video clips, music tracks, sound files, and images.

Copy files to the memory card

You can transfer files such as music and pictures between your TABLET and your computer.

To view files on your TABLET, just launch the appropriate application and navigate to the file within that application.

1. Connect your TABLET to your computer using the USB cable.
2. On the home screen, press the **Menu** key.
3. Touch **Notifications**, touch **USB connected**.
4. Touch **Turn on USB storage**.
5. On your computer, go to the **Removable Disk** folder.
6. Locate the files on the computer that you want to copy to your TABLET.
7. Copy and paste files to the desired location in the **Removable Disk** folder.

Delete files on the memory card

1. Locate the file that you want to delete.
2. Touch and hold the file name.
3. Touch **Delete**.

View available memory space

1. Touch **Settings**, Touch **SD card & Device storage** to view available memory space for your memory card and TABLET.



Home screen and Application list

The Home screen is your starting point for using all the applications on your TABLET. You can customize your Home screen to display applications, shortcuts, and widgets. To open the application list, tap on the Home screen.

Notification and connection icons

Along the top of your screen is the status bar. On the left side, icons will appear, notify you of new messages, upcoming calendar events, alarms, and more. On the right side of the status bar, you will see the connection status icons.


Read notifications

When you see a notification in the status bar, tap the bar and slide your finger down the screen to open the list of notifications.







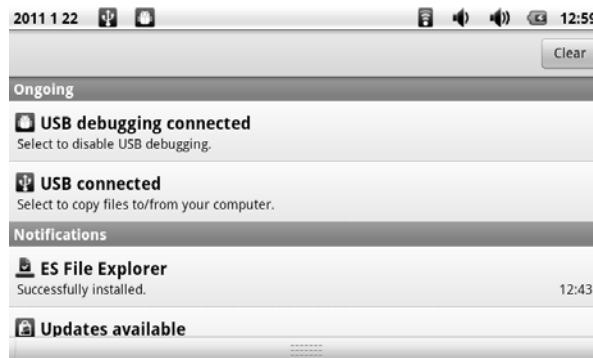



To open the notification, tap the item.

To clear notifications, Touch **Clear** at the top of the notification window.

To close the notification window, slide your finger up the screen.



Icons of Status Bar:

	New message e-mail		Downloading
	SD card is full		Content downloaded
	Battery change indicators		Silent mode
	No SD card		Battery is charging
	USB connected		Wireless services are off

	warning		
--	---------	--	--

Language & keyboard

Language

 
You can set the language for TABLET.

1. Touch **Settings**, touch **language & keyboard**.
2. Touch **Select language**.
3. Touch the language that you want to set as default.

Keyboard

You can set keyboard for TABLET. To set,

1. Touch **settings**, touch **Language & keyboard**.
2. Touch the keyboard that you want to use.
3. You can install other keyboards also for the TABLET.

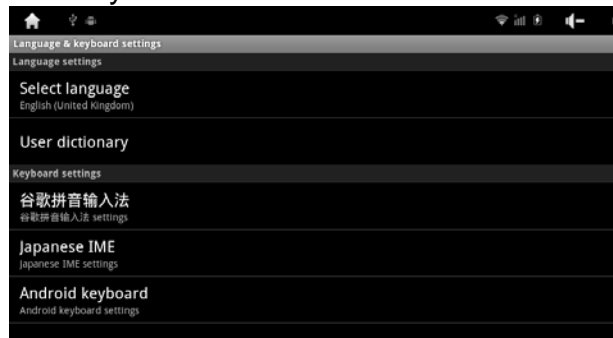

Manage Applications

Allow install of non-Market applications

1. Touch **Settings**.
2. Touch **Applications**.
3. Touch **Unknown sources** to select.

 
Uninstall Application

1. Touch **Settings**.
2. Touch **Applications**.
3. Touch **Manage applications**.
4. Touch the application that you want to Uninstall.
5. Touch **Uninstall**.
6. Touch **OK**, and follow the uninstall steps.

Music

Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Artists category, you will see a list of artists in A-Z order. Select an artist, album, and the album's song list displays.

Your TABLET will play the following music file formats: Mp3, WMA, OGG, WAV, and MIDI.

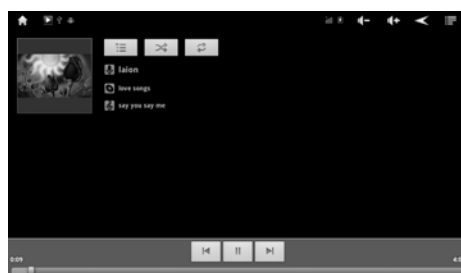

Access and play music

1. On the home screen touch the **Application** button.
2. Touch **Music**, Touch **Songs**. You can also touch **Artists**, **Albums**, or **Playlists**.
3. Touch the song to play.

Add songs to new play list

1. On the home screen, touch the **Application** button.
2. Touch **Music**. Touch **Songs**.
3. Touch and hold the song that you want to add to the play list.
4. Touch **Add to playlist**, and then touch **New**.
5. Type the name for the play list.
6. Touch **Save**.

Delete play lists

1. On the home screen, touch the **Application** button.
2. Touch **Music**, touch **Playlist**.
3. Touch and hold the play list you want to delete.
4. Touch **Delete**

Photo

Your TABLET can play the photo file formats as follows: JPG, BMP, PNG, GIF. You can access these files in your micro SD card also.

Slideshow the photos:

1. On the home screen touch the **Application** button.
2. Touch **photo** to select folder and photo.
3. Touch **Slideshow**.

Video

Your TABLET can play the video file formats as follows: RMVB, RM, AVI, MP4, WMV, 3GP, MPG. You can save these files on SD card.

Play a video:

1. On the home screen touch the **Application** button.
2. Touch **Video Player** and select the video to play.

Browser

Go to your home page

The Browser always opens to the last Web page you were viewing.

The first time you enter the Browser after powering on, your home page will display.

Change your home page

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **more**, touch **settings**, touch **Set home page**.
4. Type the site address and touch **OK**.

Visit Web pages

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **address bar**.
4. Type the Web address, touch **Go**.

*** Need network connection

Recorder

A sound recording and playback:

1. On the Home screen, touch the **Application** button.
2. Touch **Sound Recorder**.
3. Touch **Record** and Touch **Stop** when the sound recording is completed.
4. Touch **Use this recording**.
5. On the Home screen, touch the **Application** button.
6. Touch **Music**.
7. Touch **Playlists**, touch **My recordings**.
8. Touch the recordings to play.

HDMI & Host

Using the HDMI output

No settings for HDMI output. It will be self activated on HDMI cable connection.

USB host

USB host supports USB-mouse, USB-keyboard, 3G Modem and other peripherals.

Note

1. The battery can only reach the optimum performance after two or three times full charging and discharging.
2. The charging time for the first three times shall be 8-10 hours. It takes only about 4 hours for the battery to be full charged from the forth time.
3. It is better for the user to make a backup for the important data to avoid data loss, especially remember to back up before firmware upgrading. Our company is out of the responsibility for loss due to data loss.
4. Not to disassemble this tablet, for it is a high precision electronic product.
5. Not to violently beat or impact this tablet.
6. Do not use this unit under the following environment: high temperature, low temperature, humidification, dust, strong magnetic field and sunlight.
7. Please use wet cotton cloth to lightly wipe the case of the tablet, not use chemical solution to clear.

8. Please keep this tablet from water drop and water split, not put this tablet close to the article full with liquid, such as water cup.
9. Please adjust the proper volume to avoid hearing damage
10. Please not to modify any part of this tablet
11. Please use the battery, adapter and accessories allowed by the manufacture only. Using any other type of product will be against guaranty terms and may cause risk.
12. Please handle the disposal of the wasted tablet and accessories according to the local relevant environment protection regulations.
13. If you have any question during using this tablet, please contact the local distributor or directly contact our company customer service centre.
14. Products subject to change without notice. Any inconvenience caused is deeply regretted.
15. Note for 3D game
Some games like need for speed must be run by movie player. If you play it using video player, dialogue box to forced shut down will pop up.

Trouble shooting

If you have a specific problem, review the information below to see if you can quickly find the answer.

Problem	Diagnosis/Remedy
Tablet does not turn on when connected to AC power.	The battery might be over-discharged, and started protection mode. Please perform a reset.
Tablet does not turn on when <u>not</u> connected to AC power.	Battery power is too low to run device. Connect to AC power, and then turn on your Tablet. (Charge the battery regularly to avoid running out of battery power.)
Battery runs out of power very quickly.	You may be using your Tablet in ways that drain the batteries quickly. Note: Leaving Wireless turned on when not in use will drain the battery much faster than if it is turned off.
Tablet automatically shuts down.	Main battery is too low to run device. When a critically low-battery condition is encountered, the Tablet initiates a safety shutdown. Connect to AC power and charge the battery. Or the tablet is locked up. Connect the Tablet to external power, and perform a reset.
Tablet locks up when running applications.	Program memory is low. For detailed instructions on making more program memory available. Or The Tablet is locked up. Connect the Tablet to external power, and perform a reset.
Tablet runs very slowly.	Check whether you have opened too many applications, and close other running applications.
How to drag or set application to a certain subcategory shown on the bottom while viewing all the applications	While viewing all the application, click "lock" on the bottom, under "lock" condition, you can drug or set application to a certain subcategory shown on the bottom
Tablet does not detect an micro SD Card.	The Micro SD Card may not be inserted correctly, remove it and insert it by following the manual's guide.
How to install third party software like Documents to go or others	"Google Market" is installed in the device, users can search software in it, then can download and install it directly by following the system's remind.
How to upgrade the device when we get new firmware	A. When we get new firmware, we will upload it to our service forum, end user can visit www.fvtablet.eu , where they can select between a form for reparation or go to the forum, on the forum

	<p>users will find everything and can download new firmware, Decompress the new firmware("rar" file) downloaded(but can't change the file name).</p> <p>B. Upgrade Way 1</p> <p>copy all the files to one Micro SD card.---> insert the Micro SD card to the Tablet PC(make sure the Tablet PC is turned off before you insert the card).---->when the SD card is inserted to the device, pls turn on the device by pressing the power button for about 10 seconds,--->when you see message on the screen which remind you the system is being upgraded, the upgrading begins, you do not need to do anything, the system will upgrade automatically.---> after 5 to 6 minutes, the system will remind you to remove the SD card, pls do this.--->the device will turn off automatically-->when you turn on the device again, the system has already been upgraded</p> <p>C. Upgrade way 2</p> <p>Install upgrade tooling software on computer, connect the tablet with computer by the usb cable, then upgrade tablet through the installed upgrade tooling software on the computer.</p>
--	---

NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this equipment not expressly approved by Shenzhen Firstview Electronic Co., Limited may void the FCC authorization to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.