


SETUP AND USE

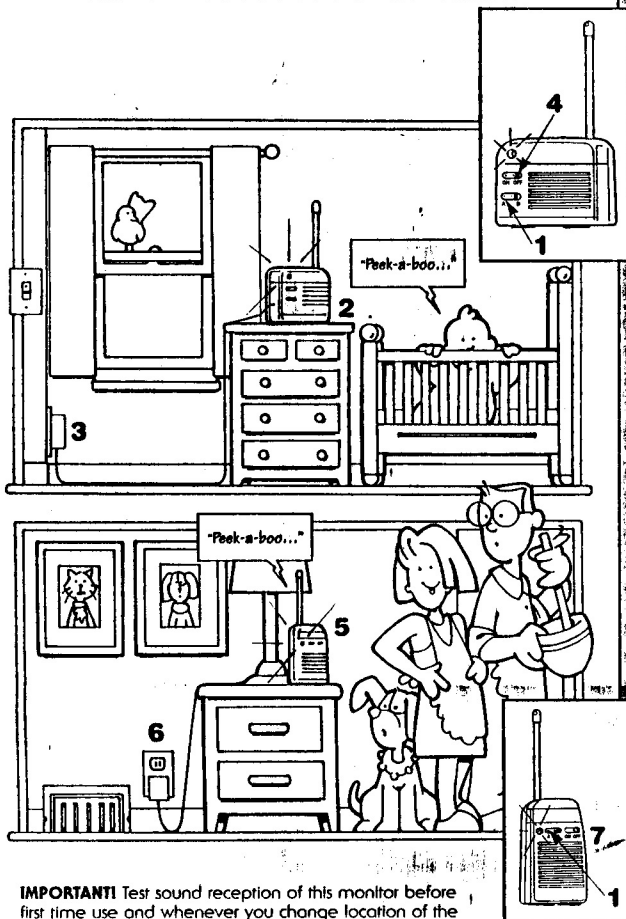

IMPORTANT! Test sound reception of this monitor before first time use and whenever you change location of the transmitter (see this page).

- 1 Set transmitter channel switch to same channel as receiver.
- 2 Place transmitter in same room with child. Point microphone directly toward crib or play area. Make sure antenna is pointing upward.
- 3 Unwrap and fully extend AC adaptor cord for best transmission. Insert AC adaptor jack into transmitter socket and plug into wall outlet.
- 4 Slide transmitter on/off switch to turn power on. Power indicator lights.
- 5 Place receiver where you will see or hear it. Make sure antenna is pointing upward.
- 6 Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.
Note: To use a 9V alkaline battery for power source, refer to "Receiver Battery Installation" instructions on this page.
- 7 Rotate receiver on/off/volume dial to turn power on. Power indicator lights. Rotate on/off/volume dial to adjust volume.

CARE

Excess dirt in transmitter microphone will hamper transmission of sound. Also, excess dirt in AC adaptor jack hole will prevent proper jack-to-socket connection. Clean outer surface of transmitter, base and receiver with a cloth lightly dampened with a mild cleaning solution.

Never immerse transmitter, base, receiver or AC adaptors.

FCC NOTE (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Super-Sensitive Monitor

Model Number: 71584

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Super-Sensitive Monitor
 Consumer Affairs Department
 636 Girard Avenue
 East Aurora, New York 14052

Any modification of the transmitter or receiver will violate FCC compliance and can void the user's authority to operate the equipment.

ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Super-Sensitive Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

The electronic components in transmitter, receiver and AC adaptors are not designed for consumer repair. Evidence of any attempt of consumer repair will void this warranty.

If you have any questions about this product:

In Canada, call 1-800-367-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 300303.

In Australia, Mattel Australia Pty. Ltd., 656 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.

©1999 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in Hong Kong

715784pr-0920