

IMPORTANT!

 
⚠ CAUTION

- This product cannot replace responsible adult supervision.

- This product is not intended to be used as a medical monitor and its use should not replace adult supervision.
- Test sound reception of receiver before first-time use and whenever you change location of the transmitter.
- To prevent entanglement:
 - Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
 - Never use extension cords with AC adaptors.
- Never use transmitter, receiver or AC adaptors near water (i.e.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter, receiver and AC adaptors where there is adequate ventilation. To prevent overheating, keep transmitter, receiver and AC adaptors away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.

TESTING SOUND RECEPTION


Test transmitter transmission and receiver reception.

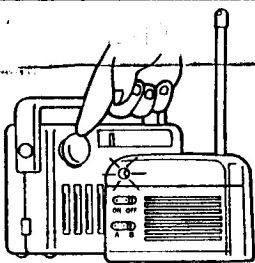

Place transmitter in room in which you intend to use it. Slide transmitter power switch to turn power on. Turn on a radio.



Place receiver in room in which you intend to use it. Rotate on/off/volume dial to turn power on. Adjust receiver location.

 Hint: If you turn receiver power on before transmitter power, you will hear a static noise. Simply turn volume down and turn transmitter power on.

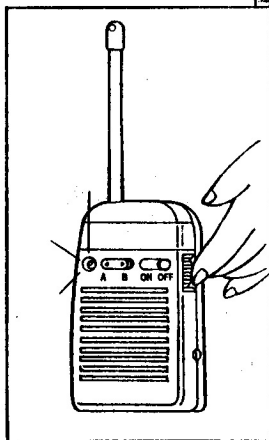

If you experience interference (buzzing or static, etc.) while using one channel setting, switch both units to other channel. Selecting a channel is usually a one-time adjustment.

  RECEIVER BATTERY INSTALLATION

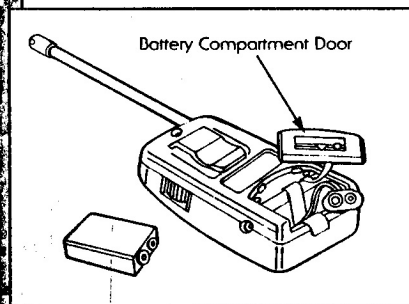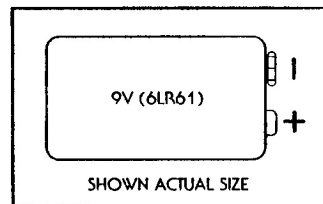

- Locate battery compartment door on back of receiver.
- Push battery compartment door in direction of arrow and open battery compartment door.
- Snap terminals of a fresh, 9V alkaline battery into receiver connectors.
- Close battery compartment door.

BATTERY TIPS

- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage the product. Dispose of the battery safely.
- Never short circuit the battery terminals.
- A non-rechargeable battery is not to be recharged.
- Only a battery of the same or equivalent type as recommended in the "Receiver Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at 1-800-432-KIDS, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.