

PROBLEMS AND SOLUTIONS

PROBLEMS

- 1 Transmitter power off. Power indicator not lit.
- 2 You hear static or buzzing because transmitter channel switch is not on same channel as receiver.
- 3 Transmitter power off. Power indicator not lit. Light switch that controls power flow to wall outlet off.
- 4 Transmitter power off. Power indicator not lit. AC adaptor jack-to-socket not connected. AC adaptor plug-to-outlet not connected.
- 5 Transmitter power off. Power indicator not lit. Power is off because circuit breaker for baby's room off.
- 6 You hear static or buzzing.

SOLUTIONS

- 1 Turn transmitter power on. Power indicator lights.
- 2 Make sure channel switches on both transmitter and receiver set to same channel.
- 3 Make sure light switch that controls power flow to wall outlet is ON.
- 4 Check AC adaptor jack-to-socket and plug-to-outlet connections.
- 5 Make sure house fuses and circuit breakers are on.
- 6 Check all five solutions above. Any one or more of these solutions should solve the problem.

Helpful Hint: If, after checking all of these solutions, you believe that your AC adaptor is damaged, please call Fisher-Price® at 1-800-432-KIDS.

