

IMPORTANT!


Radio interference can occur if more than one radio control vehicle or another radio device is operating on the same frequency. Radio interference can also occur near high voltage electrical wires, reinforced concrete buildings or trucks with CB radios.

Radio interference can cause this product to work erratically. For best performance, maintain a distance from, or do not operate this toy near other radio devices such as nursery monitors, cordless telephones or other radio control vehicles on the same frequency.

Any modification of the transmitter or the receiver (truck) will violate FCC compliance and can void the user's authority to operate the equipment.

Battery Installation

Hint: The 9-volt (6LR61) battery in the transmitter has a longer life than the 'AA' (LR6) batteries in the truck. You may need to change the 'AA' batteries more often than the 9-volt battery.

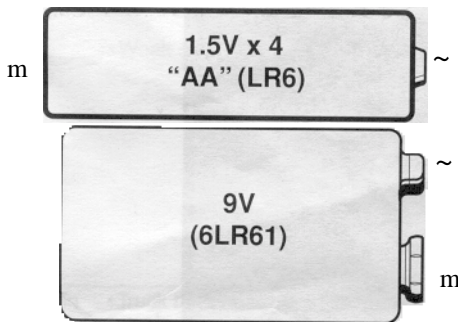

BOTH SHOWN ACTUAL SIZE

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Never short circuit the battery terminals.


Battery Installation

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Truck Batteries


- Turn the truck upside down.
- Unfasten the screw in the battery compartment door with a Phillips screwdriver. The screw will remain in the door.
- Remove the battery compartment door.
- Insert four size "AA" alkaline batteries, as indicated inside the battery compartment.
- Fit the tab on the battery compartment door into the slot in the battery compartment. Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Compartment I

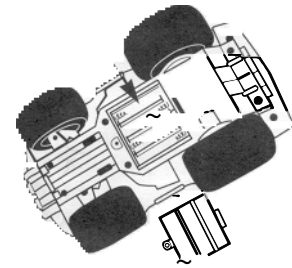

Transmitter Battery

- Unfasten the screw in the battery compartment door with a Phillips screwdriver. The screw will remain in the door.
- Open the battery compartment door.
- Snap a 9-volt battery to the battery contacts and insert it into the battery compartment.
- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

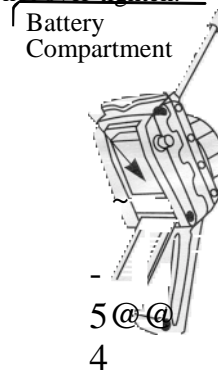

a