

Problem	Cause	Solution
		No power
	- Batteries installed incorrectly	Remove truck batteries and replace in correct orientation, as shown inside battery compartment. Check to be sure transmitter battery contacts are fully snapped.
	-Dead batteries	Replace truck batteries with four new "AA" alkaline batteries and/or transmitter battery with a new 9-volt battery.
	-On/off switch in off position	Slide on/off switch to turn power on.
	- Dirty battery contacts	Clean battery terminals.
Truck goes slowly	-Truck batteries weak	Replace truck batteries with four new "AA" alkaline batteries.
Truck runs erratically	- Interference	- Change your location. Replace truck batteries with four new "AA" alkaline batteries and/or transmitter battery with a new 9-volt battery.
	-Weak signal	Point transmitter antenna upward. Move transmitter closer to truck. Replace truck batteries with four new "AA" alkaline batteries and/or transmitter battery with a new 9-volt battery.
Poor steering control	-Truck batteries weak	- Replace truck batteries with four new "AA" alkaline batteries.
	-Transmitter battery weak	- Replace transmitter battery with a new 9-volt battery.

If you have any questions about this product: **Canada**, call 1-BW-567-7724, or write to: Mattel Canada Inc., 6155 Freeman Blvd., Mississauga, Ontario L5R 3W2. **Great Britain**, telephone 01628 500302. **Australia**, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052 U.S.A. ©1998 Mattel, Inc. All Rights Reserved.
0 and r designate U.S. trademarks of Mattel, Inc.
Printed in Hong Kong.

2-in-1 R/C Truck

Model Number: 72824

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Affairs Department, 636 Girard Avenue, East Aurora, New York 14052

If you have any questions about this product please call Fisher-Price@ Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price@ Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants that the 2-in-1 R/C Truck is free from all defects in material and workmanship when used under normal conditions for a period of two (2) years from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Fisher-Price Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.