

EXHIBIT 5

Installation and Operating Instructions

Para. 2.1033(b)(3)



 
**Retlif Testing Laboratories**

Test Report No. R-7560-1  
FCC ID: CCT2085T

# Fisher-Price®

Instructions

## High/Low Truck

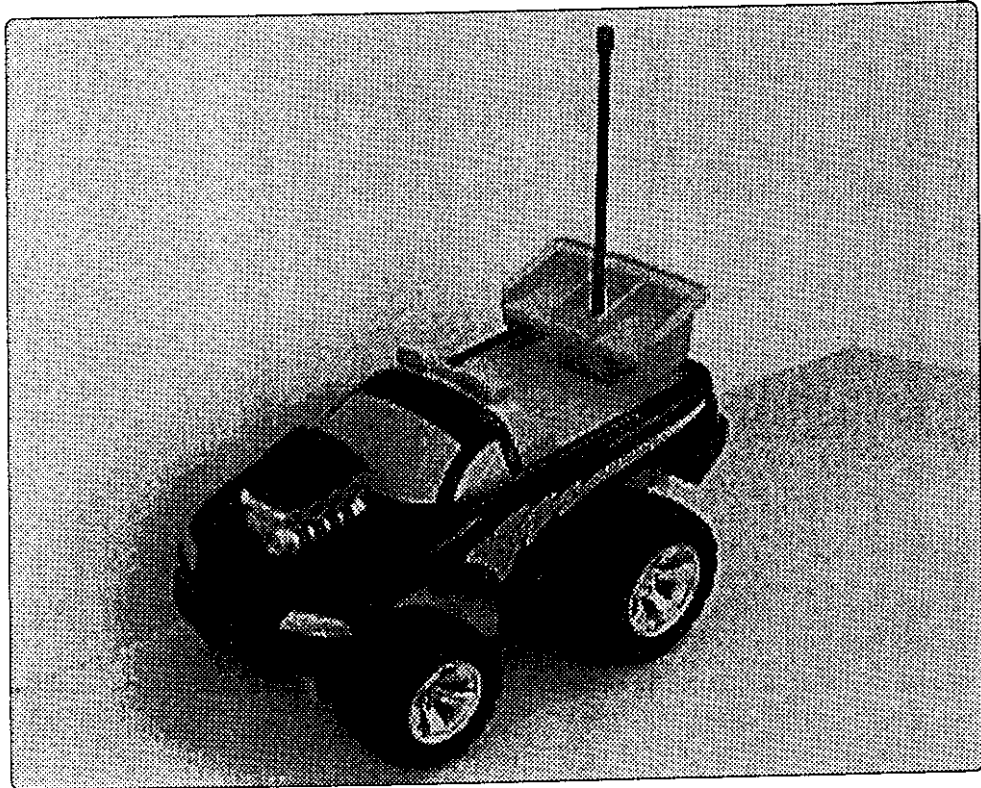

Please keep these instructions for future reference.

Adult assembly is required.

Requires four size "AA" alkaline batteries (not included) in the car.

Requires one 9-volt alkaline battery (not included) in the transmitter.

Tool needed for battery installation: Phillips Screwdriver.


## Important!

 Radio interference can occur if more than one radio control car or another radio device is operating on the same frequency. Radio interference can cause this product to work erratically. For best performance, please be sure to maintain a distance from or do not operate this toy near:

- other radio devices such as nursery monitors, cordless telephones or other radio-control cars on the same frequency.
- high voltage electrical wires, reinforced concrete buildings or CB radios.


Any modification of the transmitter or the receiver (car) will violate FCC compliance and can void the user's authority to operate the equipment.

## Battery Installation

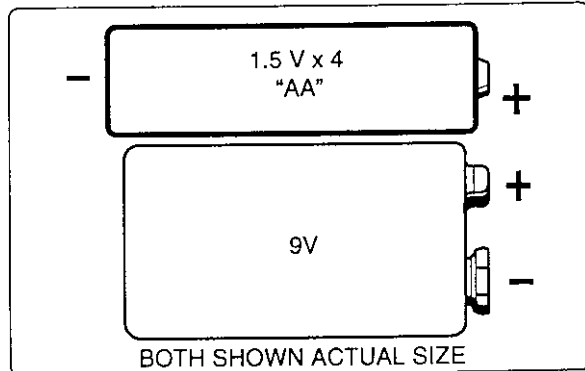

**Please Note:** The 9-volt battery in the transmitter has a longer life than the "AA" batteries in the truck. You may need to change the "AA" batteries more often than the 9-volt battery.

## Truck Batteries

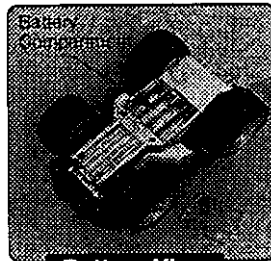 


Bottom View

- Unfasten the screw in the battery compartment door with a Phillips screwdriver. The screw will remain in the door.
- Push the battery compartment door in the direction of the arrow and lift to open.

- Insert four size "AA" alkaline batteries, as indicated inside the battery compartment.
- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

## Transmitter Battery


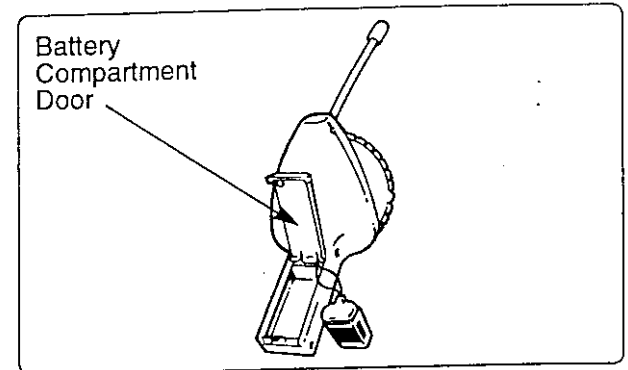 


- Unfasten the screw in the battery compartment door with a Phillips screwdriver. The screw will remain in the door.
- Push the battery compartment door in the direction of the arrow and lift to open.
- Snap a 9-volt battery to the battery contacts and insert it into the battery compartment.
- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

## Battery Tips

  - Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

## Truck Use

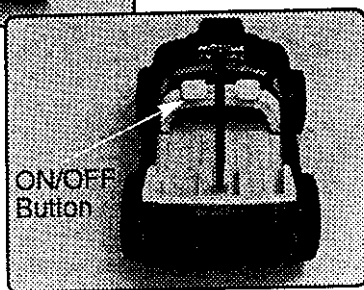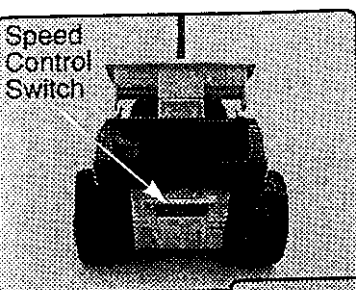


- Press the ON/OFF button to turn the truck "ON".
- Select a speed by sliding the speed control switch to:
  - 2 - Fast
  - N - Neutral (wheels roll freely for non-battery operated play)
  - 1 - Slow

**Note:** If the speed control switch does not move easily, rotate the rear wheels slightly while moving the speed control switch.

- Press the ON/OFF button to turn the truck "OFF".

**Note:** The High/Low Truck will switch off automatically after a few minutes of non-use. Press the ON/OFF button to switch the truck back "ON".

## Transmitter Use

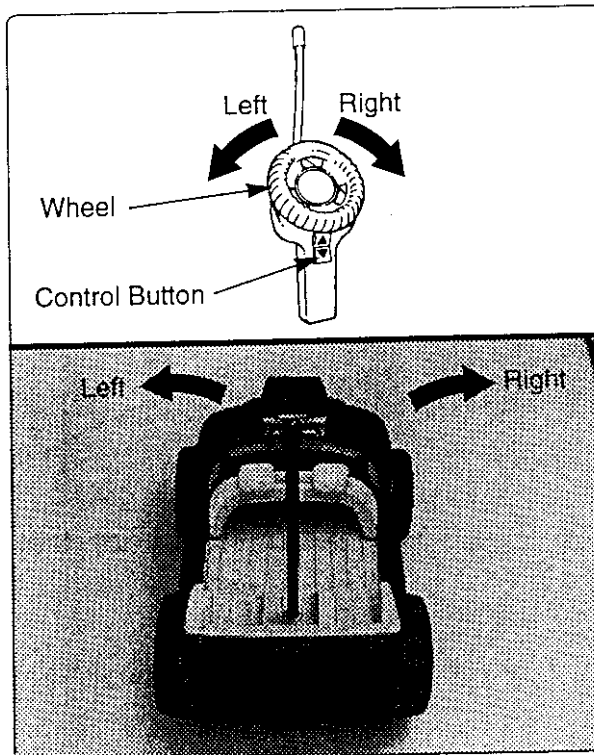 

- FORWARD ....Push the top arrow on the transmitter control button.
- REVERSE .....Push the bottom arrow on the transmitter control button.
- STOP .....Release the control button.
- LEFT .....Turn the transmitter wheel to the left.
- STRAIGHT ....Keep the transmitter wheel straight.
- RIGHT .....Turn the transmitter wheel right.

**Note:** For maximum range, keep the transmitter antenna pointed up.

## Tips For Good Drivers

- Operate your truck in a dry, open area, away from any street or moving (motorized) vehicles.
- Avoid sand and water. If moisture does get inside the truck or transmitter, remove the batteries and allow the units to dry for several hours before their next use.
- Store your truck and transmitter inside after play, away from heat or direct sunlight.
- Do not carry the truck by the antenna.

# Problems and Solutions Guide **FCC Note (United States Only)**

Problem	Cause	Solution
No Power	<ul style="list-style-type: none"> <li>Batteries installed incorrectly</li> <li>Dead batteries</li> <li>ON/OFF button not turned on</li> <li>Dirty battery contacts</li> </ul>	<ul style="list-style-type: none"> <li>Remove the truck batteries and replace in correct orientation, as shown inside the battery compartment.</li> <li>Check to be sure transmitter battery contacts are fully snapped.</li> <li>Replace truck batteries with four new "AA" alkaline batteries and/or the transmitter battery with a new 9-volt battery.</li> <li>Press the ON/OFF button.</li> <li>Clean battery terminals.</li> </ul>
Truck goes slowly	<ul style="list-style-type: none"> <li>Truck batteries weak</li> </ul>	<ul style="list-style-type: none"> <li>Replace truck batteries with four new "AA" alkaline batteries.</li> </ul>
Truck runs erratically	<ul style="list-style-type: none"> <li>Interference</li> <li>Weak signal</li> </ul>	<ul style="list-style-type: none"> <li>Change your location.</li> <li>Replace truck batteries with four new "AA" alkaline batteries and/or the transmitter battery with a new 9-volt-battery.</li> <li>Point the transmitter antenna upward.</li> <li>Move the transmitter closer to the truck.</li> <li>Replace truck batteries with four new "AA" alkaline batteries and/or the transmitter battery with a new 9-volt battery.</li> </ul>
Poor steering control	<ul style="list-style-type: none"> <li>Truck batteries weak</li> <li>Transmitter battery weak</li> </ul>	<ul style="list-style-type: none"> <li>Replace truck batteries with four new "AA" alkaline batteries.</li> <li>Replace transmitter battery with a new 9-volt battery.</li> </ul>
ON/OFF button does not glow	<ul style="list-style-type: none"> <li>Weak or dead truck batteries</li> </ul>	<ul style="list-style-type: none"> <li>Replace truck batteries with four new "AA" alkaline batteries.</li> <li>Truck has automatically shut off. Press the ON button to turn truck back "ON".</li> </ul>

High/Low Truck  
Model Number: 00000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

High/Low Truck  
Consumer Affairs Department  
636 Girard Avenue  
East Aurora, New York 14052

## Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

## Two (2) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants that the High/Low Truck is free from all defects in material and workmanship when used under normal conditions for a period of two (2) years from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Fisher-Price Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

If you have any questions about this product:

In **Canada**, call 1-800-567-7724, or write to: Mattel/Fisher-Price, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In **Great Britain**, telephone 01734 770488.

In **Australia**, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.

©1998 Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052

00000 1 00000-0920