

## CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

## CARE

Clean outer surface of the transmitter<sup>base</sup> and receiver with a cloth lightly dampened with a mild cleaning solution.

Never immerse transmitter<sup>base</sup>, receiver or AC adaptors.

## FCC NOTE (UNITED STATES ONLY)

Infant-to-Toddler Monitor  
Model Number: 71577

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Infant-to-Toddler Monitor  
Consumer Affairs Department  
636 Girard Avenue  
East Aurora, New York 14052

Any modification of the transmitter or receiver will violate FCC compliance and can void the user's authority to operate the equipment.

## ONE (1) YEAR WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Infant-to-Toddler Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

The electronic components in the transmitter, receiver and AC adaptors are not designed for consumer repair. Evidence of any attempt of consumer repair will void this warranty.

If you have any questions about this product:

In Canada, call 1-800-587-7724, or write to: Mattel Canada Inc.,  
6155 Freemont Blvd., Mississauga, Ontario L5B 3W2,  
16 Great Britain, Mississauga, Ontario L5L 2S5, 5000303.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer  
Advice Service 1-800-800-8112 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.  
©1990 Mattel, Inc. All Rights Reserved.  
® and ™ designate U.S. trademarks of Mattel, Inc.  
Printed in Hong Kong.

 
 
71577-0920

# Fisher-Price®

## INFANT-TO-TODDLER MONITOR

Model Number: 71577

- Front Panel to be updated -

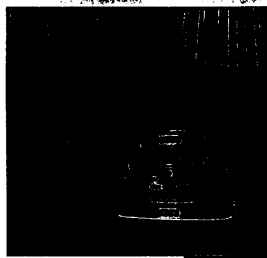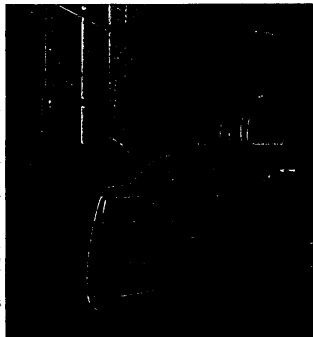

- \* For proper setup and use, please read these instructions and keep for future reference.
- \* Includes two AC adaptors to power transmitter and receiver (plugs into standard household outlets (120V AC). Receiver and transmitter also run on battery power (9V alkaline battery and three "AAA" (LR03) alkaline batteries — not included).


## IMPORTANT!
 
### CAUTION

- This product cannot replace responsible adult supervision.
- Please keep small parts, such as the "AAA" batteries out of children's reach. Dispose of worn "AAA" batteries properly.



- This product is not intended to be used as a medical monitor and its use should not replace adult supervision.
- Test sound reception of monitor before first-time use and whenever you change location of the transmitter.
- To prevent entanglement:
  - Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
  - Do not use extension cords with AC adaptors.
- Never use transmitter, receiver or AC adaptors near water (i.e., bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter, receiver and AC adaptors where there is adequate ventilation. To prevent overheating, keep transmitter, receiver and AC adaptors away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.

## TESTING SOUND RECEPTION

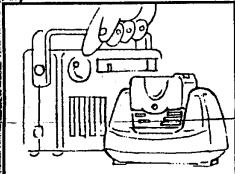

Test transmitter transmission and receiver reception. For use with baby, place transmitter in room in which you intend to use it. Turn on a radio. For use with a toddler, have toddler stand in the area they will be playing. Ask your child to speak.

  **Dial**  
For use with baby, place receiver in room in which you intend to use it. Adjust receiver location and rotate on/off volume switch until you hear sounds clearly. For use with toddler, position the receiver where you will be listening. Adjust receiver location and rotate on/off volume dial until you hear sounds clearly.

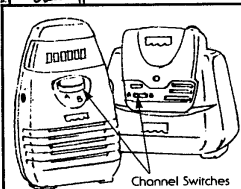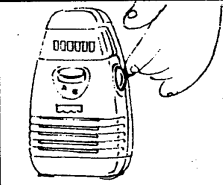


Channel Switches

If you experience interference (buzzing or static, etc.) while using one channel setting, switch both units to other channel. Selecting a channel is usually a one-time adjustment.

### Notes:

 
- Moving light display lights when sound is received by receiver.
- If all five bars in moving light display light:
  - Receiver power is on and transmitter power is off.
  - Receiver is too far away from transmitter.
  - Receiver and transmitter are not on same channel.
  - Loud sounds are transmitting.

## BATTERY INSTALLATION

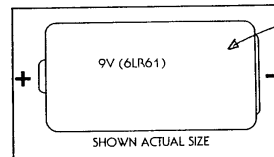


*This will be a 9V battery*

 SHOWN ACTUAL SIZE

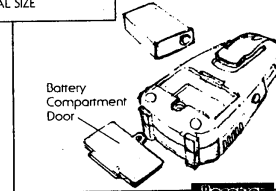


Battery Compartment Door

 Receiver



SHOWN ACTUAL SIZE

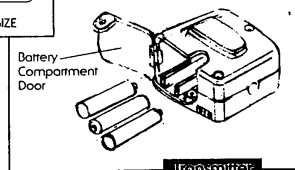 

Battery Compartment Door


Transmitter

- Remove transmitter from base.
- Locate battery compartment door on bottom of receiver and back of transmitter.
- Loosen screw in both battery compartment doors with a Phillips screwdriver.
- Open the battery compartment doors.
- Snap terminals of a fresh, 9V alkaline battery into receiver connectors.
- Insert three (LR03) batteries, as indicated inside the battery compartment.
- Close battery compartment doors and tighten screws with a Phillips screwdriver. Do not over-tighten.

## BATTERY TIPS


 
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for passage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

## JUST FOR BABY

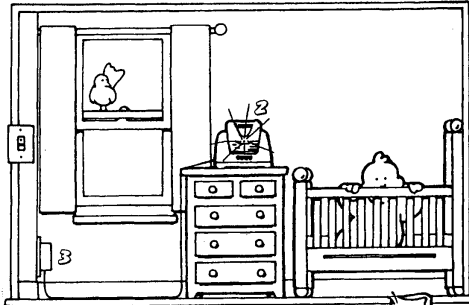

**IMPORTANT!** Test sound reception of this monitor before first time use and whenever you change location of the transmitter.

  - 1 Set transmitter channel switch to same channel as receiver.
- 2 Place transmitter (in base) in same room with child. Point microphone directly toward crib or play area.
- 3 Unwrap and fully extend AC adaptor cord for best transmission. Insert AC adaptor jack into transmitter socket and plug into wall outlet.  
**Note:** To use three "AAA" batteries for power source, refer to battery installation instructions.
- 4 Slide transmitter on/off switch to turn power on. Power indicator will light.
- 5 Place receiver where you will see or hear it.
- 6 Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.  
**Note:** To use a 9V battery for power source, refer to battery installation instructions.
- 7 Rotate receiver on/off/volume dial to turn power on. Power indicator will light. Rotate on/off/volume dial to adjust volume.

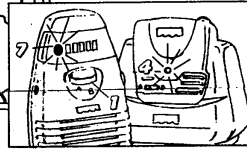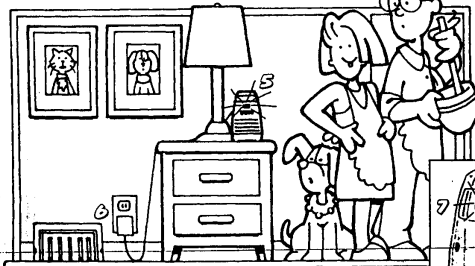



## FOR YOUR TODDLER

**IMPORTANT!** Test sound reception of this monitor before first time use and whenever you change location of the transmitter.

- 1 Set transmitter channel switch to same channel as receiver.
- 2 Attach transmitter to child's clothing using clip. Check to be sure transmitter is secure.
- 3 Slide transmitter on/off switch to turn power on. Power indicator will light.
- 4 Place receiver where you will see or hear it.
- 5 Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.  
**Note:** To use a 9V battery for power source, refer to battery installation instructions.
- 6 Rotate receiver on/off/volume dial to turn power on. Power indicator will light. Rotate on/off/volume switch to adjust volume.

*Note: To use three "AAA"...*?

  OR  
*Note: THREE "AAA" MUST BE USED...*

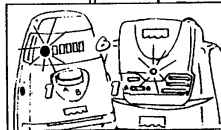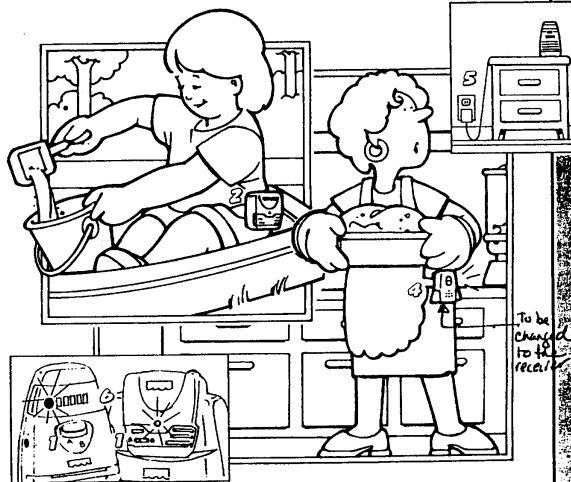

## PROBLEMS AND SOLUTIONS



### PROBLEMS

- 1 Power off.
- 2 Channel switch not on same channel as receiver.
- 3 Light switch that controls power flow to wall outlet off.
- 4 AC adaptor jack-to-socket not connected. AC adaptor/plug-to-outlet not connected.
- 5 Circuit breaker for baby's room off.
- 6 All five bars lit.

### SOLUTIONS

- 1 Turn **ON** slide power **switch**.
  - 2 Make sure channel switches on both transmitter and receiver set to same channel.
  - 3 Make sure light switch that controls power flow to wall outlet is on.
  - 4 Check AC adaptor jack-to-socket and plug-to-outlet connections.
  - 5 Make sure house fuses and circuit breakers are on.
  - 6 Check all five solutions above.
- Helpful Hint:** If, after checking all of these solutions, you believe that your AC adaptor is damaged, please call Fisher-Price® at 1-800-422-KIDS.

remote extra bold

### PROBLEM

 
Signal interference due to other nursery monitors or cordless telephones.

### SOLUTION

Change both channel switches to eliminate source of interference.

#### Helpful Hints:

- Do not use more than one transmitter and one receiver at same time in same household.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitters, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.

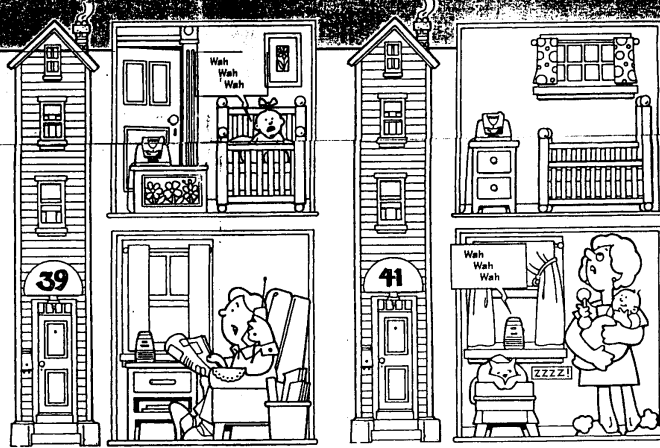

### PROBLEM

Receiver out of range of transmitter.

### SOLUTION

Move receiver closer to transmitter.

- Helpful Hint:** If you can not hear your child and all 5 bars are not lit, your receiver battery is weak. Replace the receiver battery with a fresh 9V alkaline battery or use AC adaptor for power source. If receiver is too close to transmitter, you will hear squealing or whistling. Move receiver further away from transmitter.

