

Fisher-Price®

Soothing Dreams™

Monitor

with Remote Control

Model Number: 71597

For proper set-up and use, read these instructions.

Please keep this instruction sheet for future reference,
as it contains important information.

Transmitter is electrically powered.

Remote control/receiver is powered by the AC adaptor
(included - standard household outlets 120V AC) or battery
(9V alkaline battery - not included).

An adult must install the battery (if used).

www.fisher-price.com

IMPORTANT!



CAUTION

This product cannot replace responsible adult supervision.

- This product is not intended to be used as a medical monitor and its use should **not** replace adult supervision.
- Test sound remote control/receiver before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
 - Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
 - Never use extension cords with the AC adaptor.
- Never use transmitter or remote control/receiver near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter and remote control/receiver where there is adequate ventilation. To prevent overheating, keep transmitter and remote control/receiver away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.


Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, between 8 AM - 6 PM EST, Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call **1-800-382-7470**.

Or write to:
Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

Remote Control/Receiver Battery Installation (optional)

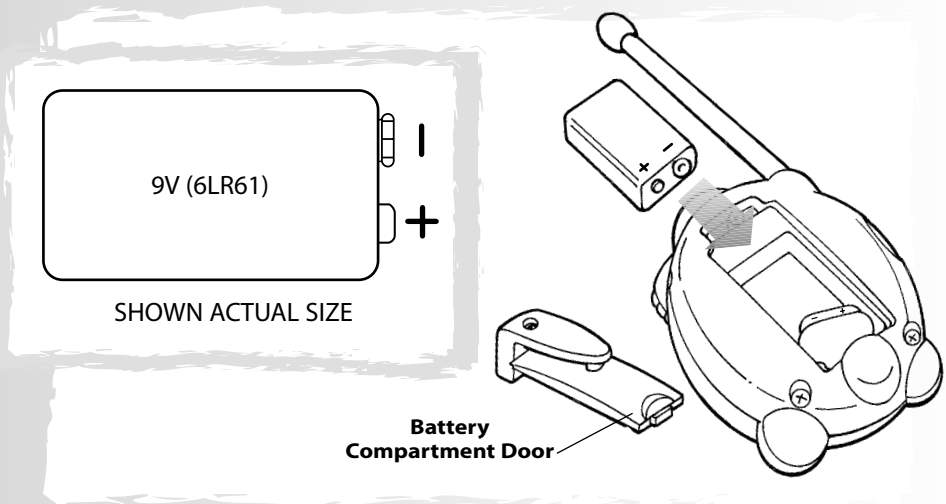


- Locate battery compartment door on the back of remote control/receiver.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Lift to remove the battery compartment door.
- Snap the terminals of a fresh, 9V **alkaline** battery into the remote control/receiver connectors.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.

Battery Tips


- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage this product. Dispose of battery safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- A non-rechargeable battery is not to be recharged.
- Only a battery of the same or equivalent type as recommended in the "Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Testing Sound Reception


Test transmitter transmission and remote control/receiver reception.

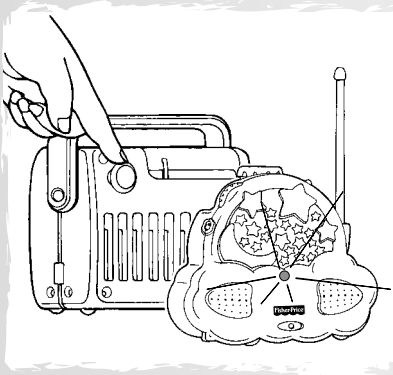

Place transmitter in room in which you intend to use it. Slide transmitter power switch to turn power on. Turn on a radio.

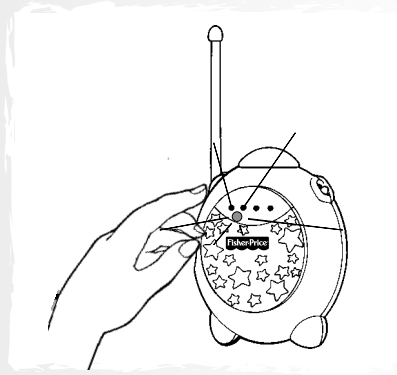

Place remote control/receiver in room in which you intend to use it. Rotate power/volume dial to turn power on. Adjust remote control/receiver location.

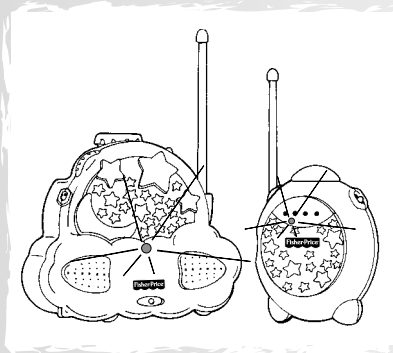


If you experience interference (buzzing or static, etc.) while using one channel setting, switch **both** units to other channel. Selecting a channel is usually a one time adjustment.

Notes:

- Variable light display lights when sound is received by remote control/receiver.
- If all four dots in variable light display light:
 - Remote control/receiver power is on and transmitter power is off.
 - Remote control/receiver is too far away from transmitter.
 - Remote control/receiver and transmitter are not on same channel.
 - Loud sounds are transmitting.





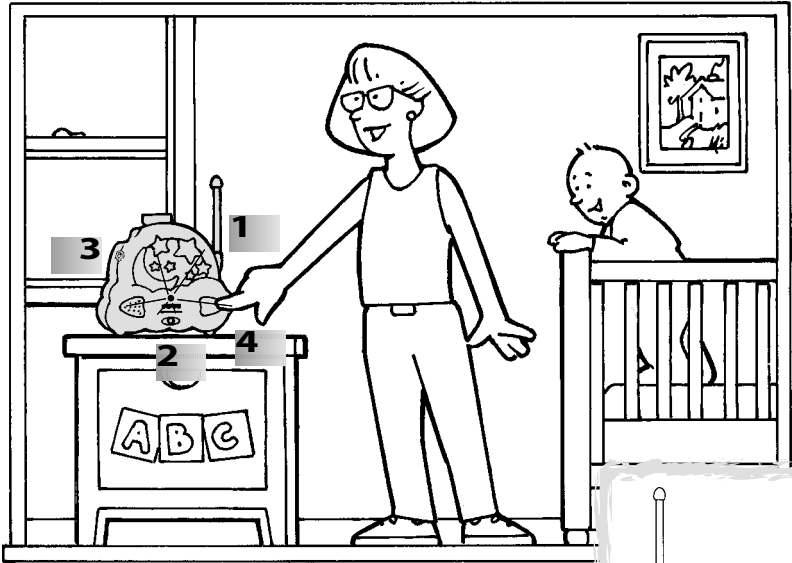


Hint: If you turn remote control/receiver power on before transmitter power, you will hear a static noise and all four dots in variable light display light. Simply turn volume down and turn transmitter power on.

Setup and Use




 
Setup and Use

IMPORTANT! Test sound reception of this monitor before first time use and whenever you change location of transmitter (see page 4).

- 1** Set transmitter channel switch to same channel as receiver.
- 2** Choose a soothing mode:
 -  Lights
 -  Music
 -  **SFX** Light and Nighttime Nature Sounds/Music
- 3** Choose a light mode (only if you have selected  Lights or  **SFX** Light and Nighttime Nature Sounds/Music in soothing mode)
 -  Ceiling Light Show
 -  **SFX** Night Light
- 4** Press the soothing button to activate your selection. Light(s); Music; Light and Nighttime Nature Sounds/Music will turn on for about five minutes and then automatically turn off.

Hint: If you do not want light(s) and music/sound effects on, do not press the soothing button on the transmitter.

Setup and Use

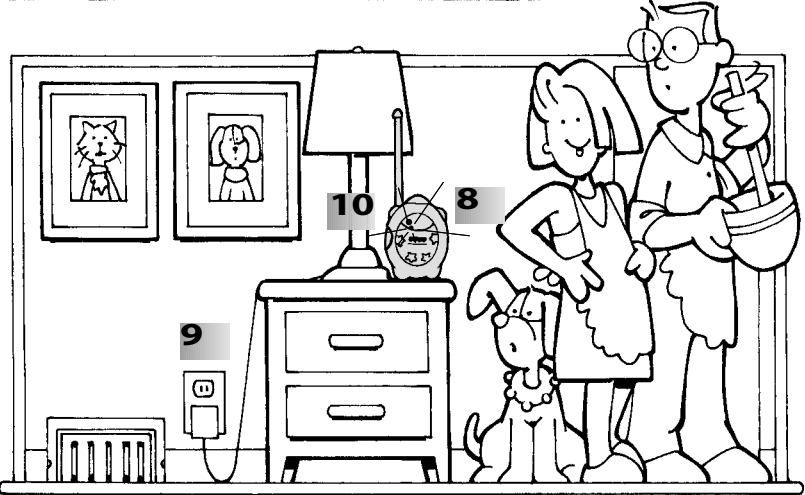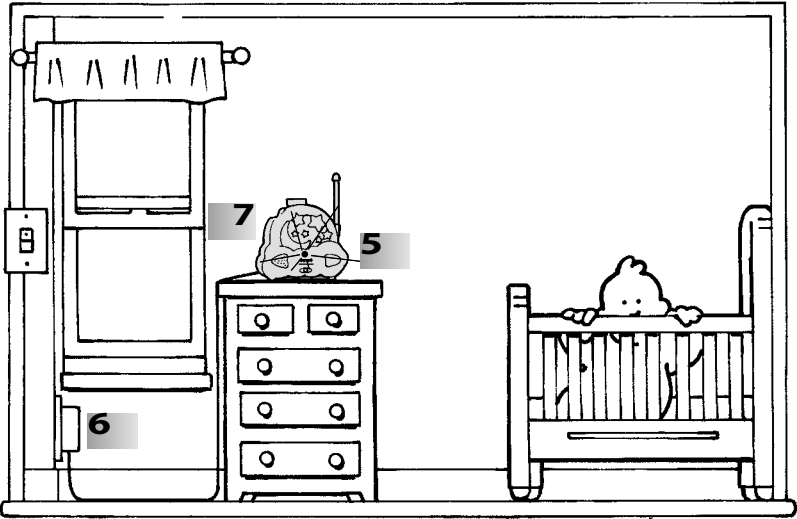

Setup and Use

- 5** Point microphone directly toward crib or play area.
- 6** Unwrap and fully extend power cord for best transmission. Insert power cord plug into wall outlet.
- 7** Rotate transmitter power/volume dial to turn power on. Power indicator lights.
- 8** Place receiver where you will see or hear it.
- 9** Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.
Note: To use a 9V alkaline battery for power source, refer to "Remote Control/Receiver Battery Installation" instructions on page 3.
- 10** Rotate remote control/receiver power/volume dial to turn power on. Power indicator lights. Rotate power/volume dial to adjust volume.


If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone **01628 500303**.


In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Setup and Use

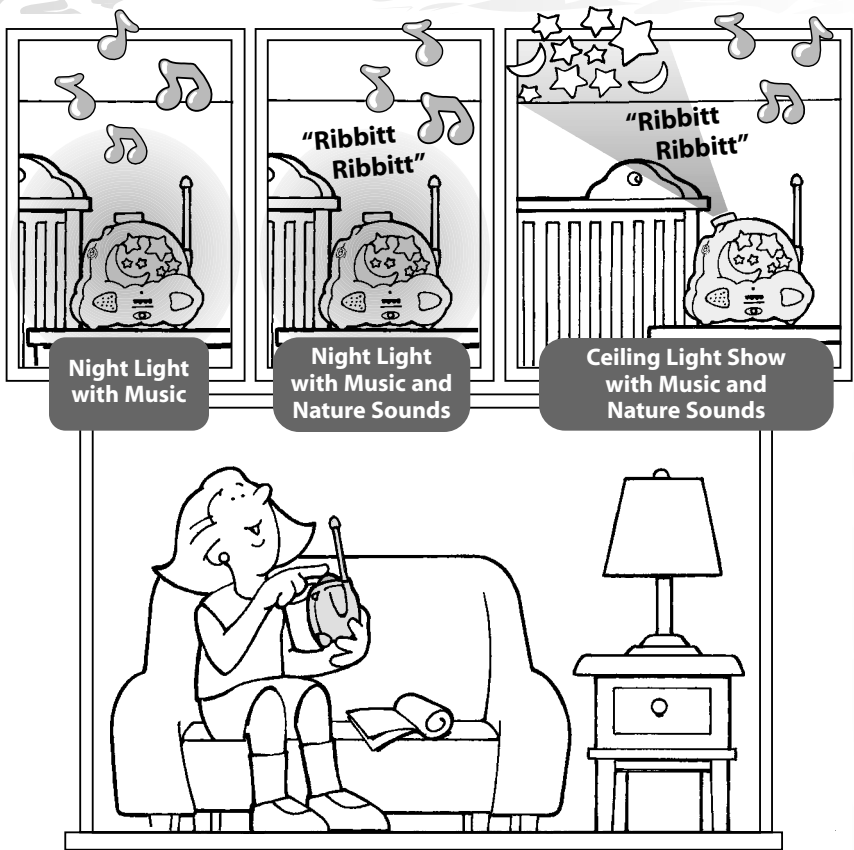

- To soothe baby, press the soothing button on the remote control/receiver. Your baby enjoys what you have selected.
- Light(s) and music/sounds will turn off after approximately five minutes. To turn back on, simply press the soothing button on the remote control/receiver.

Setup and Use



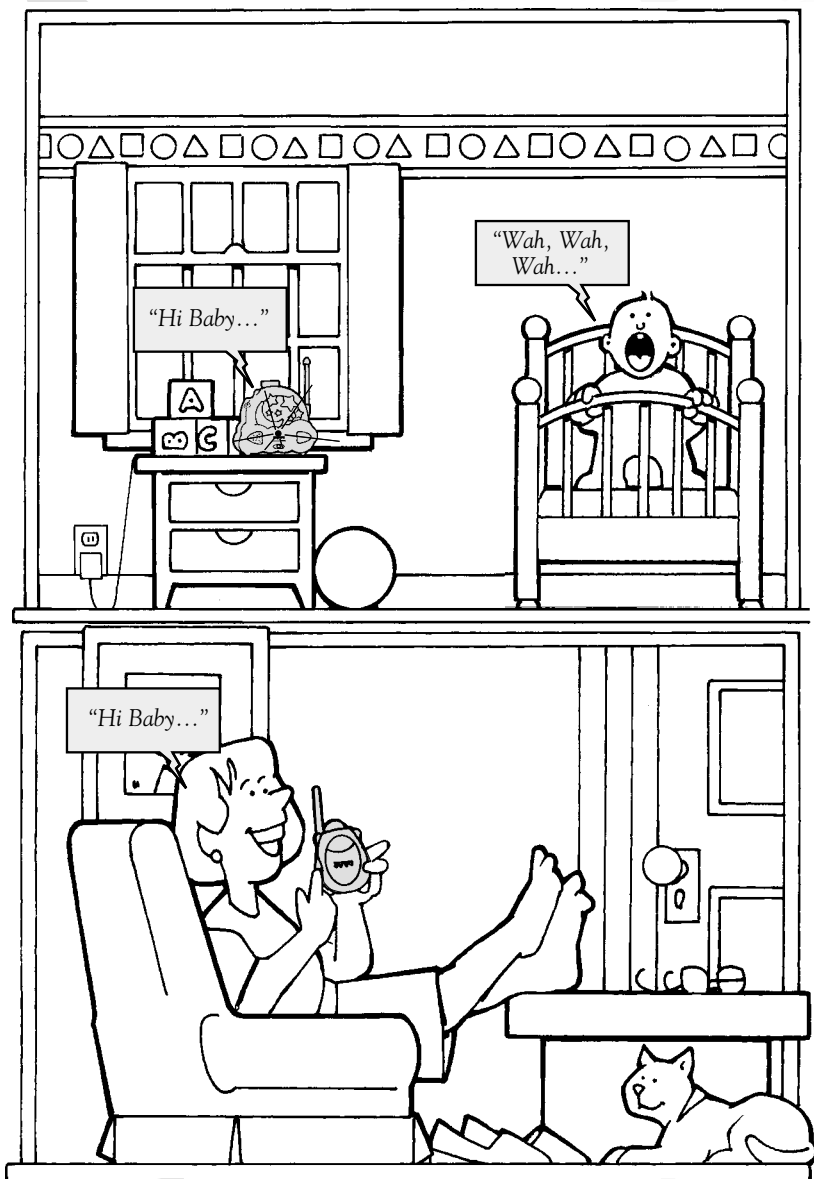


- To talk to baby, press the talk button and speak into the microphone on the remote control/receiver. Release the talk button.

Hint: If light(s) and music/sounds are playing when you press the talk button, you will turn them off when you press the talk button. To turn them back on, simply press the soothing button.

Problems and Solutions

Circuit Breaker

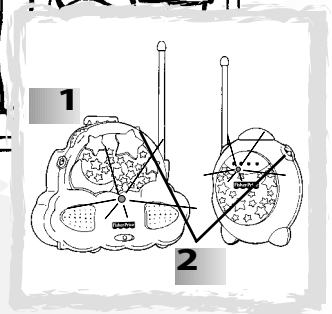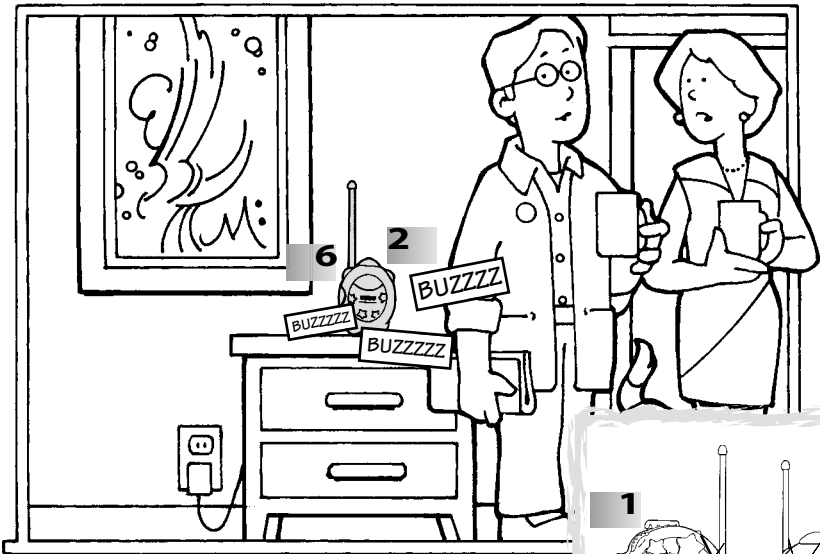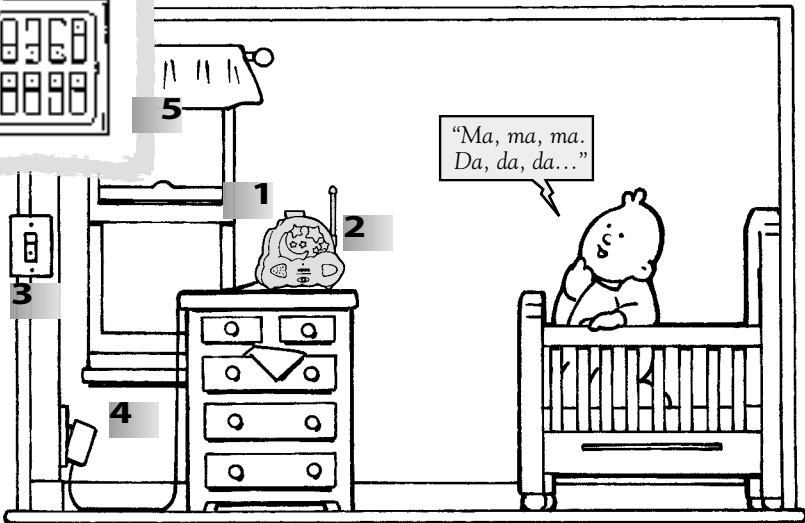

Problems and Solutions

PROBLEMS


- 1** Transmitter power off. Power indicator not lit.
- 2** You hear static or buzzing because transmitter channel switch is not on same channel as remote control/receiver.
- 3** Transmitter power off. Power indicator not lit. Light switch that controls power flow to wall outlet off.
- 4** Transmitter power off. Power indicator not lit. Power cord plug-to-outlet not connected.
- 5** Transmitter power off. Power indicator not lit. Power is off because circuit breaker for baby's room off.
- 6** You hear static or buzzing and all four dots lit on remote control/receiver.

SOLUTIONS

- 1** Turn transmitter power on. Power indicator lights.
- 2** Make sure channel switches on both transmitter and remote control/receiver set to same channel.
- 3** Make sure light switch that controls power flow to wall outlet is on.
- 4** Check transmitter power cord plug-to-outlet connection.
- 5** Make sure house fuses and circuit breakers are on.
- 6** Check all five solutions above. Any one or more of these solutions should solve the problem.

Hint: If, after checking all of these solutions, you believe that your transmitter power cord or adaptor is damaged, please call Fisher-Price® at 1-800-432-KIDS.

Problems and Solutions

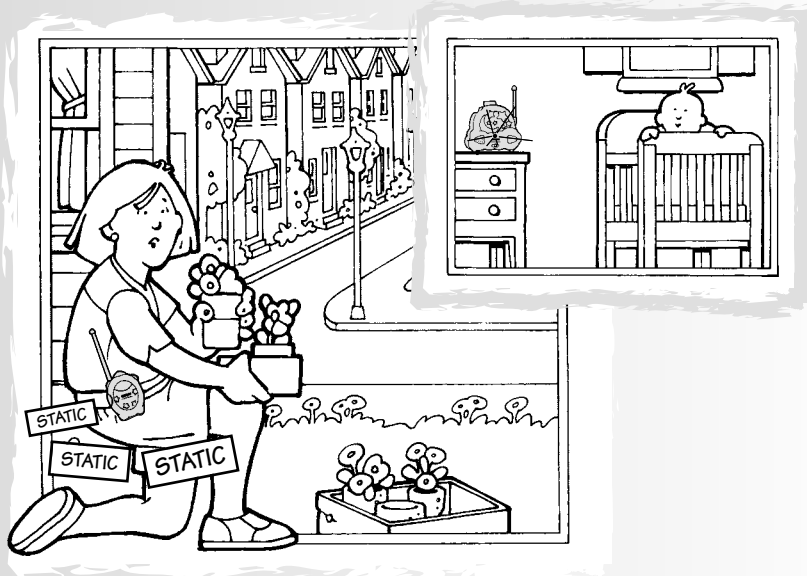

PROBLEM

You hear static or buzzing because receiver is out of range of transmitter.


Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.

SOLUTION

Move remote control/ receiver closer to transmitter.


Hint: If you cannot hear your child and all four dots do not light, your receiver battery is weak. Replace receiver battery with a fresh, 9V **alkaline** battery or use AC adaptor for power source.

Problems and Solutions

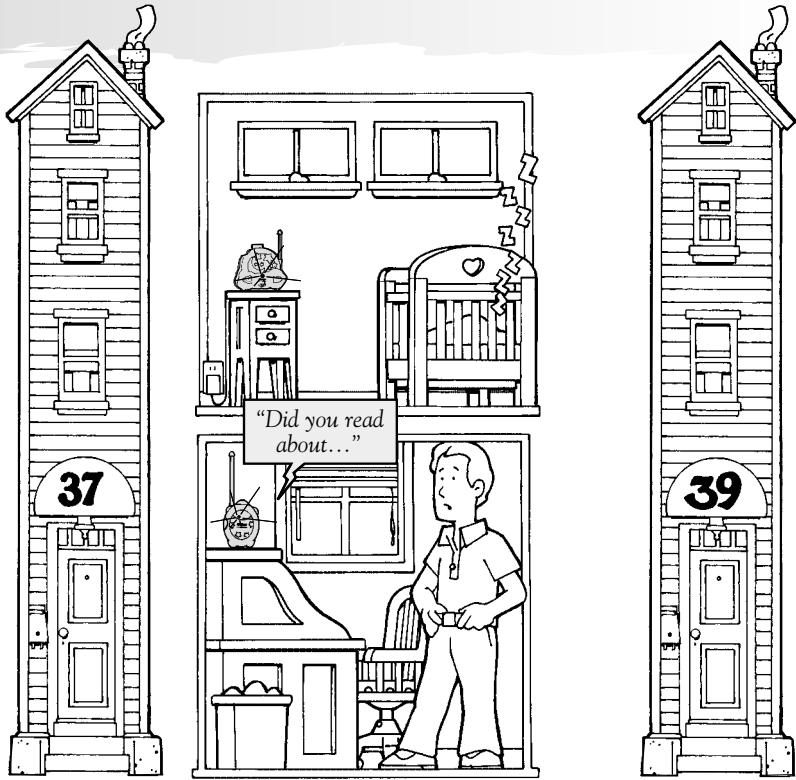

PROBLEM

You can hear conversations or sounds from other homes. There is signal interference due to other nursery monitors on same channel or cordless telephones.

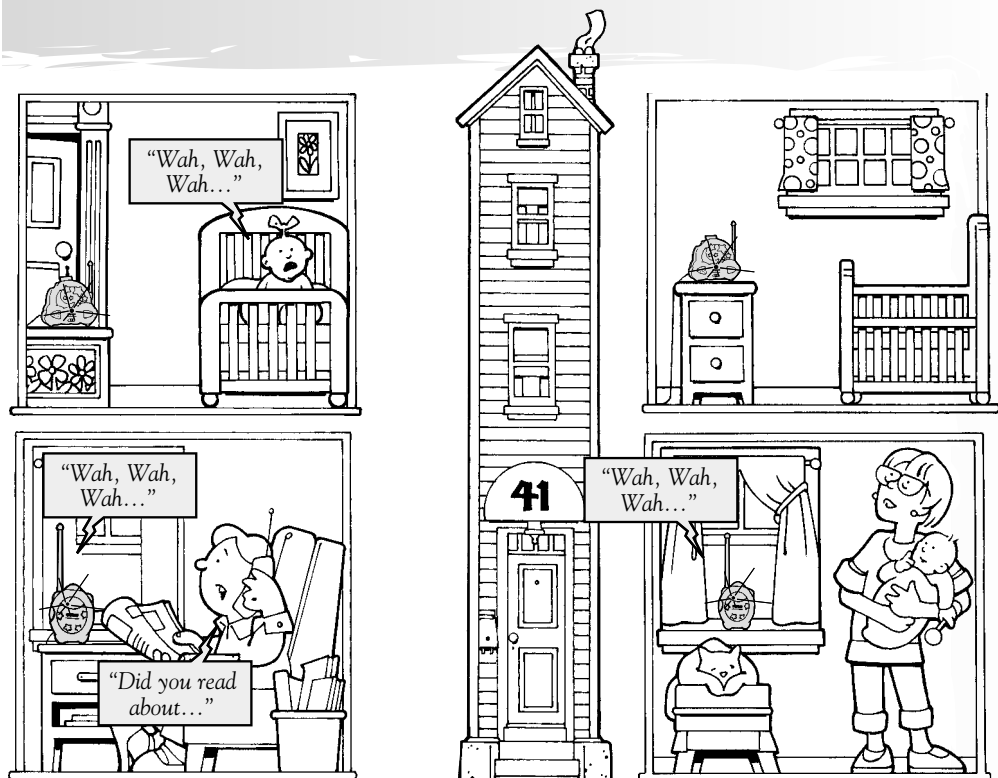

SOLUTION


Change channel switches on both transmitter and receiver to eliminate source of interference.

Hints:

- Do not use more than one transmitter and one receiver at same time in same household.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.


Replacing the Light Bulb (Glass Bulb)

IMPORTANT! Should the light bulb become non-functional, you are advised to remove and replace it. This should be carried out away from the child's sleep or play area.

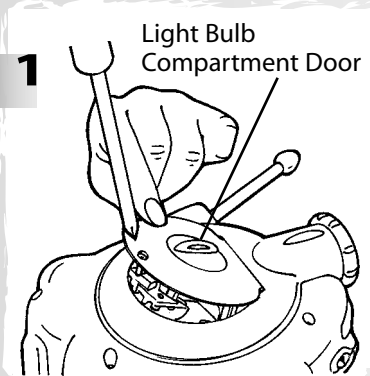


- Loosen the screw in the light bulb compartment door with a Phillips screwdriver.
- Lift to remove the light bulb compartment door.

Hint: You may need to fit a flat edged object to pry the light bulb compartment door up.

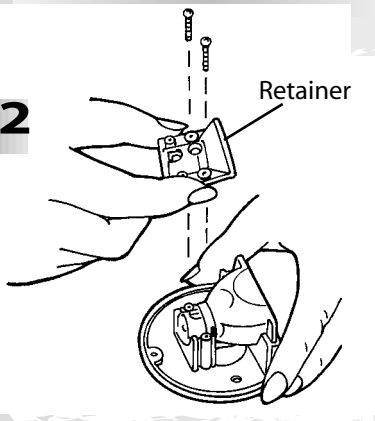


- Loosen and remove the two screws in the retainer with a Phillips screwdriver.
- Remove the retainer.

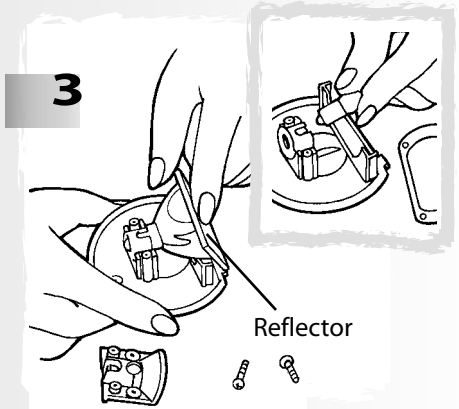


- While pressing the lens of the reflector, lift it from the light bulb compartment cover.
- Remove and properly discard the light bulb.
- Replace the light bulb with a new PR12 (6V) or equivalent light bulb.


Note: When replacing the light bulb, be sure to discard the light bulb properly. Beware of cracked or broken glass.

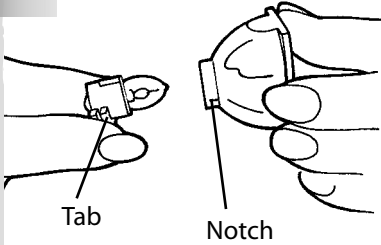4


- At an angle, fit the reflector over the new light bulb.
- Align the notch in the reflector with the tab in the light bulb receptacle.

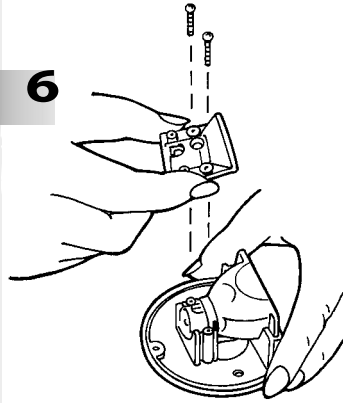6

- Replace the retainer. Insert the two screws in the retainer.
- Tighten with a Phillips screwdriver. Do not over-tighten.

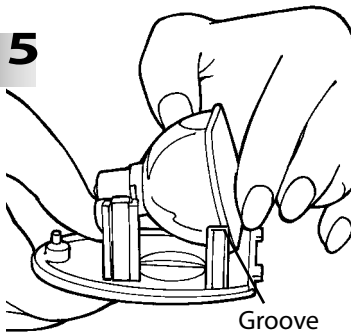5

- Push the reflector lens slightly and fit the reflector edges into the grooves in the light bulb compartment cover.

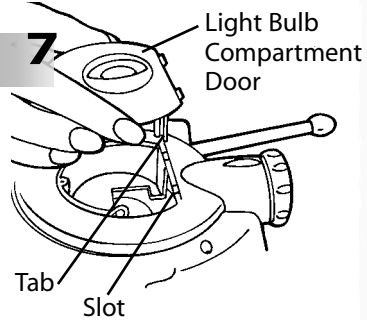7

- Fit the tabs on the light bulb compartment door into the slot in the back of the transmitter. Lower the light bulb compartment door closed.
- Tighten the screw in the light bulb compartment door with a Phillips screwdriver. Do not over-tighten.

Care

Excess dirt in transmitter and receiver microphone will hamper transmission of sound. Clean outer surface of transmitter and receiver with a cloth lightly dampened with a mild cleaning solution. Never immerse transmitter, receiver or AC adaptor.

FCC Note (*United States Only*)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Soothing Dreams™ with Remote Control Monitor
Model Number: 71597

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Soothing Dreams™ with Remote Control Monitor
Consumer Affairs Department
636 Girard Avenue
East Aurora, New York 14052

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Soothing Dreams™ with Remote Control Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase. Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Realties at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

The electronic components in transmitter, receiver and AC adaptor are not designed for consumer repair. Evidence of any attempt of consumer repair will void this warranty.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.
©2001 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

71597pr-0920