 
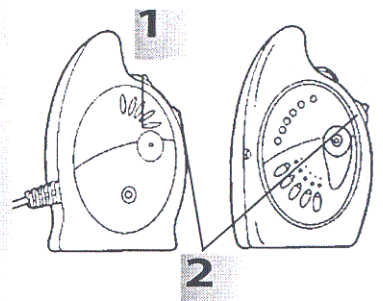 
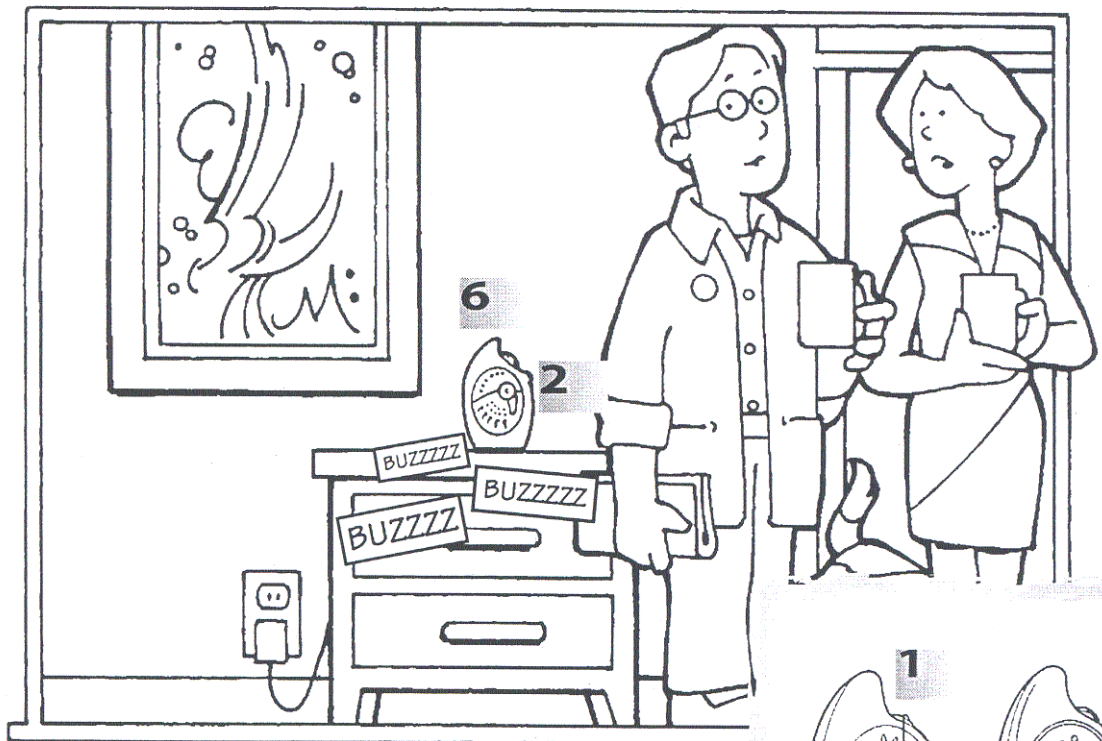 


Problems & Solutions

Circuit Breaker

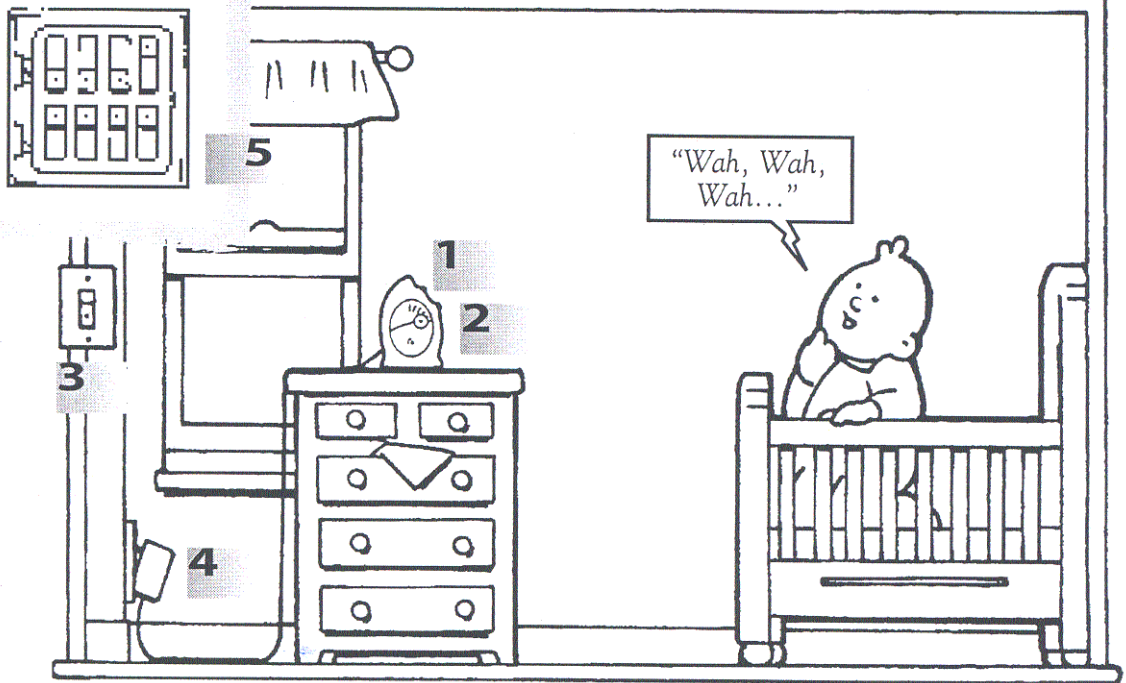

Problems & Solutions

PROBLEMS

 
- 1** Transmitter power indicator not lit.
- 2** You hear static or buzzing from receiver.
- 3** Transmitter power indicator not lit.
- 4** Transmitter power indicator not lit.
- 5** Transmitter power indicator not lit.
- 6** You hear static or buzzing and all five dots lit on receiver.

SOLUTIONS

- 1** Turn transmitter power on. Power indicator lights.
- 2** Make sure channel switches on both transmitter and receiver set to same channel.
- 3** Make sure light switch that controls power flow to wall outlet is on.
- 4** Check AC adaptor cord plug-to-outlet connection.
- 5** Power is off because circuit breaker for baby's room off. Make sure house fuses and circuit breakers are on.
- 6** Check all five solutions above. Any one or more of these solutions should solve the problem.

Hint: If, after checking all of these solutions, you believe that your AC adaptors are damaged, please call Fisher-Price® at 1-800-432-KIDS.

Problems & Solutions

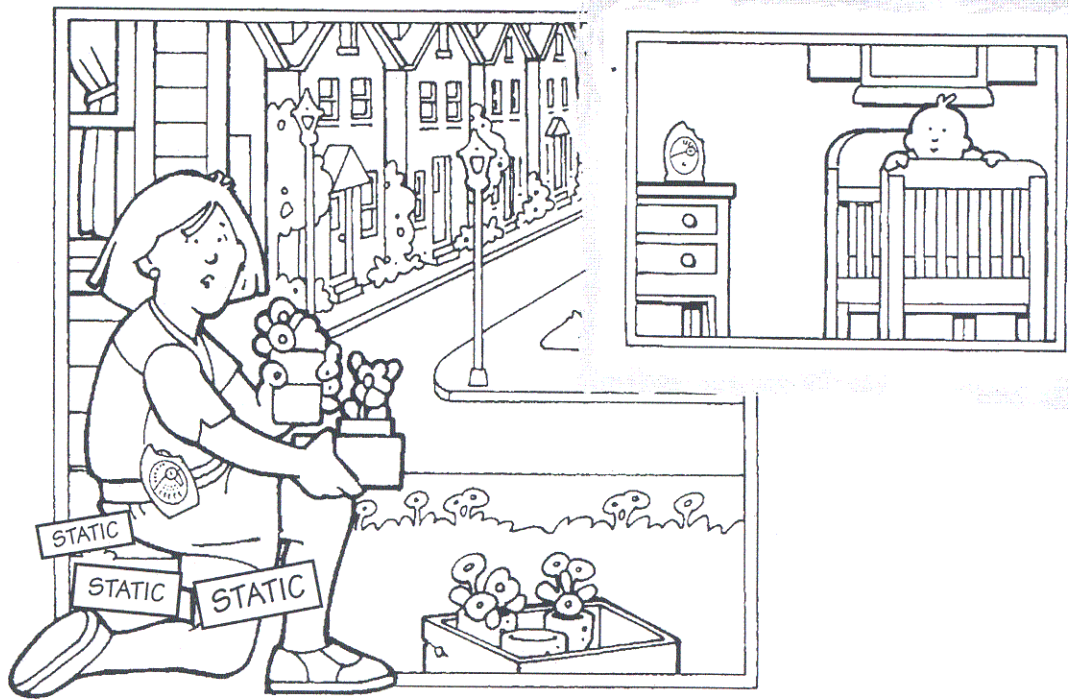

PROBLEM

You hear static or buzzing from receiver.

 
Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.

SOLUTION

Receiver is out of range of transmitter. Move receiver closer to transmitter.


Hint: If you cannot hear your child and all five bars do not light, your receiver battery is weak. Replace receiver battery with a fresh, 9V alkaline battery or use AC adaptor for power source.

Problems & Solutions

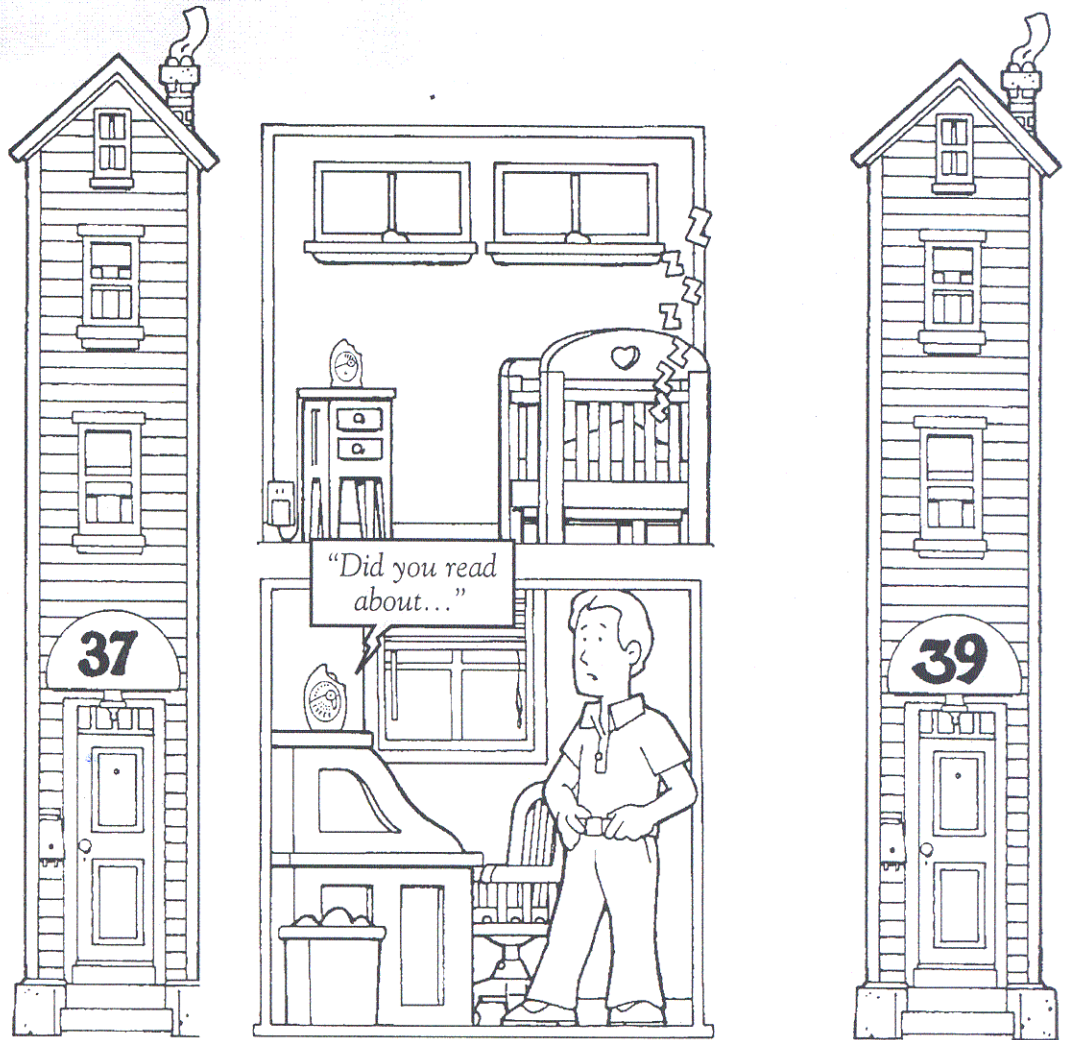

PROBLEM

 You can hear conversations or sounds from other homes.

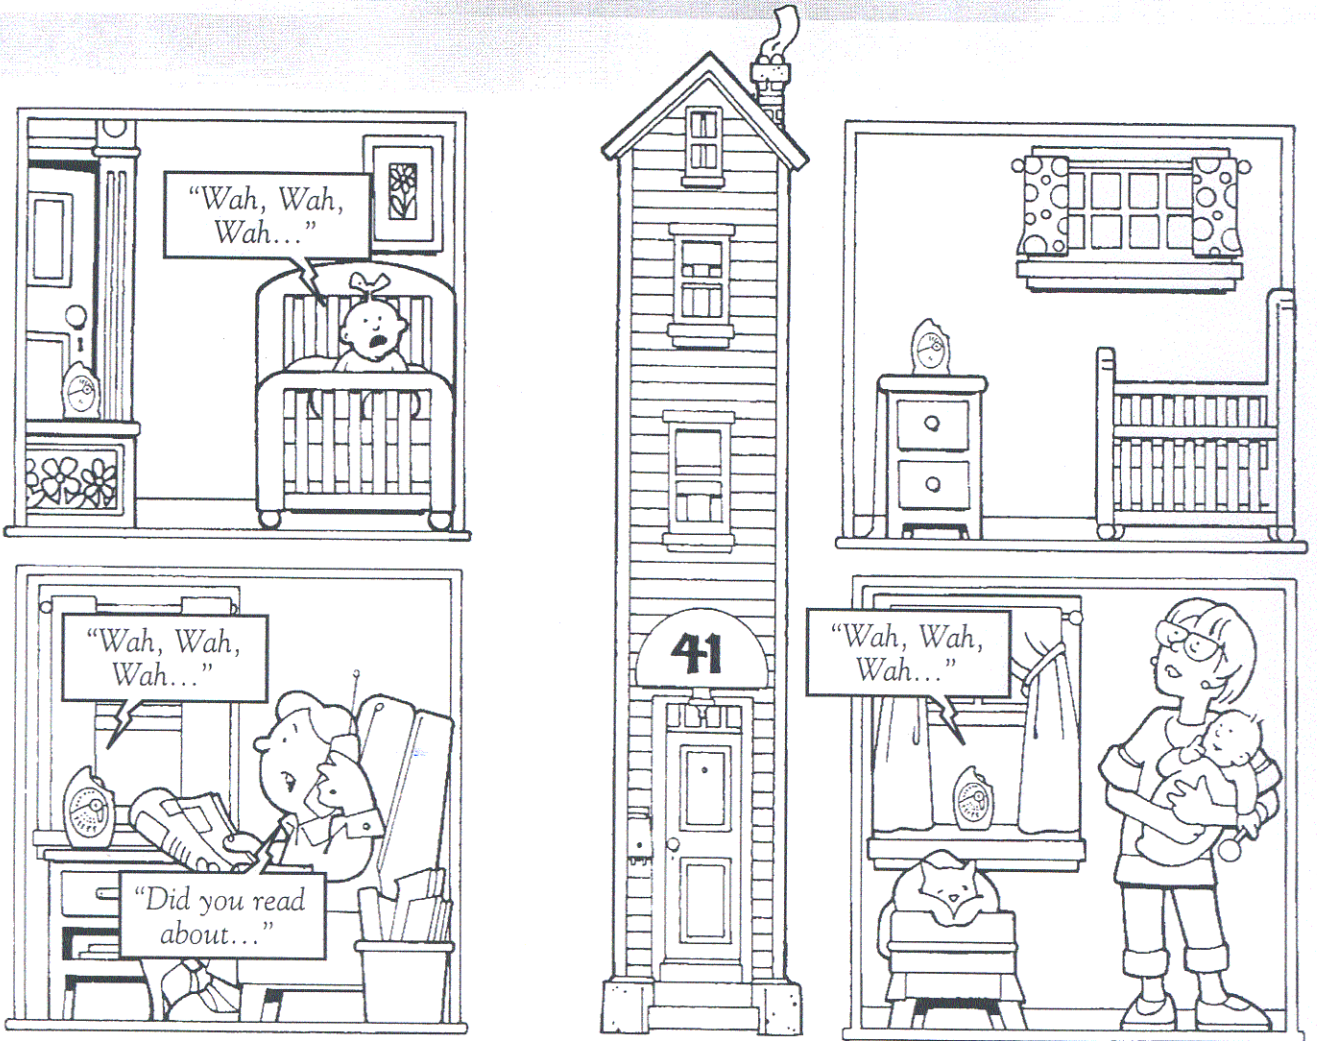

SOLUTION

There is signal interference due to other nursery monitors on same channel or cordless telephone use. Change channel switches on both transmitter and receiver to eliminate source of interference.

Hints:

- Do not use more than one transmitter and one receiver at same time in same household.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.

FCC Note (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Vibrating Monitor

Model Number: 71599

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Vibrating Monitor

Consumer Affairs Department

636 Girard Avenue

East Aurora, New York 14052

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Sound 'n Lights Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase. Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

The electronic components in transmitter, receiver and AC adaptor are not designed for consumer repair. Evidence of any attempt of consumer repair will void this warranty.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.

©2001 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

71599pr-0920