


Radio Control Construction Set

INSTRUCTION SHEET

Before starting, your toy requires (1) 9 volt battery, (4) "AA" alkaline batteries and a Phillips screwdriver (not included) for assembly.


How to install the Batteries

Step 1 Remote Control

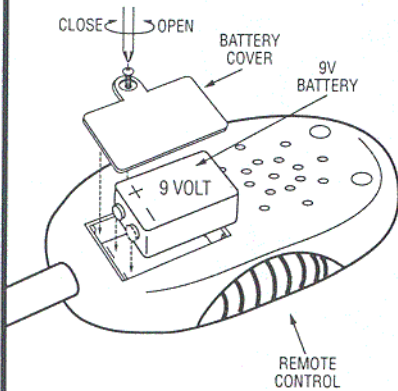

- Unscrew the battery cover on the back of the Remote Control, using a Phillips screwdriver and remove.
- Insert (1) 9 volt alkaline battery into the battery compartment carefully noting the direction of the (+) and (-) symbols as shown.
- Replace the cover and tighten the screw.


Step 2 Dump Truck

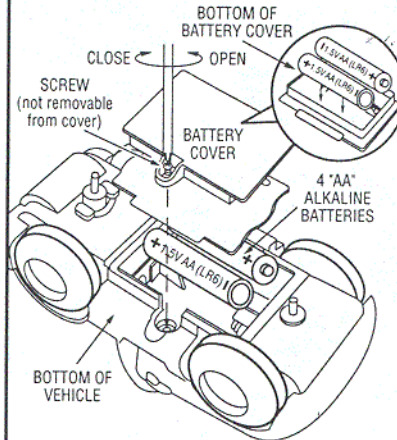

- Take Dump Truck and turn it upside down.
- Unscrew the battery cover on the bottom and remove.
- Insert 4 "AA" size alkaline type batteries into the battery compartment as shown, carefully noting the direction of the (+) and (-) symbols.
- Replace the cover and tighten the screw.

How the Vehicle works

Step 3 How to turn the vehicle ON

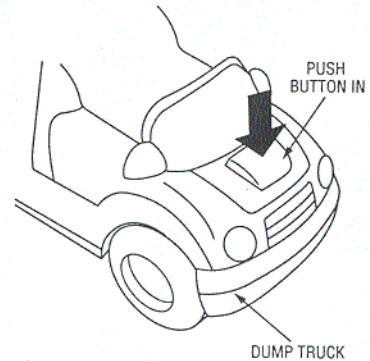

- To turn Dump Truck "ON", push in the Button on the front hood of the vehicle as shown.

Note: This button is not an "ON-OFF" switch. The vehicle will automatically turn itself off after 3 minutes of not being used.


Step 4 How the Remote Control Works

BUTTON A

Pressing the top arrow will make the vehicle go **forward**.
Pressing the bottom arrow will make the vehicle go **in reverse**.


BUTTON B

When you press this button a car horn will sound.
Note: The remote control has no ON-OFF switch but instead has a sleep mode which turns itself ON automatically when you start playing with the buttons.

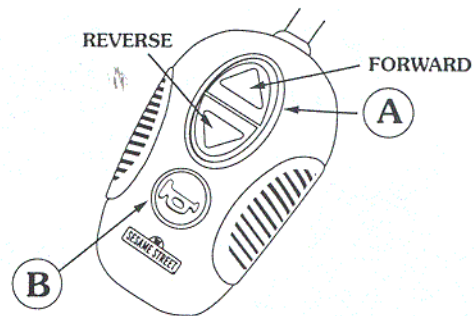

Step 5 How to snap the track together

- The track pieces snap together easily by holding an end with Slots over an end with Locking Tabs.
 - Carefully line up both ends as shown and push the track with the Slots down firmly until they lock together.
- Note:** Always assemble your track on a hard, flat surface.

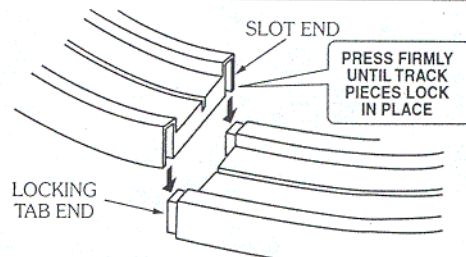

FISHER PRICE

JOB# : 308U1

FCCID : CCT93778-49T

EXHIBIT : 3A


Item No : 93778
Version : English
Size : 8.5" x 11"
Paper : Woodfree paper 80 gsm
Color : Black
Date : MAR 09, 2001 (AW)

Step 6 Assemble the entire track layout as shown below

Assemble all the track, as shown at right, being very careful to match the correct Letters that are engraved on the ends of each track section.

For example: Attach **A** to **A** end and the **B** to **B** end; etc, of the various tracks.





Note. Assemble the accessory pieces to the track layout after you assemble the entire layout.

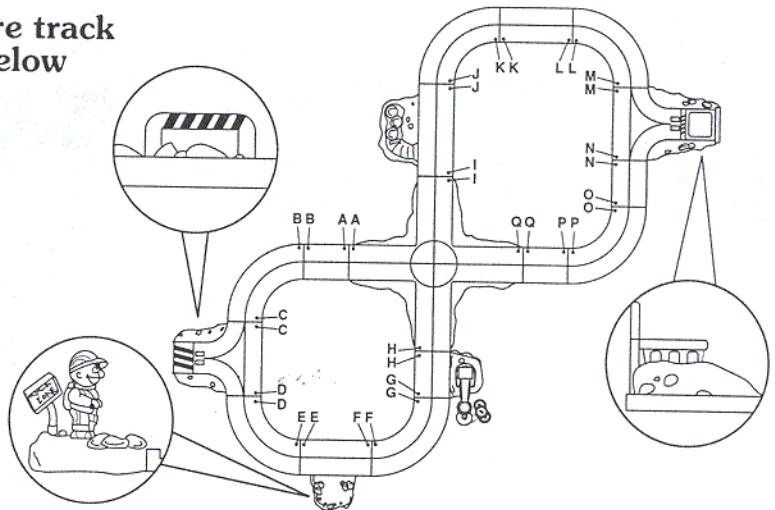

HOW TO ASSEMBLE ACCESSORIES

Step 7 Accessories

- The Construction Set comes with special signs that are "keyed."
- Insert the signs in their stands. Because they are keyed, they can only be inserted in one direction.
- The signs will snap into place when inserted correctly.

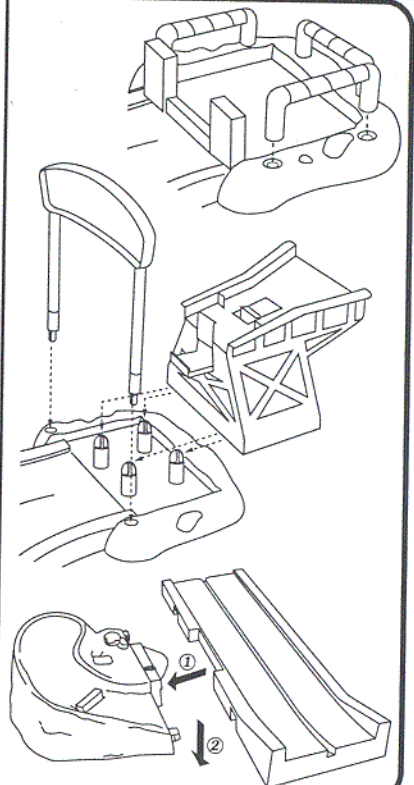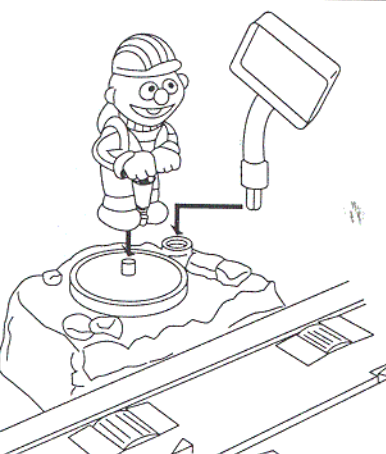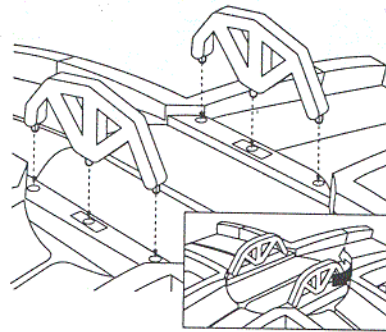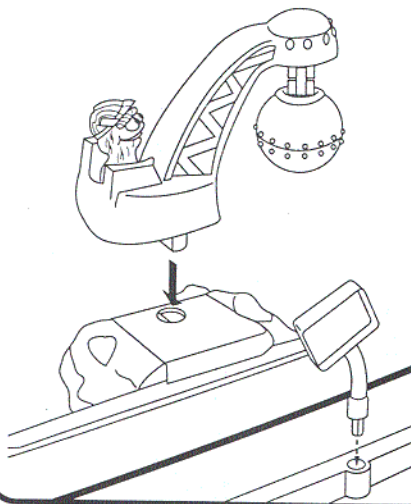

©2000 Sesame Workshop.
Sesame Street and its logo are trademarks of Sesame Workshop.
All rights reserved.
Watch Sesame Street on PBS and 123 Sesame on Noggin.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York,
New York 10010 U.S.A.
Manufactured for Fisher-Price. ©2000 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packing and address should be retained for future reference.
Should this product cause local electrical interference
we recommend moving it away from other equipment.

CAUTION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before they are charged.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old batteries and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.

NOTE:

The manufacturer is not responsible for any unauthorized modifications to this equipment. Such modifications could void the user's authority.

Model#93778-49R

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Questions or Comments?
1-800-432-5437



FISHER PRICE

JOB# : 308U1

FCCID : CCT93778-49T

EXHIBIT : 3B

Fisher-Price

ITEM NO. 93778