



Triclone Responder™

with Remote Controller



Figure sold separately and subject to availability.

Model Number: B5634

Please keep this instruction sheet for future reference,
as it contains important information.

Requires four "C" (LR14) **alkaline** batteries in the toy and one 9V (6LR61)
in the remote controller for operation. (Batteries not included.)

 
 
Adult assembly required for battery installation.

Tool needed for battery installation: Phillips screwdriver (not included).

Fisher-Price

www.rescueheroes.com

TOY BATTERY INSTALLATION

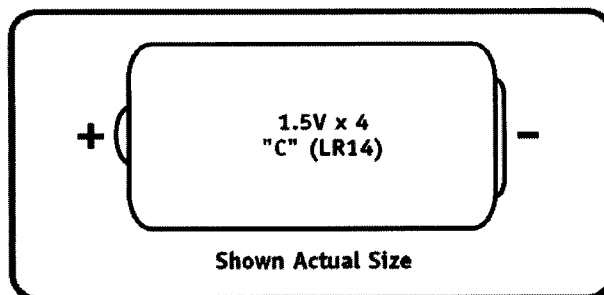
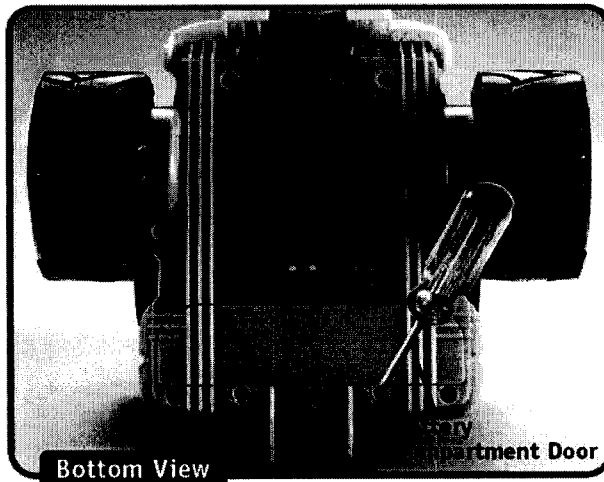


- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four "C" (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

Hints:

- We recommend using **alkaline** batteries for longer life.
- When this toy stops working or works erratically, it's time to replace the batteries! Under normal use conditions, the batteries in the toy will require replacement more often than the battery in the remote controller. When you notice that the toy does not respond to the remote controller, try replacing the batteries in the toy before replacing the battery in the remote controller.

  REMOTE CONTROLLER BATTERY INSTALLATION

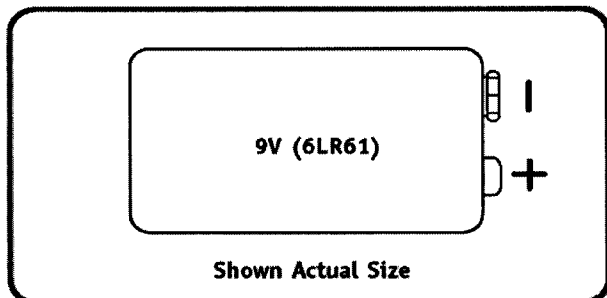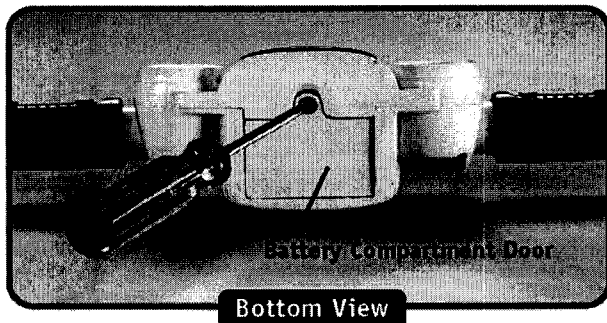

- Locate the battery compartment on the bottom of the remote controller.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert one 9V (6LR61) **alkaline** battery.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Hint: We recommend using **alkaline** batteries for longer life.

BATTERY SAFETY INFORMATION

 
 
 
Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:





- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

TO THE RESCUE!

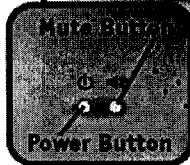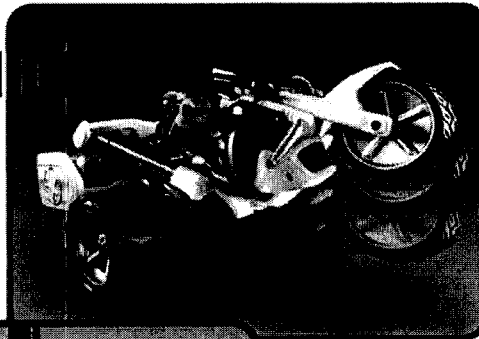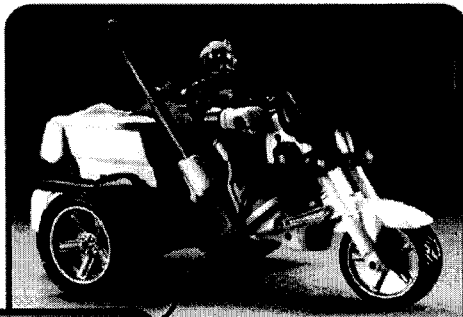⚠ CAUTION

To prevent entanglement, keep hair away from wheels.
Play safely! Do not operate toys in the street.




- Place any Rescue Heroes™ figure (not included) in the seat and place their hands on the handlebars.
- Press the power button  on the bottom of the toy to turn it on.
- Press the  button on the remote controller and the toy moves forward with sounds and lights!
- Press the  button on the remote controller and the toy spins clockwise with sounds and lights!
- Press and hold the  button in the center of the remote controller to convert from a patrol cycle to a "wheelie popping" rescue cycle. Press and hold the button again to switch back.



TO THE RESCUE!

Mute Button

 
- Press the mute button  on the bottom of the toy to turn off the sound effects. Press it again to turn them back on.

Hints:

- When you are finished playing, remember to press the power button on the bottom of the toy to turn it off.
- The toy will automatically turn off (sleep mode) if it does not receive a signal from the remote controller for about a minute. To turn the toy back on, simply press the power button on the bottom of the toy.

IMPORTANT!

- This toy works best on smooth, hard surfaces. We do not recommend use on grass, loose dirt or wet surfaces.
- For best performance:
 - Hold the remote controller with antenna upright.
 - Make sure the remote controller and the toy are in direct line of sight, free of obstacles.
 - Do not operate this toy around other remote control (RC) toys operating on the same frequency.
- If the toy operates erratically or does not respond to the remote controller, move the toy closer to the remote controller. If the toy still fails to respond to the remote controller, it's probably time for an adult to replace the batteries.
- In the unlikely event that use of the remote controller interferes with normal use of other remote controlled equipment, such as televisions and stereos, or use of other electric or battery powered appliances interfere with operation of the toy, do not use both appliances at the same time.



CARE

- To clean, wipe all parts with a damp cloth. Never immerse the remote controller or toy.
- Keep water, sand and dirt off of this toy.
- Keep this toy away from direct sunlight and excessive heat.
- Do not drop this toy on a hard surface.
- This product contains no consumer replaceable parts. Do not take this toy apart.

FCC NOTE (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

Rescue Heroes™ Triclone Responder™
Model Number: B5634

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Relations Department
636 Girard Avenue
East Aurora, New York 14052

The Triclone Responder™ operates on 27.145MHz radio frequency.

The field strength is 73.2dBµV/m at 3m.



- Meets requirements of Council Directives - 99/5/EC, 89/336/EEC, 88/378/EEC
- Suitable for use in all EC member states.

CONSUMER INFORMATION

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at 1-800-432-5437, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

CANADA

Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2003 Mattel, Inc. All Right Reserved. * and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

B5634pr-0920