 


**Fisher-Price®**

# Sound 'n Lights Monitor

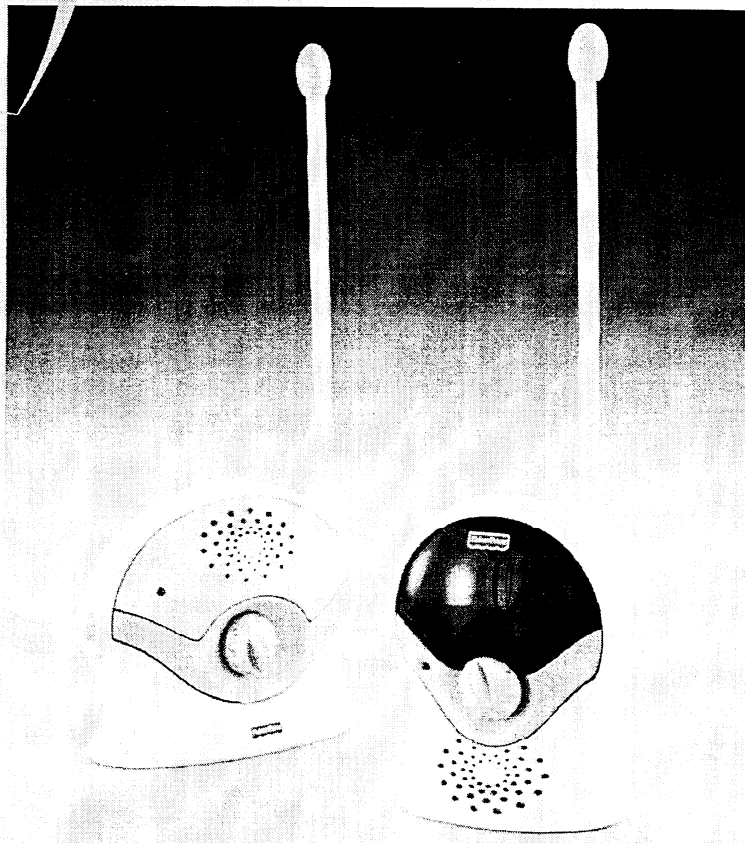

Model Number: B9636

For proper setup and use, please read these instructions.

Please keep this instruction sheet for future reference,  
as it contains important information.

Includes two AC adaptors to power transmitter and receiver (plugs into  
standard household outlets – 120V AC). Receiver also runs on battery  
power (9V alkaline battery – not included).

Adult assembly is required to install the battery (if used).

Tool needed for battery installation:  
Phillips screwdriver (not included).

[www.fisher-price.com](http://www.fisher-price.com)

# IMPORTANT!



## CAUTION

This product cannot replace responsible adult supervision.

- This product is not intended to be used as a medical monitor and its use should **not** replace adult supervision.
- Test sound reception of receiver before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
  - Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
  - Never use extension cords with the AC adaptors.
- Never use transmitter or receiver near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter and receiver where there is adequate ventilation. To prevent overheating, keep transmitter and receiver away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.

## Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, between 8 AM - 6 PM EST, Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call **1-800-382-7470**.

Or write to:

 
Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

## Care

Excess dirt in transmitter microphone will hamper transmission of sound. Clean outer surface of transmitter and receiver with a cloth lightly dampened with a mild cleaning solution.

Never immerse transmitter, receiver or AC adaptors.

# Receiver Battery Installation (Optional)

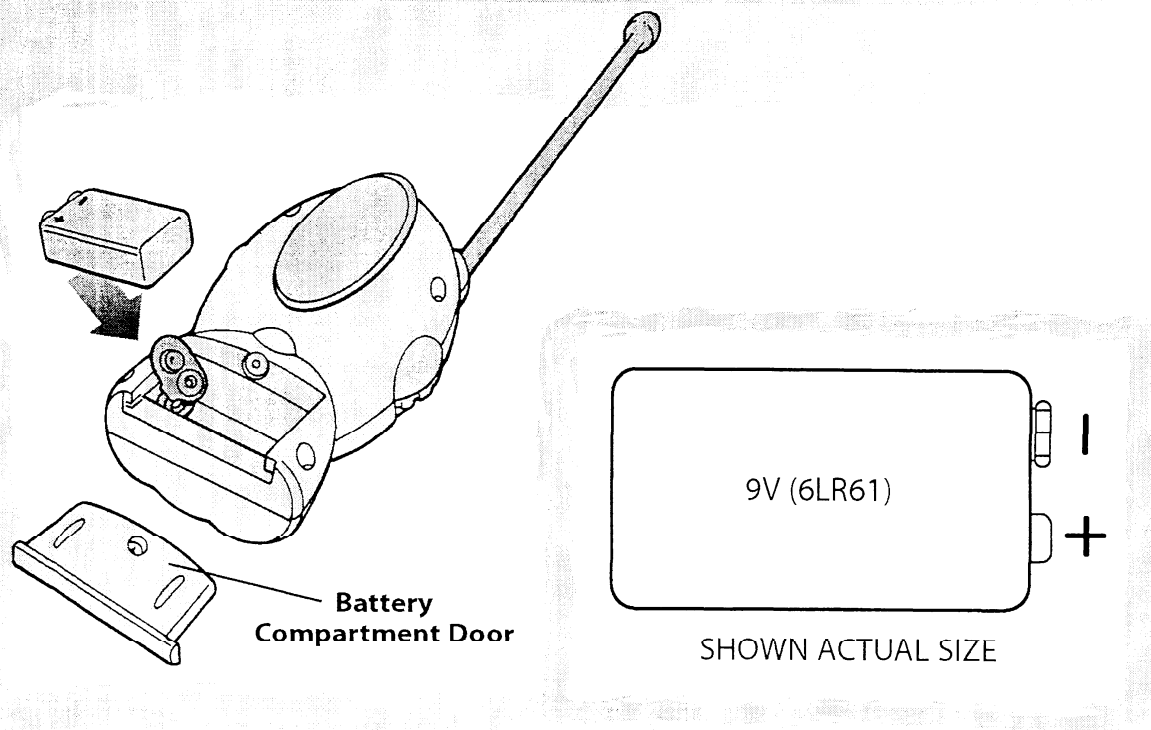



- Locate battery compartment door on bottom of receiver.
- Loosen screw on battery compartment door with a Phillips screwdriver. Remove battery compartment door.
- Snap terminals of a fresh, 9V alkaline battery into receiver connectors.
- Replace battery compartment door. Tighten screw with a Phillips screwdriver.

## Battery Safety Information

  Batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage

- Insert battery as indicated inside the battery compartment.
- Remove battery during long periods of non-use. Always remove an exhausted battery from the product. Dispose of battery safely. Do not dispose of battery in a fire. The battery may explode or leak.
- Never short-circuit the battery terminals.
- Use only a battery of the same or equivalent type, as recommended.
- Do not charge a non-rechargeable battery.
- Remove a rechargeable battery from the product before charging.
- If a removable, rechargeable battery is used, it is only to be charged under adult supervision.

# Setup & Use

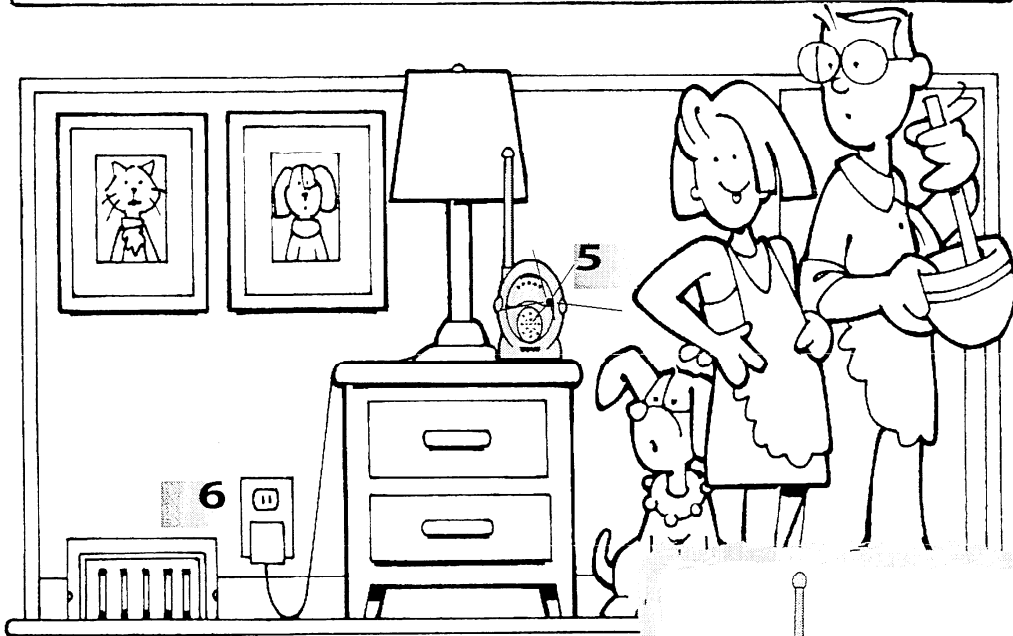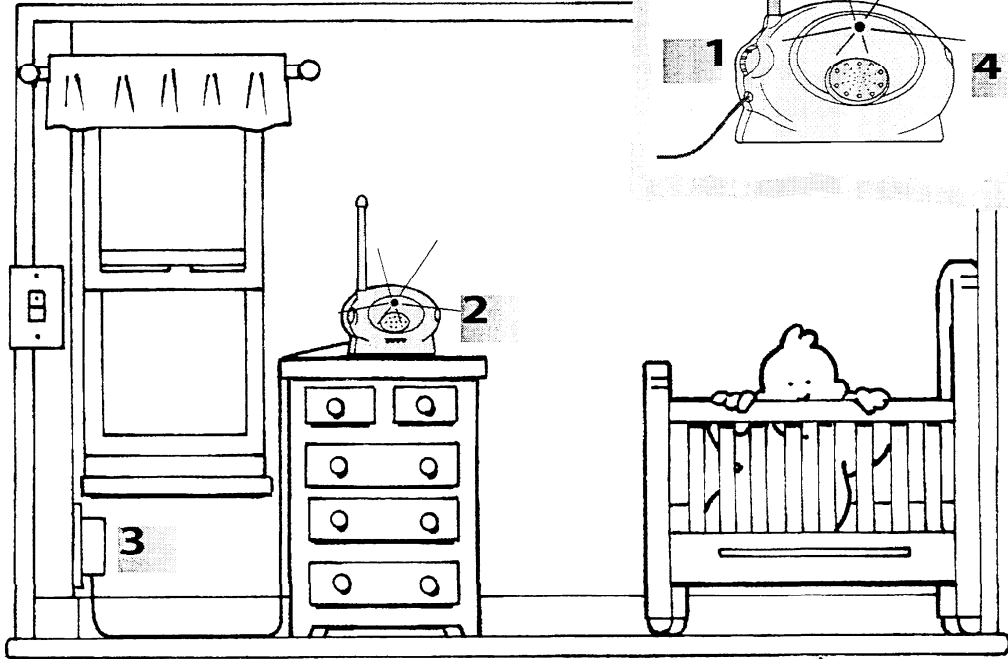

# Setup & Use

**IMPORTANT!** Test sound reception of this monitor before first time use and whenever you change location of transmitter (see page 4).

- 1** Set transmitter channel switch to same channel as receiver.
- 2** Place transmitter in same room with child. Point microphone directly toward crib or play area.
- 3** Unwrap and fully extend AC adaptor cord for best transmission. Insert AC adaptor jack into transmitter socket and plug into wall outlet.
- 4** Rotate transmitter power dial to turn power on. Power indicator lights.
- 5** Place receiver where you will see or hear it.
- 6** Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.  
**Note:** To use a 9V alkaline battery for power source, refer to "Receiver Battery Installation" instructions on page 3.
- 7** Rotate receiver power/volume dial to turn power on. Power indicator lights. Rotate power/volume dial to adjust volume.

**Notes:** AC adaptor is 120 VAC, 60Hz, 4W input; 6 VDC 100mA output; center positive polarity; plug OD is 5.5 mm, plug ID is 1.5 mm.

If you have any questions about this product:

 
**In Canada,** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**In Great Britain, telephone 01628 500303.**


**In Australia,** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

# Testing Sound Reception


Test transmitter transmission and receiver reception each time you change location of use.

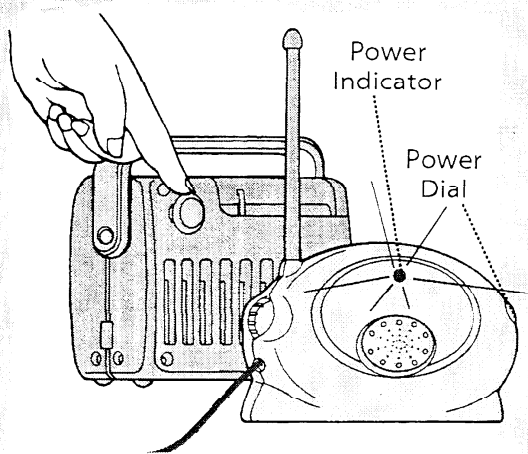

 Place transmitter in room in which you intend to use it. Rotate transmitter power dial to turn power on. Power indicator lights. Turn on a radio.

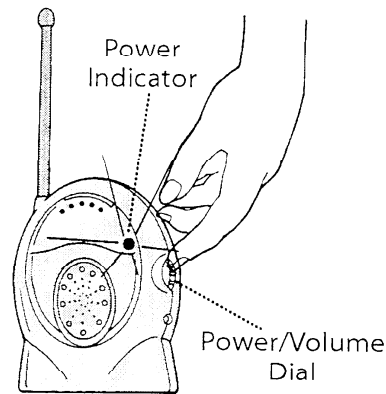

 Place receiver in room in which you intend to use it. Rotate power/volume dial to turn power on. Power indicator lights. Adjust receiver location.

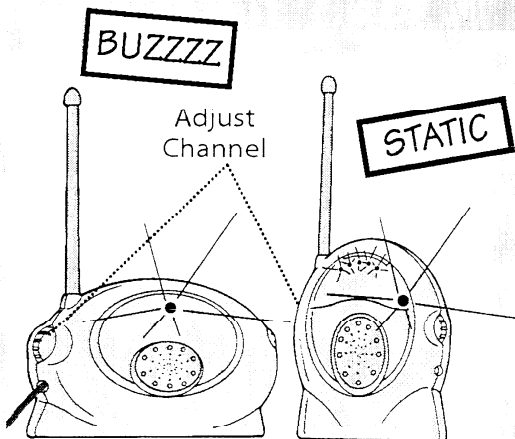

- Variable light display lights when sound is received by receiver:
  - One or two dots light for shallow sounds.
  - Three or more dots light for louder sounds.
- If you experience interference (buzzing or static, etc.) while using one channel setting, switch **both** units to other channel. Selecting a channel is usually a one time adjustment.

**Hint:** All five dots in receiver variable light display light:

- If you turn receiver power on before transmitter power. You will also hear static noise. Turn volume down on receiver and turn transmitter power on.
- If the receiver is too far away from the transmitter. Move the receiver closer to the transmitter.
- If loud sounds are transmitting.