
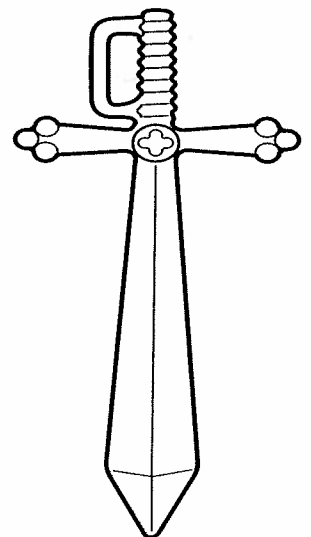
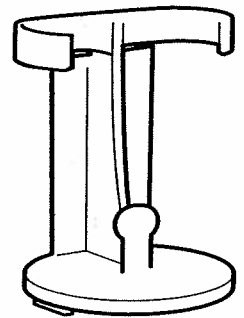
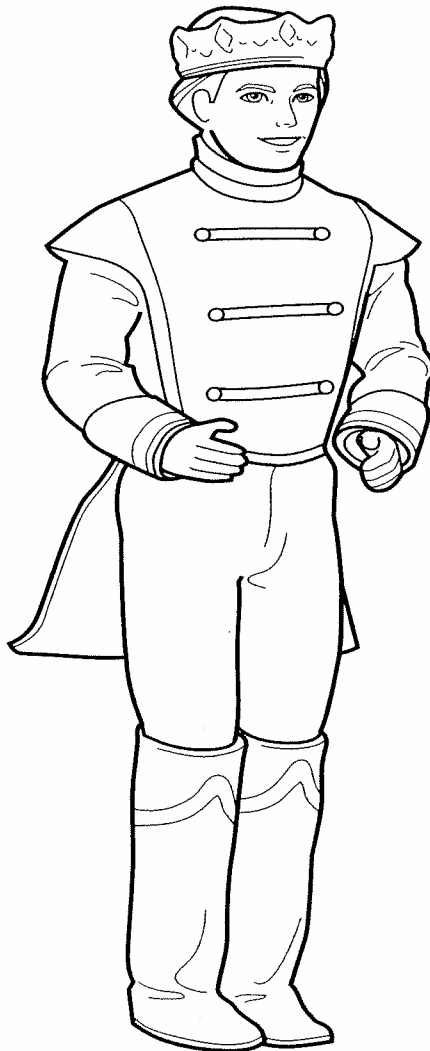


Barbie IN THE Nutcracker™

**Ken® doll
Prince Eric
INSTRUCTIONS**

CONTENTS

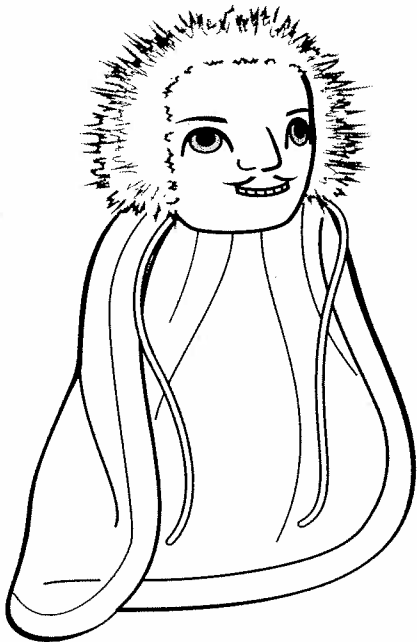

Colors and decorations may vary from those shown.

Please remove everything from the package and
compare to the contents shown here.
If any items are missing, please call 1-800-524-TOYS.



50793-0920

Keep these instructions for future reference as they contain important information.

Your doll can “dance” using Barbie® doll’s dance stand.

Dance stand sold with *Sugarplum Princess Barbie*® doll.


- 1.** Slide the doll back into his doll stand, as shown.



- 2.** Then slide the doll down to the bottom of his stand. Place the doll stand into the slots on Barbie® doll’s dance stand.




- 3.** Twirl your doll by moving the dance stand back and forth on a smooth flat surface.

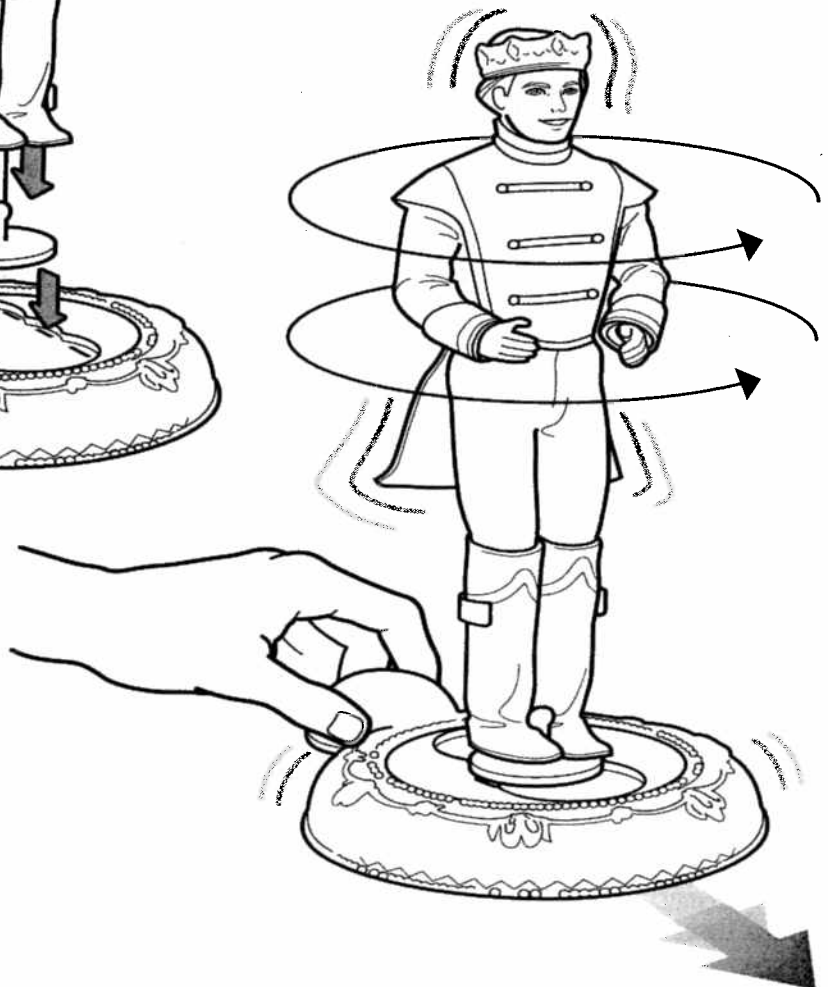

Slip the
Nutcracker head
onto the doll...




...place the hat on the
Nutcracker head.

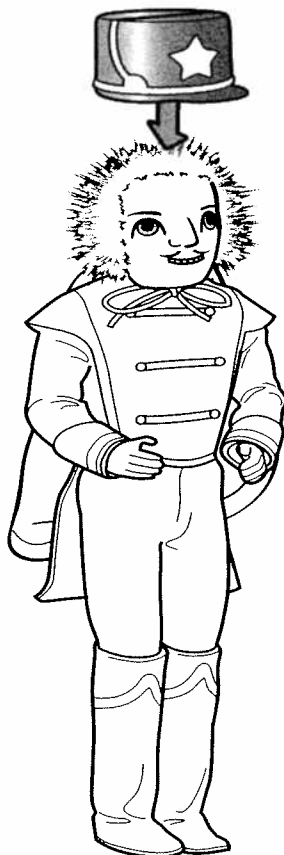

Slip the
sword onto
the Prince's
hand.



**To remove the
doll stand** from
the dance stand,
gently lean back
the doll and doll
stand until the
doll stand comes
out of the slots.

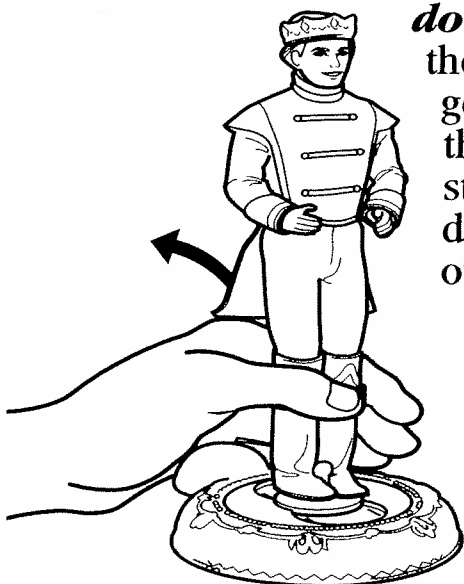


Your doll can
also dance with
the Princess.
(For dance
stand
placement,
see the back of
the instructions.)



Barbie® doll The Sugarplum Princess
sold separately, subject to availability.

One doll on F...vo dolls can be arranged on F... doll's dance stand.


Dance s... with Sugarplum Princess Barbie® doll.

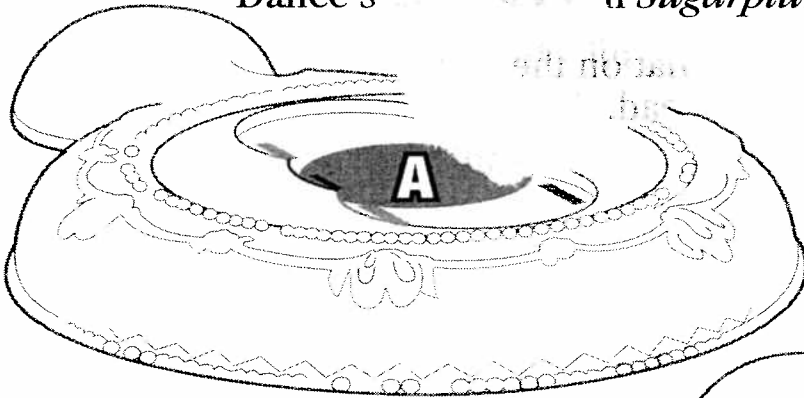

One doll, on a doll stand, placed *only* in the **center** area (**A**).

Two dolls, each on a doll stand, placed in the **outside** areas (**B**).

For best results, Barbie® and Ken® dolls dance together, and Kelly® and her Li'l Friends dance together. Do not mix dolls of different heights.

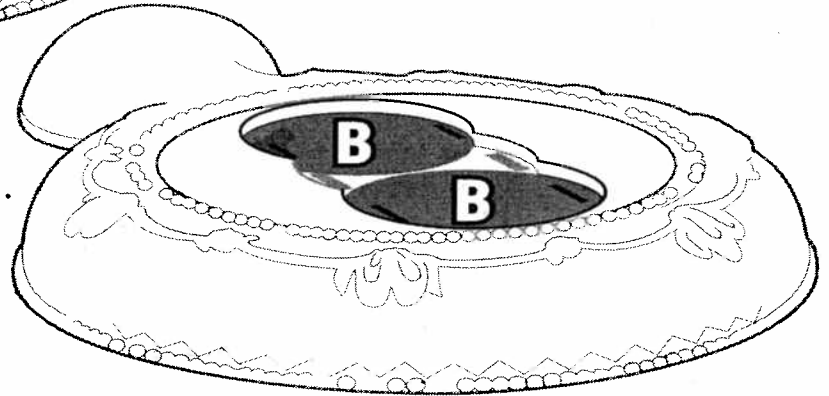

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

CONSUMER INFORMATION

MATTY MATTEL™ Toys



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.



WARNING:

CHOKING HAZARD – Small parts.
Not for children under 3 years.