

Fisher-Price®

Product Number 73767

Sparkling Symphony™

Compose 'n Play Orchestra™



Please save these instructions for future reference.

Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:

Phillips screwdriver (not included).

 
www.fisher-price.com

IMPORTANT!

A plastic tab was inserted in the back of this product for in-store demonstration purposes. For best product performance, please be sure to completely remove this tab and discard it properly.

Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.

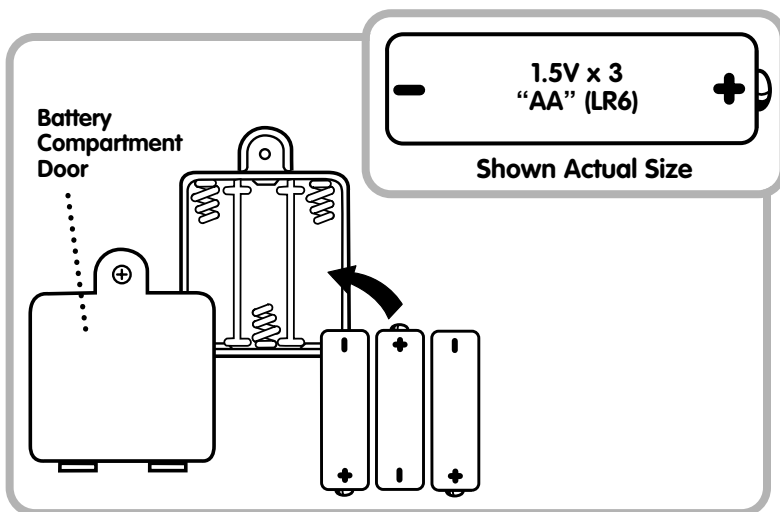

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Lift to remove the battery compartment door.
- Remove the exhausted batteries from the battery compartment and properly discard them.
- Insert three “AA” (LR6) **alkaline** batteries as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop working, it's time for an adult to replace the batteries!

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.





Classical Fun for Baby



The Sparking Symphony™ Compose 'n Play Orchestra™ interacts with baby. It plays five classical compositions and encourages baby to sort animal shaped characters in three different modes.

Power/Volume Switch

- Locate the power/volume switch on the front of the toy.
- The switch has three positions: off ● ; on with low volume 🔊 and on with high volume 🔊

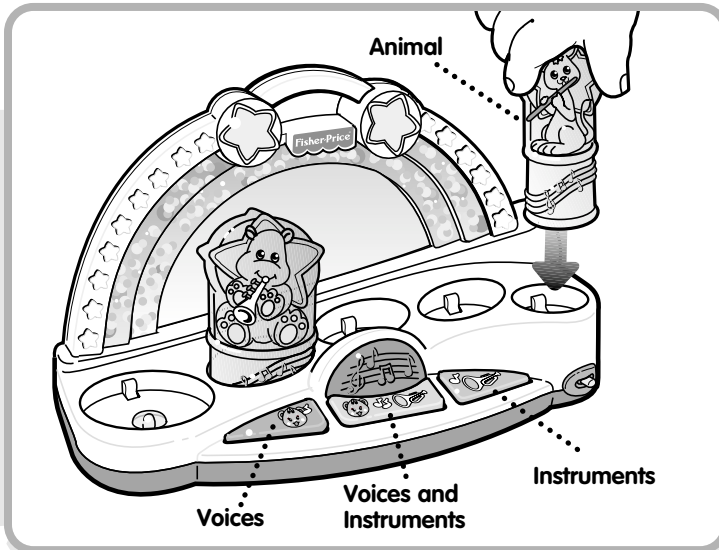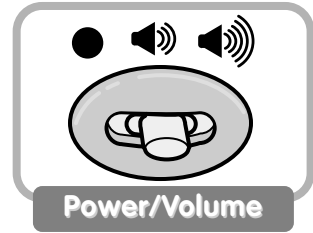

Voice and Instrument Mode

- Press the 🐼🎸 button for voice and instrument mode.
- When baby places an animal in the matching size spot, a light flashes and that animal plays its instrument and sings.
- Place the other animals in their matching spots to hear a combination of voices and instruments playing.
- When each animal is removed from the toy, each stops playing its instrument and stops singing.

Hints:

- When there are no animals in their spots you can press any mode button to hear a musical scale with flashing lights.
- If your child is not actively playing with this toy, it turns off automatically (sleep mode).

Voice Mode

- Press the 🐼 button for voice mode.
- When baby places an animal in the matching size spot, a light flashes and that animal sings its part of a song.
- Place the other animals in the matching spots and they will sing together as a chorus.
- When each animal is removed from the toy, each stops singing.

Instrument Mode

- Press the 🎸 button for instrument mode.
- When baby places an animal in the matching size spot, a light flashes and that animal plays its part of a song on its instrument.
- Place the other animals in the matching spots and all the animals play their instruments together as a band.
- When each animal is removed from the toy, each stops playing its instrument.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

CANADA, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Questions? 1-800-567-7724. **GREAT BRITAIN**, Mattel U.K., Ltd., Helpline: 01628 500303.

AUSTRALIA, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1-800-800-812 (valid only in Australia).