

Fisher-Price®



Flash the Fire Truck™



77611

Tuffy the Dump Truck™



77705

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "C" batteries for operation (included).

Adult assembly is required for battery replacement.



Tool required for battery installation: Phillips screwdriver (not included).



Discover what's possible™... www.fisher-price.com

Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy, with three, new “C” (LR14) alkaline batteries.

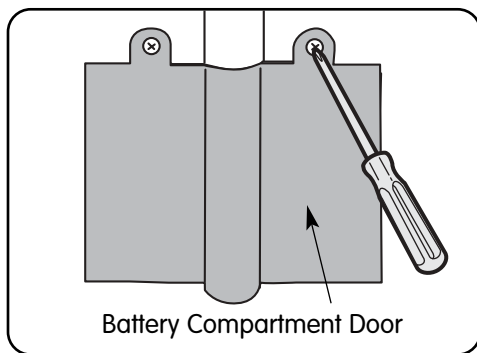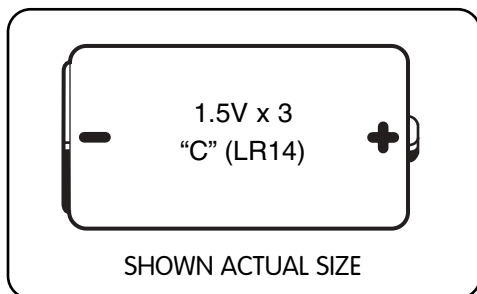

- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries from the battery compartment and properly discard them.
- Insert three “C” (LR14) **alkaline** batteries as indicated inside the battery compartment.

Hint: We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds from this toy become faint or stop working, it's time for an adult to replace the batteries!

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the “Battery Replacement” instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Tuffy the Dump Truck™


ON OFF



- Locate the On/Off switch on the bottom of the toy.
- Slide the switch to the ● position to turn the toy **on** and to the ○ position to turn it **off**.

“Ready to rum rum rum rumble!”

On/Off Switch
(under toy)

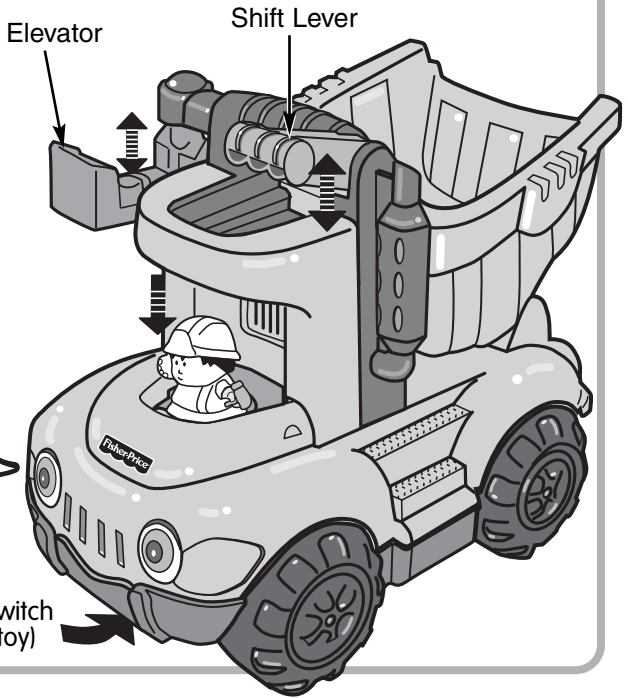

Note: The phrase shown in quotes is random response by this toy. This toy may respond differently than shown.

Idle Mode

- To start idle mode, make sure the shift lever is down, then press down on the driver while he is in the driver's seat.
- In idle mode, the driver and truck converse, the truck's motor will rumble and its eyes and "mouth" move.

Overdrive Mode

- Lift the shift lever to switch the truck to overdrive.
- In overdrive mode the truck drives forward and talks while its eyes and "mouth" move.
- When the truck stops, you can restart overdrive in either of two ways:
 - Push the shift lever down and lift it again.
 - Push down on the driver, in the driver's seat (with the lever up).


Hint: In either mode, move the elevator up and down to hear more sound effects.

Flash the Fire Truck™

ON OFF



- Locate the On/Off switch on the bottom of the toy.
- Slide the switch to the ● position to turn the toy **on** and to the ○ position to turn it **off**.

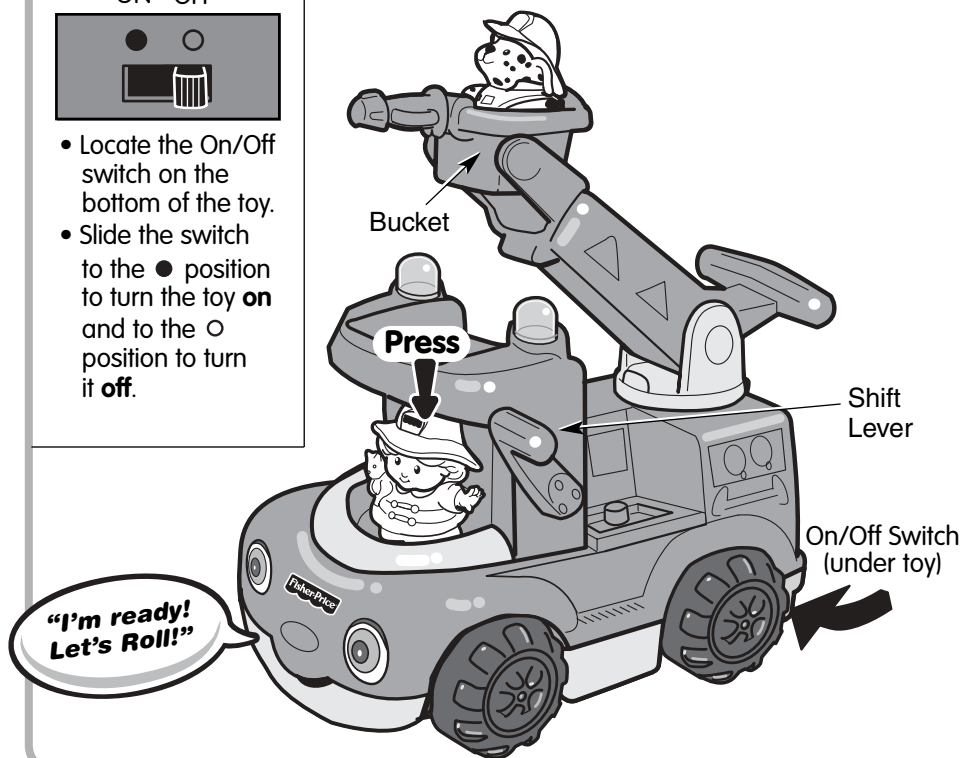

Note: The phrase shown in quotes is a random response by this toy. This toy may respond differently than shown.

Idle Mode

- To start idle mode, make sure the shift lever is up, then press down on the firefighter while he is in the driver's seat.
- In idle mode, the firefighter and the fire truck converse, the truck's siren will sound and its eyes and "mouth" move.

Overdrive Mode

- Press the lever down to switch the fire truck to overdrive.
- In overdrive mode, the fire truck drives forward and talks while its eyes and "mouth" move.
- When the truck stops, you can restart overdrive in either of two ways:
 - Lift the shift lever and press it down again.
 - Push down on the firefighter, in the driver's seat (with the lever down).

Hint: In either mode, press down on the bucket to hear water spray sound effects.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone **01628 500302**. **Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.



Fisher-Price, Inc. is a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

© 2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.