



INFANT-TO-TODDLER SOOTHING ROCKER

Model Numbers: 79414, 79614

Please keep this instruction sheet for future reference, as it contains important information.

Use the upright position only when your child has developed enough upper body control to sit without leaning forward.

Always use the restraint until your child is able to climb in and out of the chair unassisted.

Designed for use with children from birth to 40 lbs.

Adult assembly is required. No tools necessary.

Requires one "D" (LR20) alkaline battery (not included).



WARNINGS

WARNING

To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.
- Use the upright position only when child has developed enough upper body control to sit without leaning forward.

CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products. If this should happen, **please call us toll-free**, rather than return this product to the store.

Usually, we can solve the problem during a conversation or by sending you replacement parts.

Call **1-800-432-KIDS**,


8 AM - 6 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora,
New York 14052.

PARTS

IMPORTANT! Please remove all parts from the package and identify them before assembly. The seat back tube may have been packaged within the pad at the factory. Before beginning assembly, please remove the seat back tube from the pad.

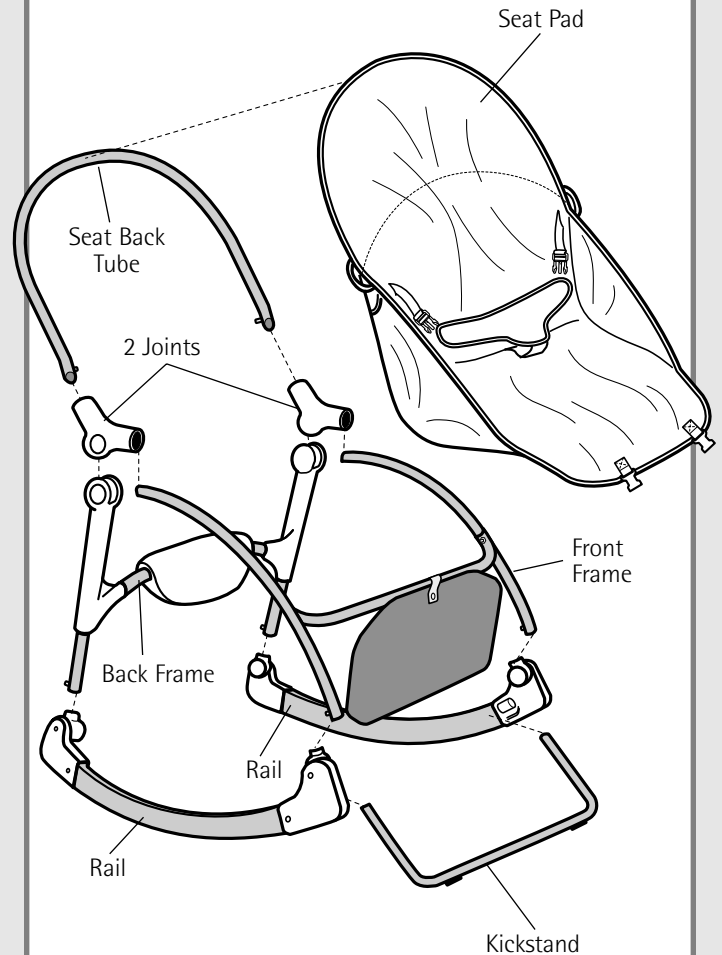


ASSEMBLY


IMPORTANT! Before assembly or each usage, inspect this product for damaged hardware, loose joints, missing parts or sharp edges.

⚠ CAUTION

This package contains small parts in its unassembled state. Adult assembly is required.

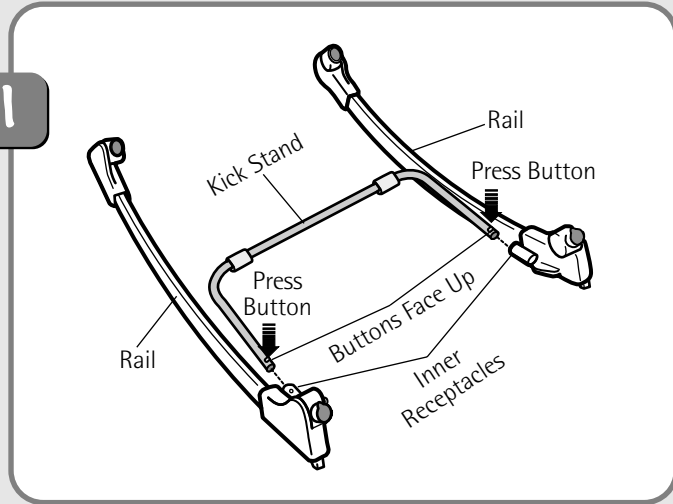


- Position each rail so that the inner receptacles are **facing each other**.
- Position the kickstand so the buttons face up.
- While pressing the button on each end of the kickstand, insert and **"snap"** the kickstand into the inner receptacle on each rail. **Make sure you hear a "snap" on each end of the kickstand and the buttons are visible in the inner receptacles.**

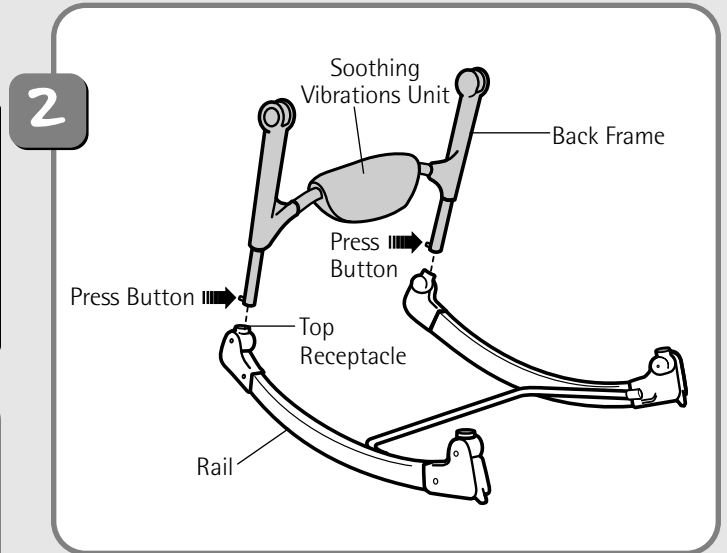

- Position the back frame so that the soothing vibrations unit power switch faces out.
- Make sure the top receptacle on each rail is **upright**.
- While pressing the button on each end of the back frame, insert and **"snap"** the back frame into the top receptacle on each rail. **Make sure you hear a "snap" on each side of the back frame and the buttons are visible in the top receptacles.**


ASSEMBLY

3

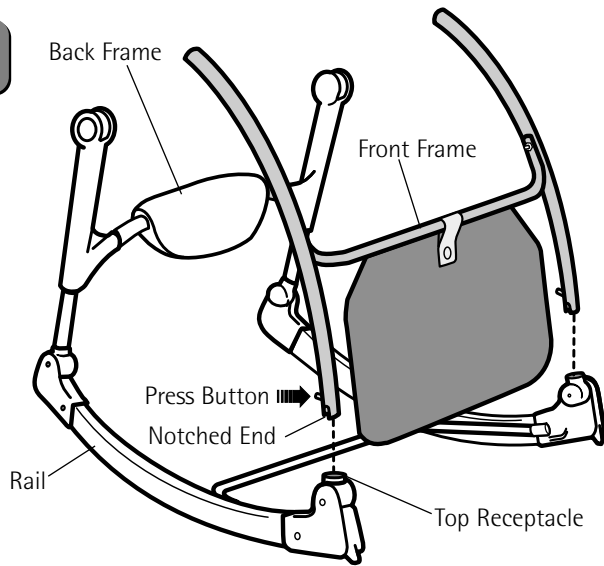

- Position the front frame so that it bends back towards the back frame and the notched end is down.
- Make sure the top receptacle on each rail is **upright**.
- While pressing the button on each end of the front frame, insert and **"snap"** the front frame into the top receptacle on each rail. **Make sure you hear a "snap" on each side of the front frame and the buttons are visible in the top receptacles.**


4

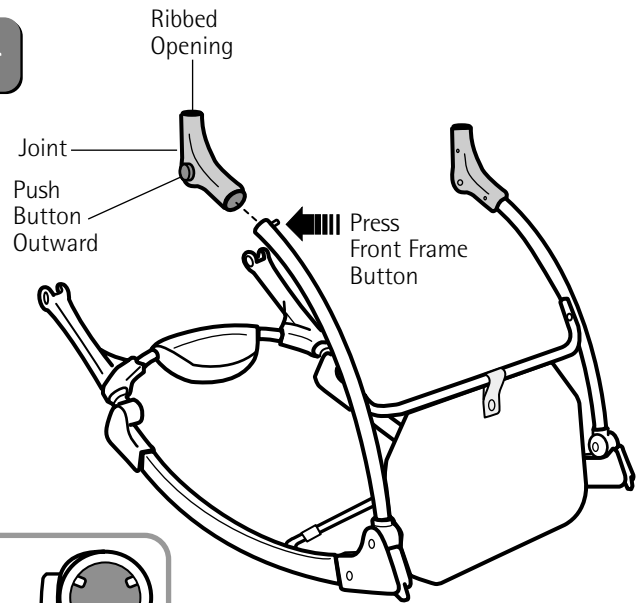


Joint

- Lift the front frame up slightly.
- Position one of the joints so the push button is **outward and the ribbed opening is upright**. Fit the joint onto one of the ends of the front frame.
- Press the front frame button on the inside of the front frame. Slide the joint down until the button **"snaps"** into place. **Make sure you hear a "snap"**.
- Repeat this procedure to attach the other joint to the other end of the front frame.

ASSEMBLY

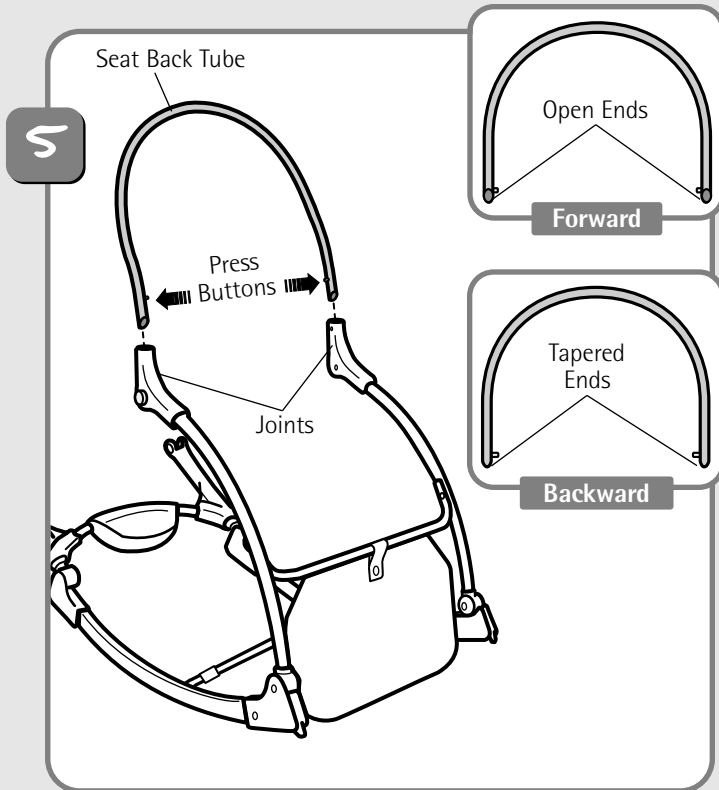


- Position the seat back tube so that the **open ends are forward**.
- Press the front frame button on each end of the seat back tube and insert the ends of the seat back tube into the joints on the frame.
- Push the seat back tube into the joints until the buttons **"snap"** into place. **Make sure you hear a "snap" on each side.**
- Pull up on the seat back tube to be sure it is secure.

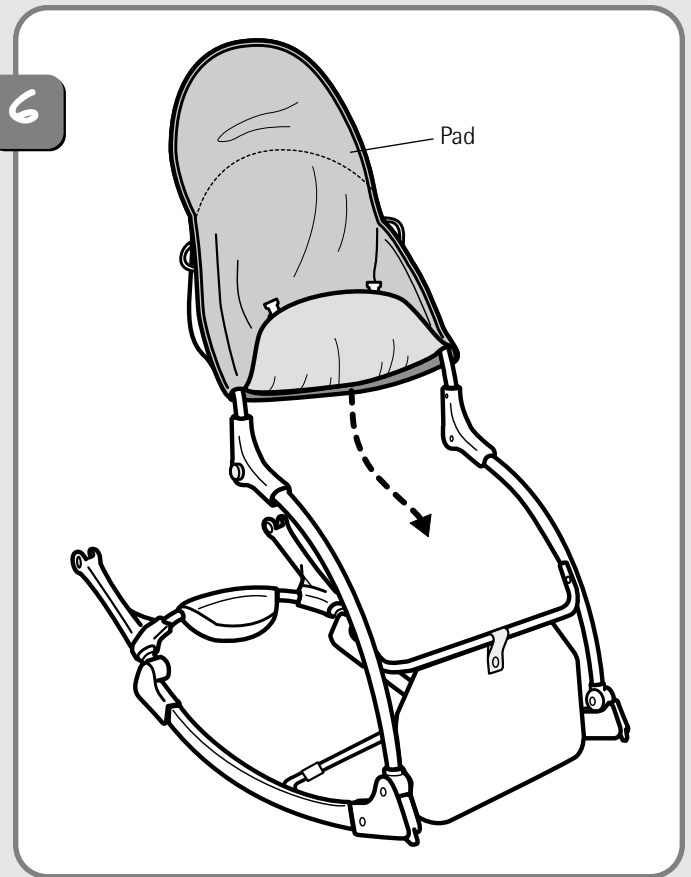

- Slide the pad over the seat back tube.
- Pull the pad down over the frame.


ASSEMBLY

7

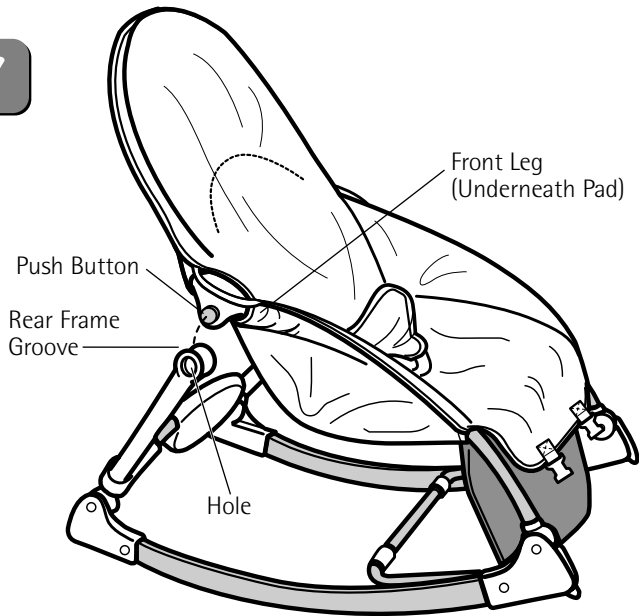


- Push the front frame and rear frame toward each other.
- Press the push button on each joint and fit each joint into the groove in each end of the rear frame. **Make sure both push buttons "snap" into the hole in each end of the rear frame.**
- Check to be sure the front and rear frames are assembled correctly, by pulling them away from each other. The frames should remain attached to each other.


8

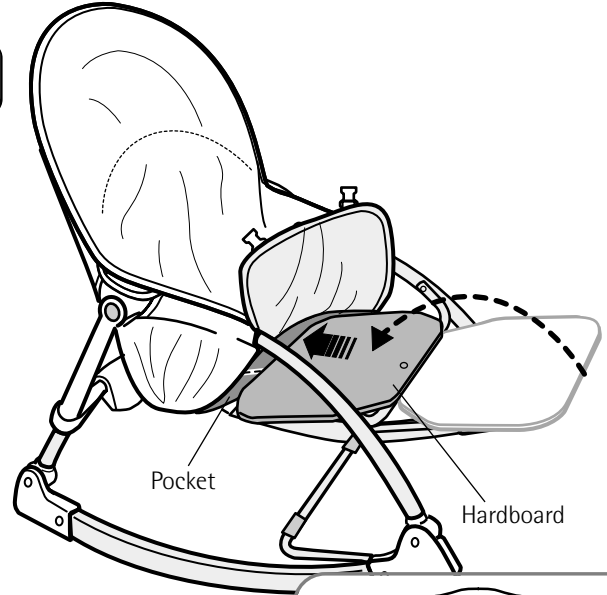

- Turn the hardboard over and insert it into the pocket in the bottom of the pad.
- Turn the seat face down.
- Fasten both pad buckles together. Make sure you hear a "snap" on both sides

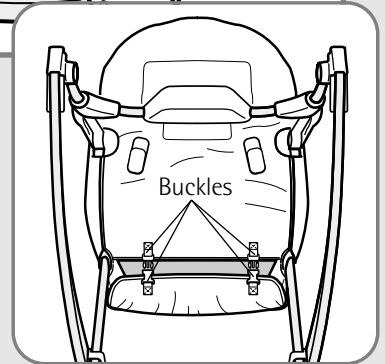

BATTERY INSTALLATION

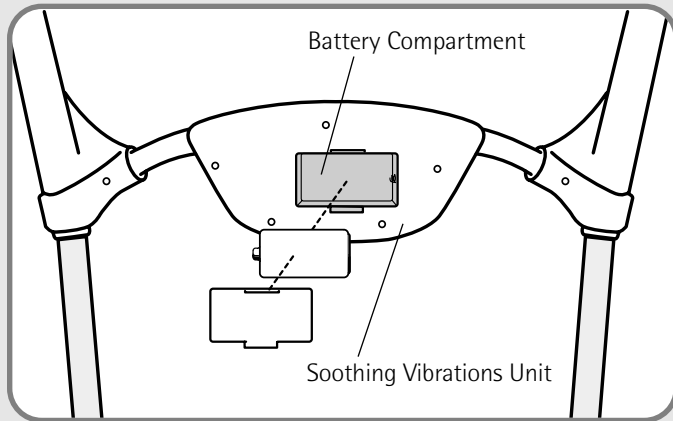


- Locate the battery compartment on the back of the soothing vibrations unit.
- Insert a coin into the slot in the battery compartment door. Pry the battery compartment door open.
- Insert one "D" **alkaline** battery as shown inside the battery compartment.

Hint: Use only an **alkaline** battery for longest battery life.

- Replace the battery compartment door and be sure it snaps securely closed.

BATTERY TIPS

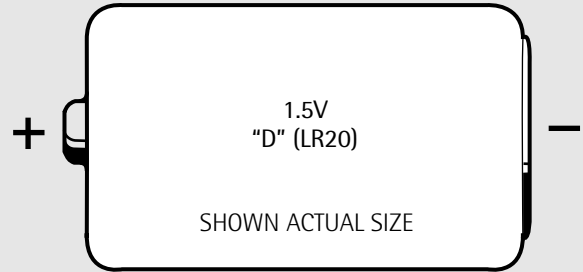

- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage this product. Dispose of the battery safely.
- Never short circuit the battery terminals.
- A non-rechargeable battery is not to be recharged.
- Only a battery of the same or equivalent type as recommended in the Battery Installation instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

SET-UP & USE


IMPORTANT! Before each usage or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. Do not use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

Upright Position

WARNING


To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.
- Use the upright position only when child has developed enough upper body control to sit without leaning forward.

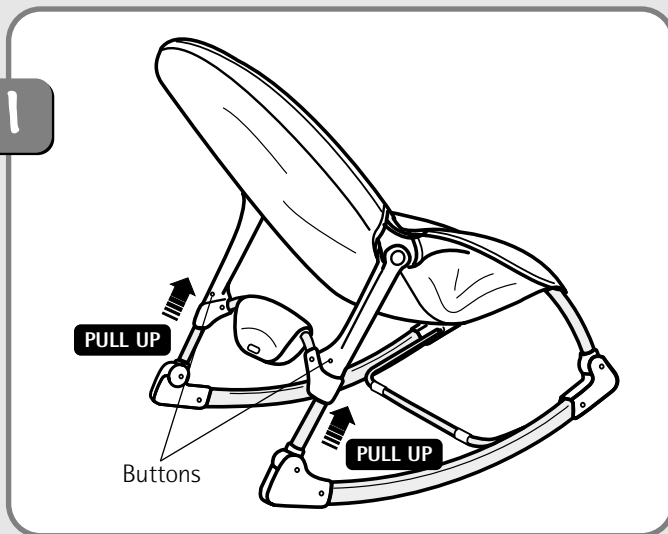

- Pull both rear legs up until the small buttons "snap" into place. Make sure you hear a "snap" on both sides.

Semi-Recline Position

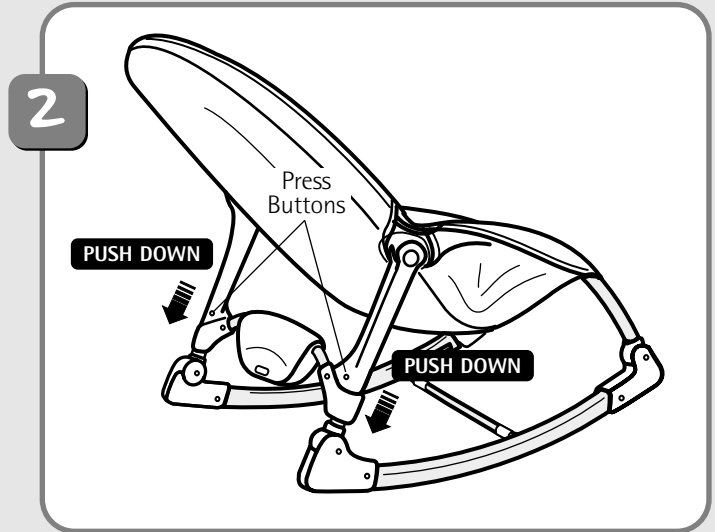

- Press the small button on each rear leg and push the rear frame down completely.

SET-UP & USE


Securing Your Infant

WARNING

To prevent serious injury and/or falls:


- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.

3

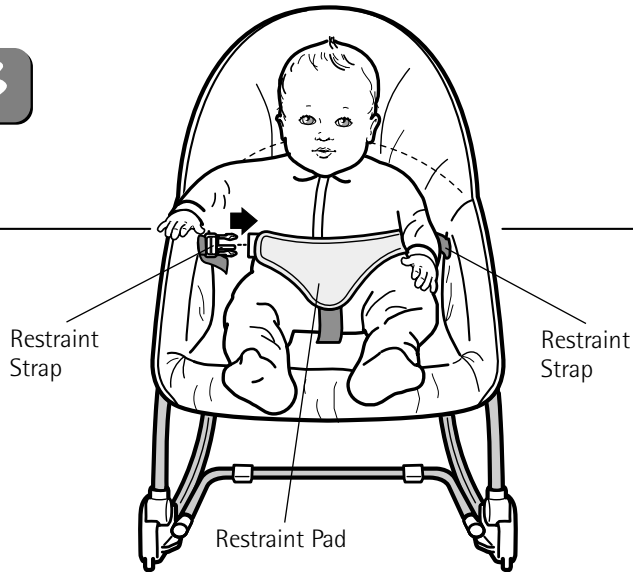

- Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten the restraint straps to the restraint pad. Make sure you hear a "click" on both sides.
- Make sure the restraint is securely attached by pulling it away from your child. The restraint should remain buckled.

4

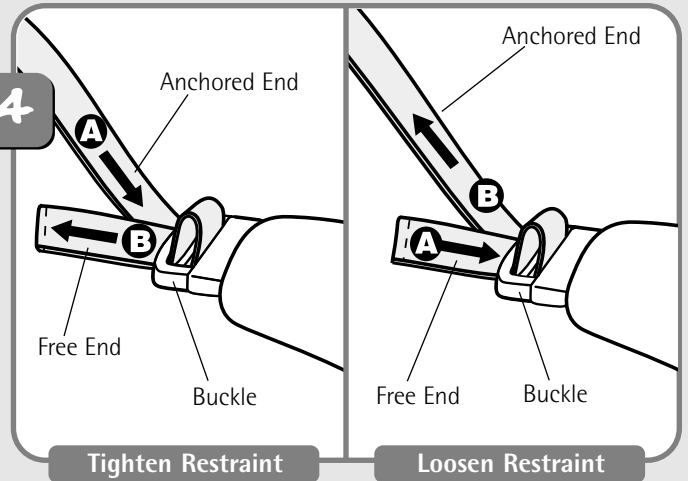

To tighten the restraint straps:

- Feed the anchored end of the restraint strap up through the buckle to form a loop **A**.
- Pull the free end of the restraint strap **B**.
- Repeat this procedure to tighten the other restraint strap.


To loosen the restraint straps:

- Feed the free end of the restraint strap up through the buckle to form a loop **A**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the restraint strap to shorten the free end of the restraint strap.
- Repeat this procedure to loosen the other restraint strap **B**.


Note: After adjusting the restraint straps to fit your child, make sure you pull on them to be sure they are securely fastened.

SET-UP & USE

Toy Bar

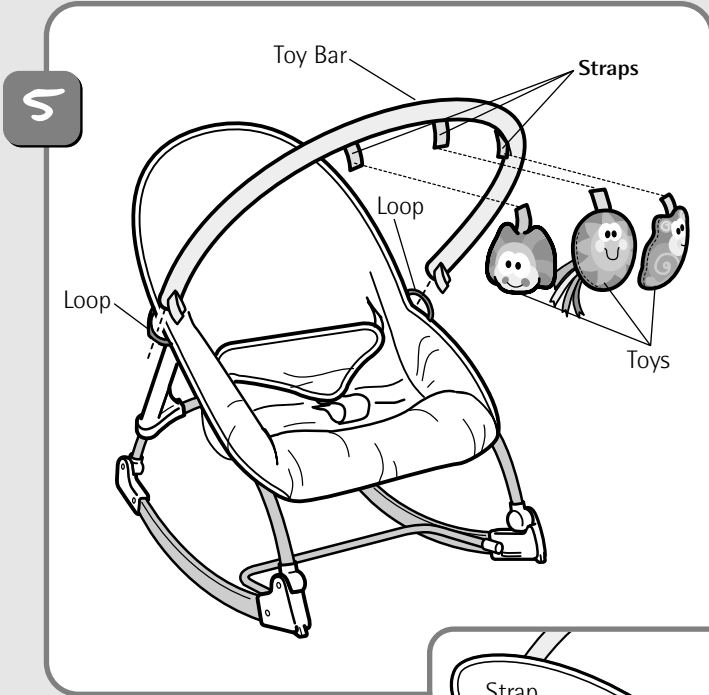


- Fit the ends of the toy bar through the loops in each side of the pad.
- From the back of the seat, insert the straps on the ends of the toy bar through the slots on each rear leg.
- Fasten the straps together.
- Fasten the toys to the straps on the middle of the toy bar.

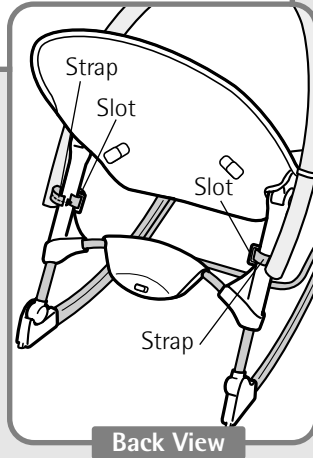

Soothing Vibrations

IMPORTANT! When soothing vibrations become slow or vibrations stop, it's time to replace the battery. Please refer to the "Battery Installation" section on page 7.

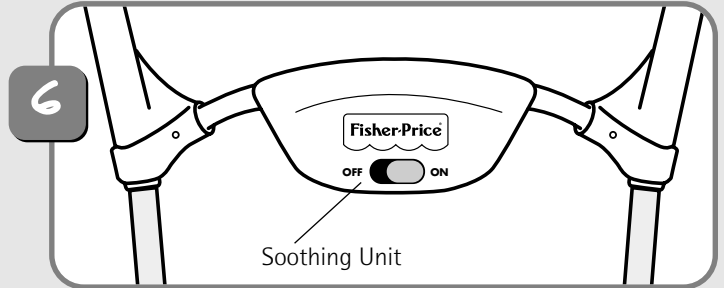

- Make sure your child is properly secured in the seat.
- Slide the ON/OFF switch on the soothing unit to the ON position. The seat will vibrate.
- Slide the ON/OFF switch on the soothing unit to the OFF position. The seat will not vibrate.

SET-UP & USE


Stationary Feeding Seat

WARNING

To prevent serious injury and/or falls:


- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.

7

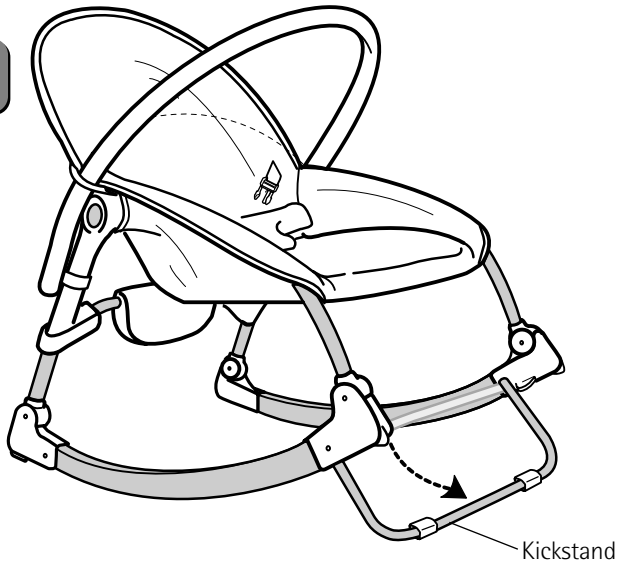


- Position the seat in the upright or semi-recline position.
- Rotate the kickstand out.
- Push down on the seat bottom to be sure the kickstand is in position.

STORING RESTRAINT SYSTEM FOR TODDLER

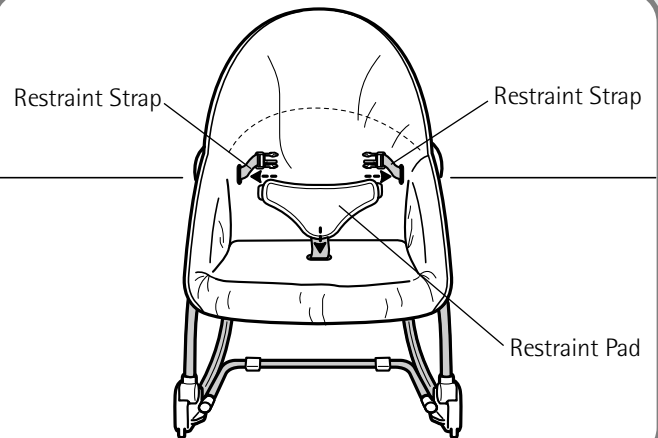

- Insert the restraint straps through the small slots in the pad.
- Insert the restraint pad down through the large slot in the pad.

STORING THE TOY BAR

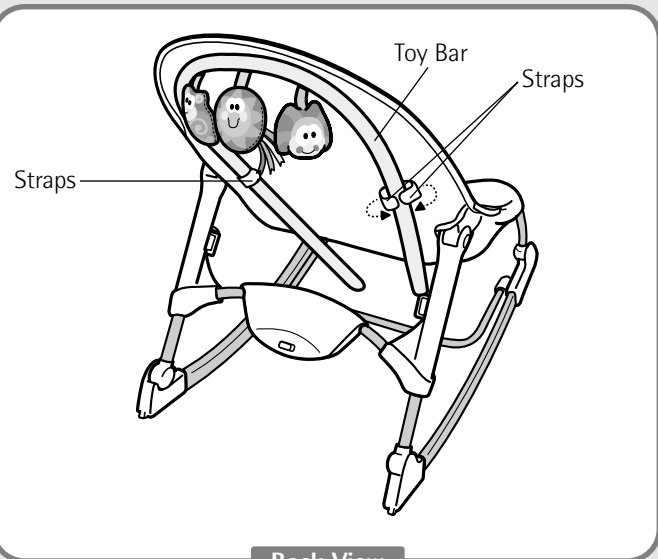

Back View

- Turn the seat so that the back is facing you.
- Fasten the straps around the ends of the toybar.

CARE

The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. Surface wash the frame, with mild detergent and water. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.

To remove the pad:

- Unfasten the buckles on the bottom of the pad.
- Remove the hardboard from the pocket in the pad
- Press the push buttons on each joint to disassemble the front and rear frames.
- Remove the pad.
- After washing, re-assemble the pad to the frame with hardboard (see Assembly steps 6-9).

ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Infant-to-Toddler Soothing Rocker is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500303.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.