



# Write With Blue™

## INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information. Write With Blue™ teaches children how to write at their own pace in easy to follow steps using four modes of play.

 
### HOW TO BEGIN PLAY

#### Before You Begin:


- Please remove Try Me "pull tab" from bottom of toy.

4 Sheets of paper (included and stored in paper tray)

Try Me "pull tab"

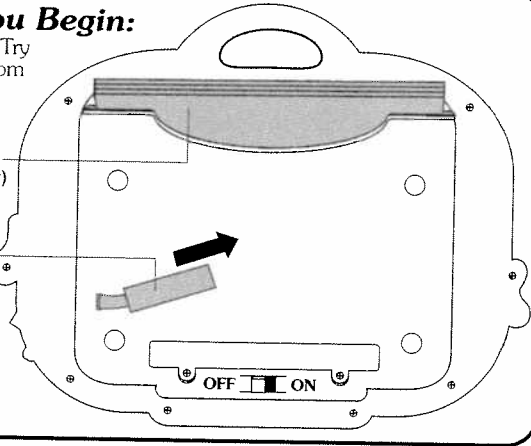

- Before beginning the child should place a piece of paper on the yellow writing surface, which is kept in place by the Tickety clip.
- Make sure the ON/OFF button on the back of the toy is in the ON position.
- Select one of the following 4 mode buttons:

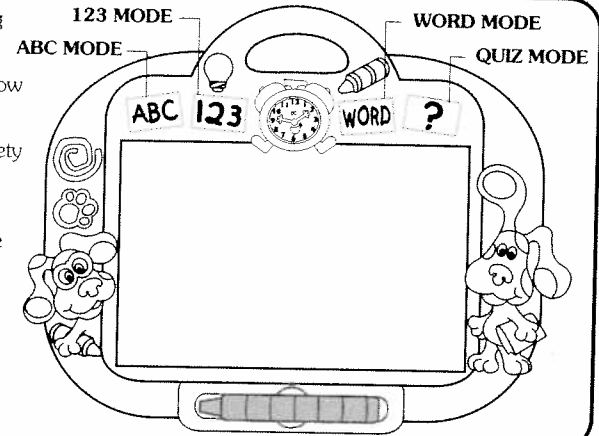

#### ABC Mode

This mode teaches children how to write letters in simple, easy to follow steps.

- Press the **ABC** mode button.
- Tickety will say, "Yay! It's time to write... letters! Will you help us?"
- Press the Pawprint.
- Tickety will now teach the child how to write a letter, one line at a time.
- Each time a new line is written, he will prompt the child to press the pawprint for the next piece of the letter.
- When the letter is finished, Tickety will ask the child to press the pawprint again. Tickety will tell the child the name of the letter that was just written.
- Tickety will then ask the child to press the pawprint again for another letter.
- After 3 letters have been written, Tickety will prompt the child to change the paper.
- At any time you can:
  - press the **ABC** mode button to advance to the next letter.
  - press the pawprint to advance to the next piece of the letter.
  - press the light bulb button to reveal the completed letter.
  - press crayon button to repeat the last piece of the letter.
  - press another mode button to change to a different mode.

#### 123 Mode

This mode teaches children how to write numbers 1 to 10 in simple, easy to follow steps.

- Press the **123** mode button.
- Tickety will say, "Yay! It's time to write... numbers! Will you help us?"
- Press the Pawprint.
- Tickety will now teach the child how to write a number, one line at a time.
- Each time a new line is written, he will prompt the child to press the pawprint for the next piece of the number.
- When the number is finished, Tickety will ask the child to press the pawprint again. Tickety will tell the child the name of the number that was just written.
- Tickety will then ask the child to press the pawprint again for another number.
- After 3 numbers have been written, Tickety will prompt the child to change the paper.
- At any time you can:
  - press the **123** mode button to advance to the next number.
  - press the paw print to advance to the next piece of the number.
  - press the light bulb button to reveal the completed letter.
  - press crayon button to repeat the last piece of the number.
  - press another mode button to change to a different mode.

#### WORD Mode

This mode teaches children how to write three letter words in simple, easy to follow steps.

- Press the **WORD** mode button.
- Tickety will say, "Yay! It's time to write... words! Will you help us?"
- Press the Pawprint.
- Tickety will now teach the child how to write a word, one letter at a time.
- Each time a new letter is written, he will prompt the child to press the pawprint for the next letter in the word.
- When the word is finished, Tickety will ask the child to press the pawprint again. Tickety will tell the child the name of the word that was just written.
- Tickety will then ask the child to press the pawprint again for the next word.
- After each word has been written, Tickety will prompt the child to change the paper.
- At any time you can:
  - press the **WORD** mode button for a new word.
  - press the pawprint to advance to the next letter in the word.
  - press the light bulb button to reveal the completed letter.
  - press crayon button to repeat the last letter in the word.
  - press another mode button to change to a different mode.

#### QUIZ Mode

 
This mode quizzes children on the letters and numbers they learned in modes one and two.

- Press the **QUIZ** mode button.
- Tickety will say, "Yay! It's time to write... letters and numbers! Will you help us?"
- Press the Pawprint.
- A letter or number will appear on the screen for 2 seconds then turn off.
- The child will then write the letter/number that appeared on the screen.
- When the child is finished writing the letter or number they can press the paw print to see how they did. The letter or number will appear again so they can compare.
- After three numbers or letters have been written Tickety will prompt the child to change the paper.
- At any time you can:
  - press the **QUIZ** mode button for a new letter or number.
  - press the light bulb to reveal the letter or number.
  - press the crayon button to repeat question.
  - press another mode button to change to a different mode.

#### Toy Sleep Mode:

- If the toy is not played with for more than 30 seconds it will automatically shut-off to preserve battery life.
- Press any button to turn the toy back ON.

### BATTERY INSTALLATION

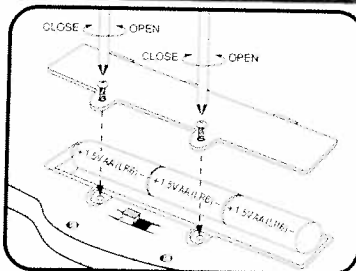

#### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.

Includes 3 "AA" (LR6) alkaline batteries.

The crayon should be kept away from small infants.

©2001 Viacom International Inc.

All Rights Reserved. Nickelodeon, Nick Jr., Blue's Clues and all related titles, logos and characters are trademarks of Viacom International Inc.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A. Manufactured for Fisher-Price, ©2001 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packing and address should be kept for future reference.



Questions or Comments?

1-888-892-6123

Fisher-Price

ITEM NO. 90512