



Phone Friends™


INSTRUCTION SHEET

Phone Friends has 3 fun Modes of play. Carefully read the following instructions before starting

MODE 1 DIRECT DIAL


- Slide Mode Switch to **Mode 1**.
- Press any character key. Key will light up and you will hear a message from that character.

Note: Numbered keys will always make a phone tone sound when pressed.

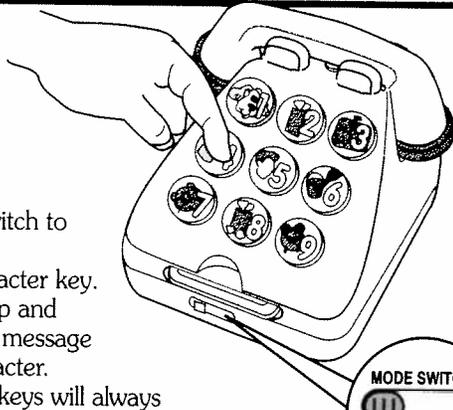


MODE 2 NUMBER SEQUENCE

- Slide Mode Switch to **Mode 2**.
- Slide Phone Book out from the front of the phone as shown.
- Choose character you wish to call from the Phone Book. Press the same 3 numbers appearing next to that character's picture to hear a message from them.

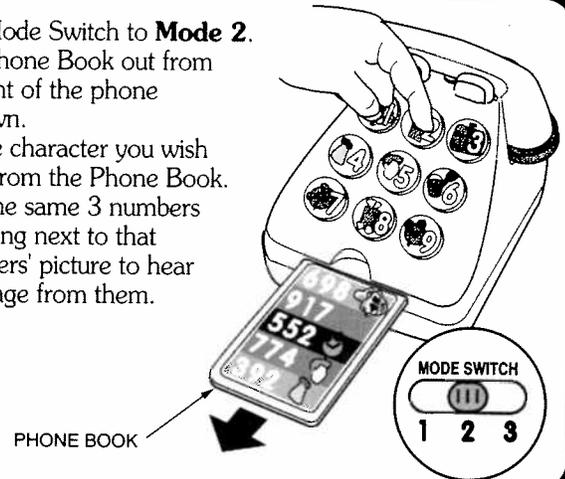


MODE 3 MOTION SENSOR/CLUE GAME

- Slide Mode Switch to **Mode 3**.
- A built-in sensor will activate when you walk near the phone. The phone will ring (Blue Clue's theme song) and the keyboard will start flashing.
- Press the Steve key and one of the characters will give you a clue to guess who they are.
- Press one of the characters on the keyboard that you think the call is from. **If you guess right**, that character key will light up and give you a message. **If you guess wrong**, another clue will be given and lights will continue to flash. Keep pressing the other keys until you guess the correct character.

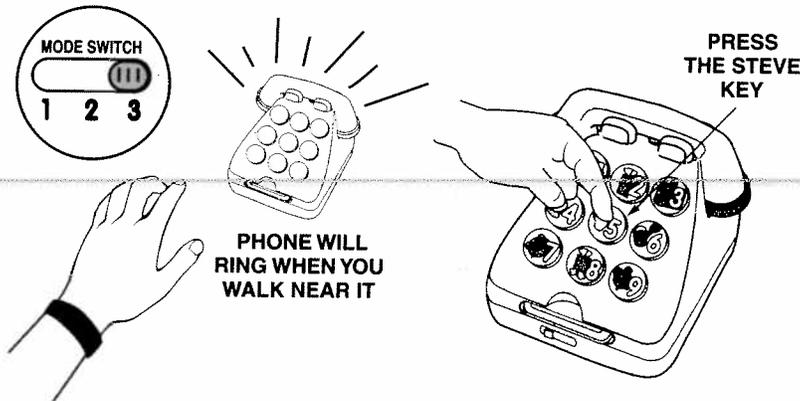

How to Replace Batteries

- When the batteries run down and require replacing, turn the Phone over and unscrew the Battery Cover as shown below.
- Insert 3 "AA" (LR6) size alkaline type batteries into the battery compartment as shown, carefully noting the direction of the (+) and (-) symbols.
- Replace the cover and tighten the screw.

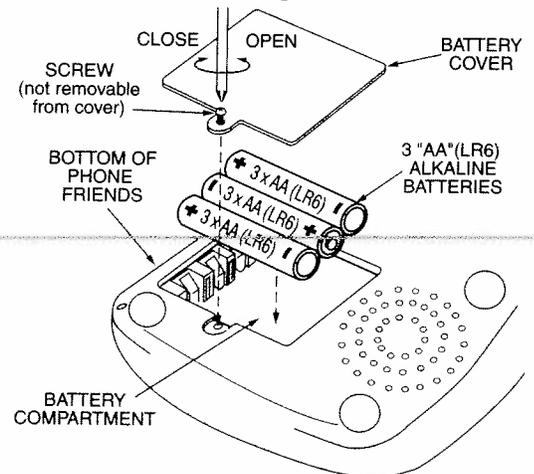

CAUTION:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before they are charged.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old batteries and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.

©1999 Viacom International Inc. All Rights Reserved.
 Nickelodeon, Nick Jr., Blue's Clues and all related titles, logos and characters are trademarks of Viacom International Inc.
 Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.
 Manufactured for Fisher-Price. ©1999 Mattel, Inc. All Rights Reserved.
 Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
 PACKING AND ADDRESS SHOULD BE RETAINED FOR FUTURE REFERENCE.

Should this product cause local electrical interference we recommend moving it away from other equipment.

Questions or Comments?
1-888-892-6123

Fisher-Price

ITEM NO. 93288