

This is a battery-operated product.
1 flyer (00007-184968) is required
to be placed inside the packaging.

 
SUPERSTAR ENTRANCE WWE® CHAMPIONSHIP INSTRUCTIONS



8+

Please keep these instructions for future reference as they contain important information.


CONTENTS

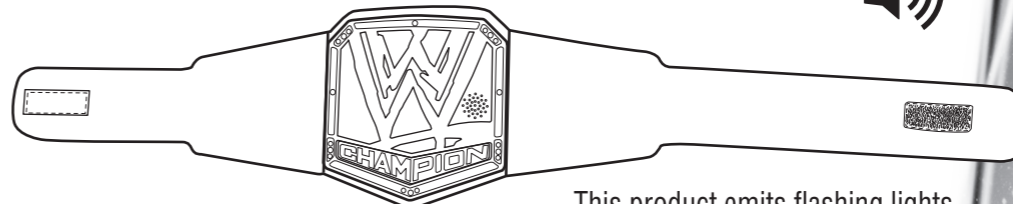

This product emits flashing lights at 5~30 cycles per seconds.

1. BATTERY INSTALLATION

 
- Batteries included are for demonstration purposes only.
- Replace batteries if lights dim or sounds distort.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new AA (LR6) alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For best performance, use alkaline batteries.

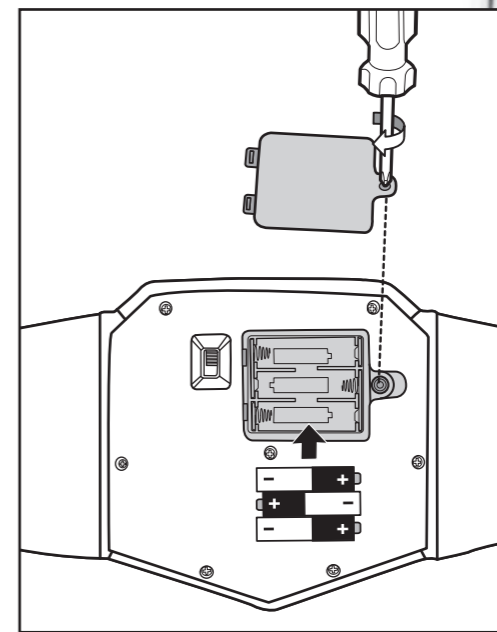


All WWE programming, talent names, images, likenesses, slogans, wrestling moves, trademarks, logos and copyrights are the exclusive property of WWE and its subsidiaries. All other trademarks, logos and copyrights are the property of their respective owners. © 2013 WWE. All Rights Reserved.

INSTRUCTION SHEET SPECIFICATIONS	
Toy:	SUPERSTAR ENTRANCE CHAMPIONSHIP
Toy No.:	BHL46
Part No.:	0920
Trim Size:	A4
Folded Size:	A5
Type of Fold:	accordian
# colors:	One
Colors:	Black
Paper Stock:	White Offset
Paper Weight:	70 lb.
EDM No.:	001

 5

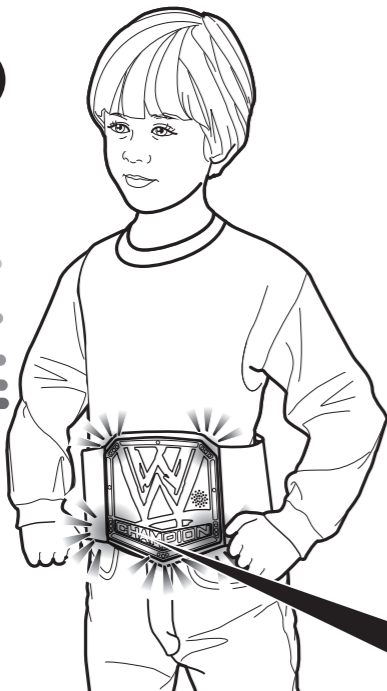

 Press here for the extended music and light show of the last previewed theme.

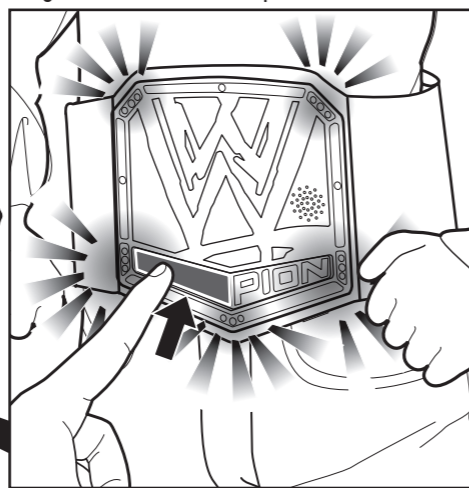

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

©2013 Mattel. All Rights Reserved.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.

service.mattel.com



Page 4



Page 1

2. TO PLAY

I = ON
O = OFF
X = DEMO MODE


7

  Adult Note: If a malfunction occurs, please move the switch to "O" for a few seconds and then back to "I" as shown.

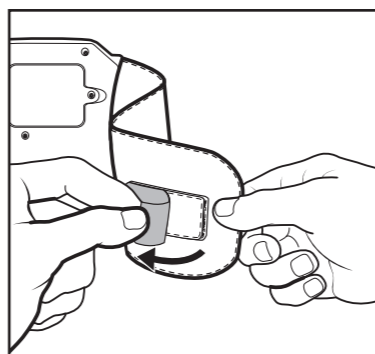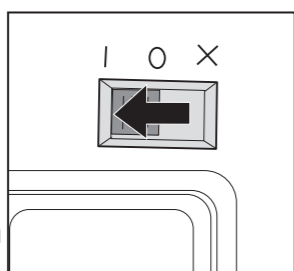


Remove backing from adhesive.

 2

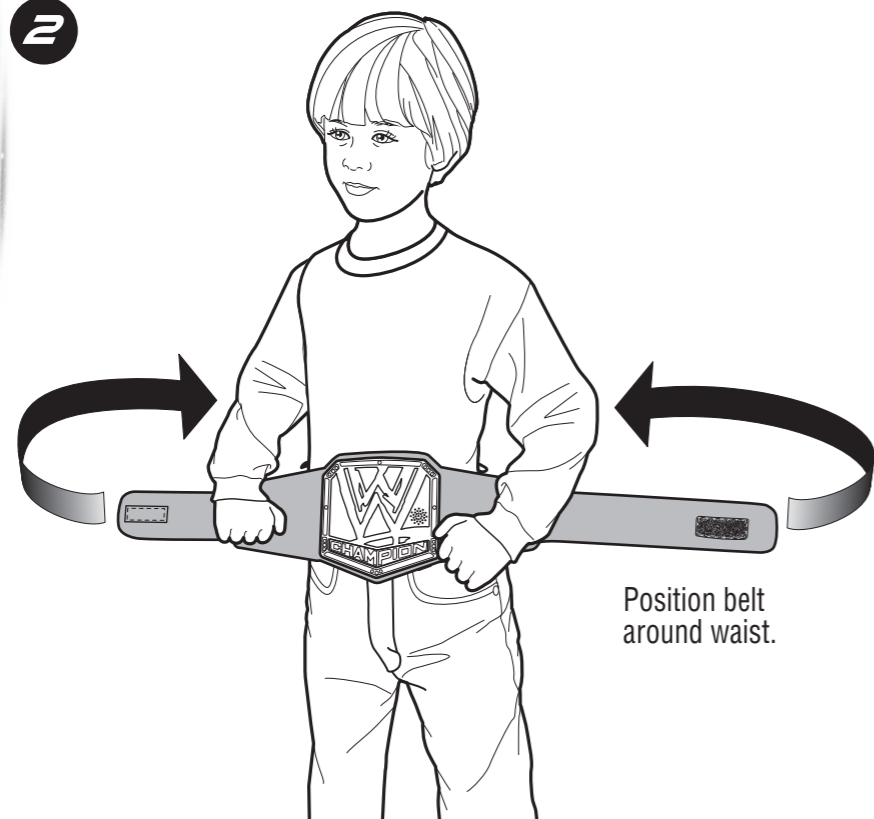

Position belt around waist.

 
3

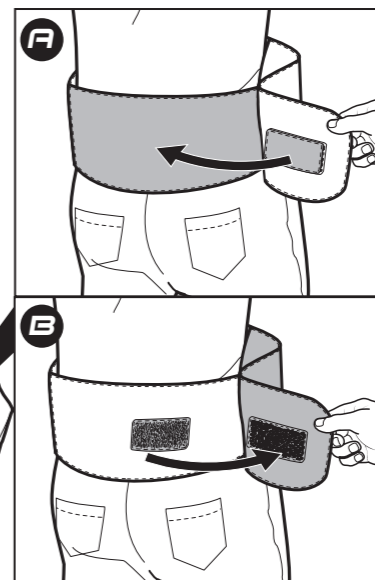


Press sides together, then pull back to apply adhesive strip.

IMPORTANT: Tape cannot be repositioned once applied.

 4

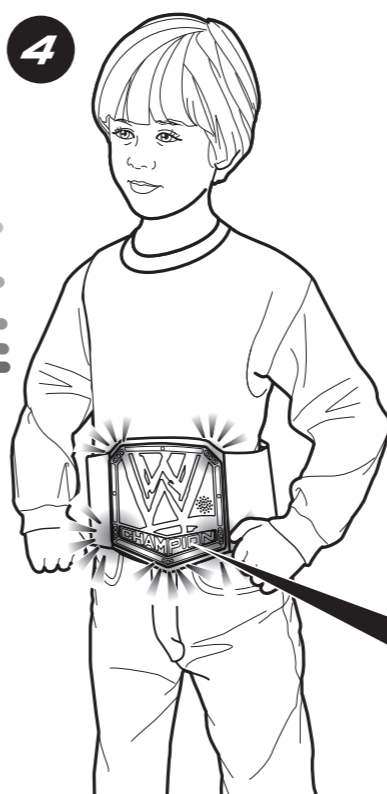

 Press here to preview 8 different entrance themes!

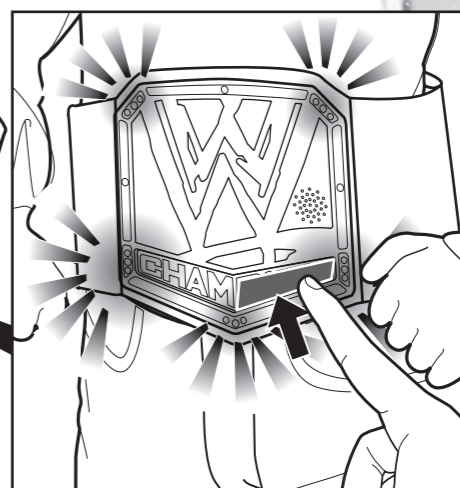

Page 2

Page 3