



HELPFUL HINTS

Please follow these instructions to properly fasten the front wheels.

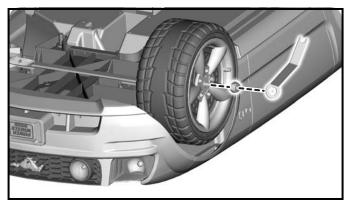

Fit a ³/₈"-16 lock nut, *rounded side out*, onto the front axle.
IMPORTANT! Tighten the lock nut firmly with the closed end of the assembly tool.

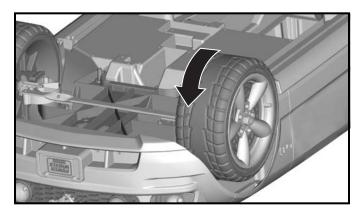

- Test to be sure the front wheel moves freely on the front axle. Turn the front wheel.
- If the front wheel does not move freely, loosen the lock nut ¼ turn and test again. Repeat this procedure as necessary.

PRINTED IN MEXICO J4390pr-0921