 


## Battery Replacement

Batteries included are for demonstration purposes only. Replace batteries when sound or image becomes distorted.

For longer life use only alkaline batteries. Toy requires 4 replaceable AAA/LR03 alkaline batteries. When "BATTERIES LOW" shows on screen, change batteries within 3 minutes. To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Insert 4 AAA/LR03 alkaline batteries as shown. Use either AAA/LR03 alkaline batteries or equivalent. Replace battery cover and screw closed.

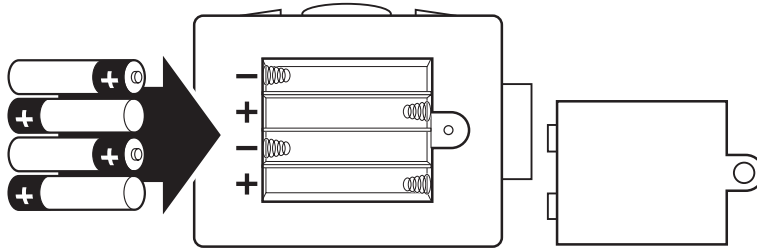

### Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

## CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.

Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1300 135 312 (valid only in Australia).

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410

 
# PIXEL CHIX™



# BABYSITTER

## INSTRUCTIONS

### CONTENTS

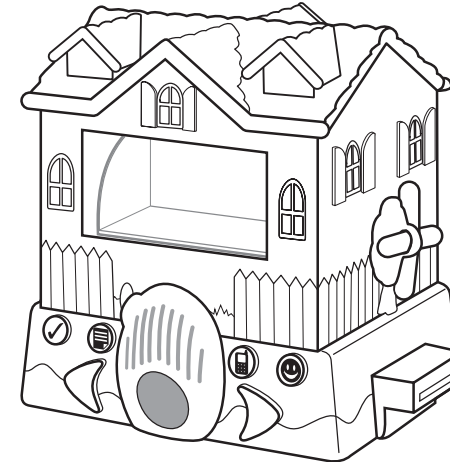

Batteries included are for demonstration purposes only. Requires 4 AAA (LR03) alkaline batteries.

## We listen to you!

We want you to have fun playing with our products.

Please give us your feedback by filling out the short on-line survey. Go to:

[secure.mattel.com/surveys](http://secure.mattel.com/surveys)

Thanks for helping us make great toys even better!

English-only site. • Sitio web en inglés. • Site Web en anglais uniquement. • Site na Internet disponível apenas em inglês.

Please remove everything from the package and compare to the contents shown here.

If any items are missing, please call 1-800-524-8697.

Keep these instructions for future reference as they contain important information.

©2007 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. All Rights Reserved.


## A PIXILLION™ games we can play while babysitting!

Your new neighbor has the cutest little baby. And she has asked you to baby sit! What fun, and you get to earn some money too! But make sure you watch the baby closely! She may get into mischief! What you earn depends on how happy the baby is when her mom returns home. And what if something goes wrong while you are babysitting? Will you know what to do to fix it? Play Pixel Chix™ Babysitter and see!


When the unit is turned on for the first time, the mom will be on the screen, and the doorbell will ring. Turn to the living room if that room is not already showing. The mom will greet the Pixel Chix™ Gal and they will talk. The mom leaves and the Pixel Chix™ Gal has a job to do!

### The mom has left. Now what?

What room is the baby in? Turn the knob on the right side to change the room. There are 4 rooms:

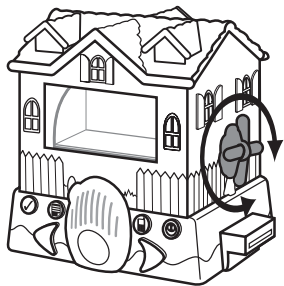

#### living room

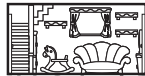

#### bathroom



#### kitchen



#### nursery



### How happy is the baby?

The baby has 3 different happiness levels. You can view the happiness level on the *book status screen*. In the **living room**, press the **menu button**, then select the *bookshelf*. Turn the pages to see the amount of money you have as well as any secret codes you have bought.



### How do you keep the baby happy?

You can get food (choose something the baby likes!) and play games. When you've successfully completed 3 games, the baby's happiness goes up. You can also get secret codes for the Pixel Chix™ web site (see the **secret code** section).


When mom comes home, the amount of money she pays you depends on how happy the baby is.

### Oh no! The red light is on!


This means that something is going on in another room. Turn the knob to find the right room, and the red light goes off when the right room is reached.

Is something wrong in that room? Do you need to call a handyman? Has the baby gotten into some mischief? Find the baby!

You can't play any games in that room until the repair is complete.

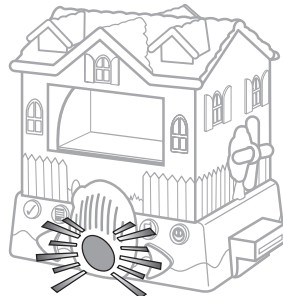

## GO AHEAD AND PUSH MY BUTTONS!

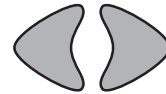

**ARROWS** on the right and left side of the red light. These are used to move characters, selection arrows, menu items, etc. Press YES to select what you have chosen.



**YES**  
Use to select an item in a menu.



**MENU**  
Use to bring up arrows. Use the BIG ARROWS to scroll through the screen arrows. Press YES to select. An animation or game happens when an item is chosen.





**CELL PHONE**  
Use to call the handyman for repair. He shows up in the correct room. Also use to call for ordering food (i.e. pizza), games to buy, things to keep the baby happy, or to take fun snap shots.



**GAMES**  
This brings up games that are available.

**NOTE:** The buttons have different functions while playing games.

Examples of icons

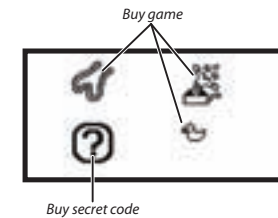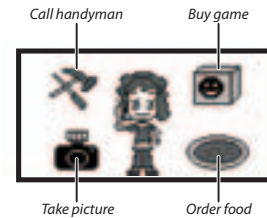


## CONNECT TO OTHER PIXEL CHIX™ PRODUCTS.

Remove cover first, then connect the units.

When Babysitter is connected to House, Mall, or Duplex, press **GAMES** on one unit and a Pixel Chix™ gal will come over to that unit. Connect to a Car, press any button on the car, and the gal goes into the car.

When Babysitter is connected to another Baby Care, a 2nd baby shows up!

Hair color of gals may change when moving from one device to another. House, Car, Duplex, and Mall sold separately, subject to availability. Colors and decorations may vary.

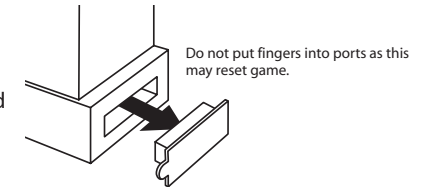

Do not put fingers into ports as this may reset game.

## SECRET CODES

You can buy Secret Codes for a fun secret animation! There is one code for each room. To buy a **Secret Code**, press the *cell phone* button, then the *buy game* icon, then the *secret code* icon and receive several symbols. Go to the web site (<http://www.pixelchix.com>), enter the symbols and receive a button combination to use on your Pixel Chix™ Babysitter unit. (Codes are stored in the *book status screen*, 3rd page.)

## TROUBLESHOOTING

### TRY ME PULL-TAB

The pull-tab in the Try Me slot should be automatically removed when toy is taken out of the package. If not, simply remove the pull-tab before playing.

### RESET BUTTON

Reset product to start a fresh game. Ask an adult to insert a metal tip, such as a bent paper clip, into the hole.

When exposed to an electrostatic source, the product may malfunction and suffer memory loss. Reset the product if this occurs.

**NOTE:** Holding down the YES button for 3 seconds powers down the unit.

