

Fisher-Price®

M9973



Assembled Parts

CAUTION

This product contains small parts in its unassembled state.
Adult assembly is required.



Basket



Handle



4 Legs




#8 x 1" Screw - 7

Shown Actual Size

Note: Tighten and loosen the screws with a Phillips screwdriver. Do not over-tighten the screws.

Assembly

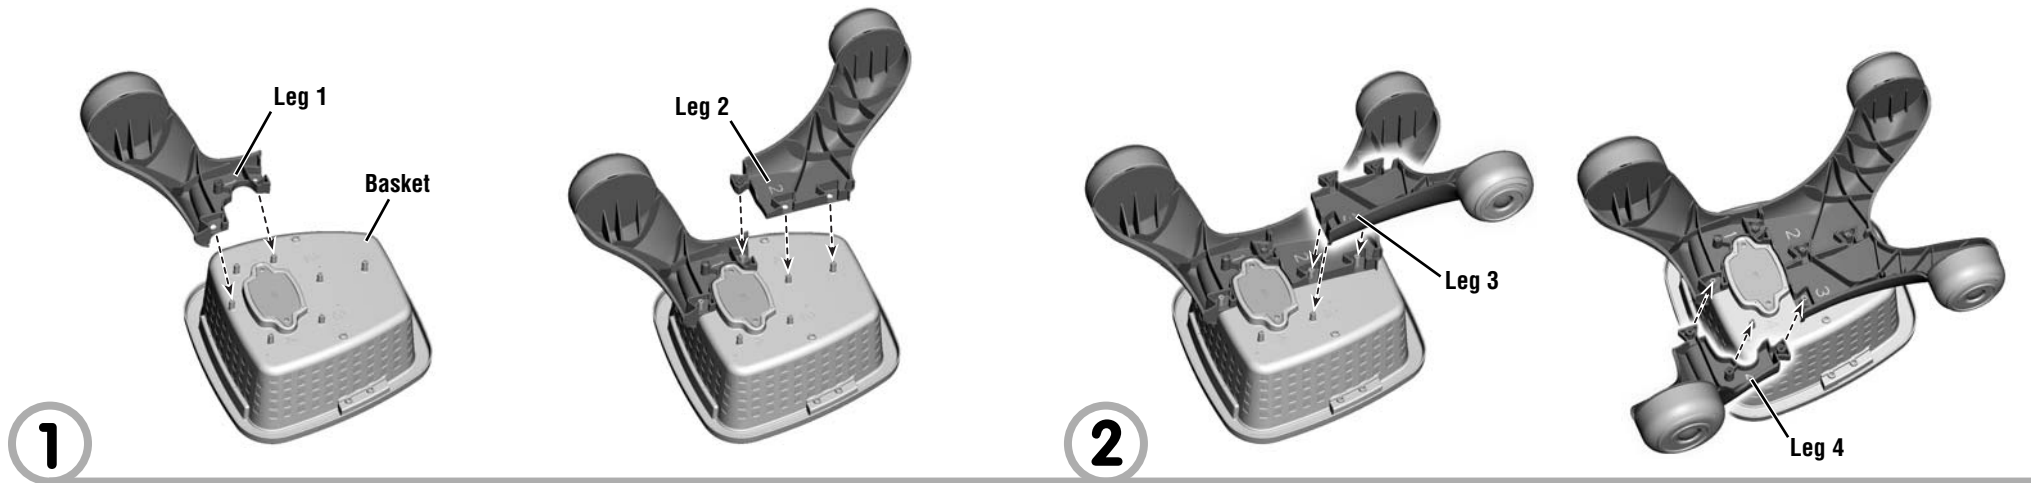


1

2

- Place the basket face down on a flat surface.
- Note:** *The legs are designed to overlap and need to be assembled in order.*
- First, fit the leg labeled 1 onto the area labeled 1 on the basket. Then, fit the leg labeled 2 onto the area labeled 2 on the basket.

- Fit the legs labeled 3 and 4 (in this order) onto the basket.

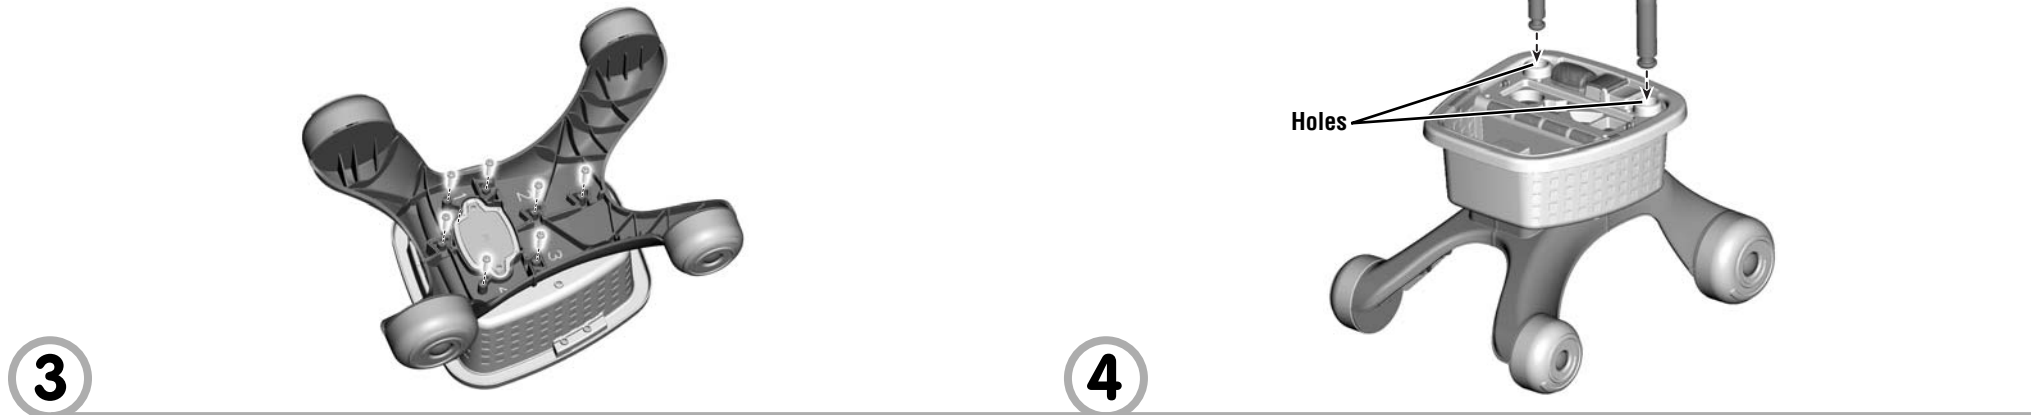


3

4

- Insert all seven screws into the legs and tighten.

- Turn the shopping cart assembly upright.
- **"Snap"** the handle into the holes in the top side of the basket.
- Note:** *The handle is designed to fit one way. If it does not seem to fit into the basket, turn it around and try again!*

Battery Replacement

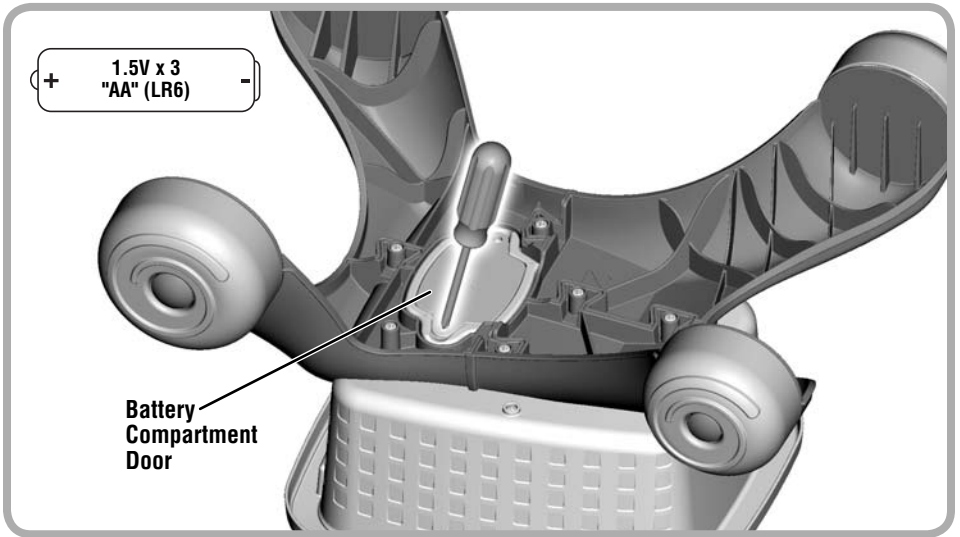

- For best performance, we recommend replacing the batteries that came with this toy with three, new **alkaline** "AA" (LR6) batteries.
 - Locate the battery compartment on the bottom of the toy.
 - Loosen the screws in the battery compartment door and remove the door. Remove the exhausted batteries and throw them away.
 - Replace the batteries with three, new "AA" (LR6) **alkaline** batteries.
- Hint: We recommend using **alkaline** batteries for longer battery life.*
- Replace the battery compartment door and tighten the screws.
 - If the toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch on the toy off and then on again.
 - When sounds become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Consumer Information

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires three "AA" batteries (included).
- Adult assembly is required. Tool required for assembly: Phillips screwdriver (not included).
- A plastic tab is attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the bottom of the toy to be sure. If the plastic tab is still attached, pull and remove the tab. Throw the plastic tab away.
- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

FCC Statement (United States Only)




This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


 



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

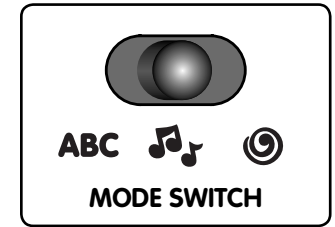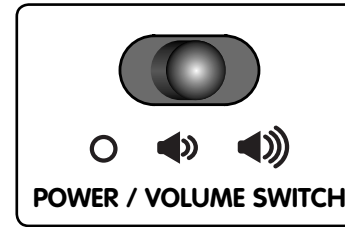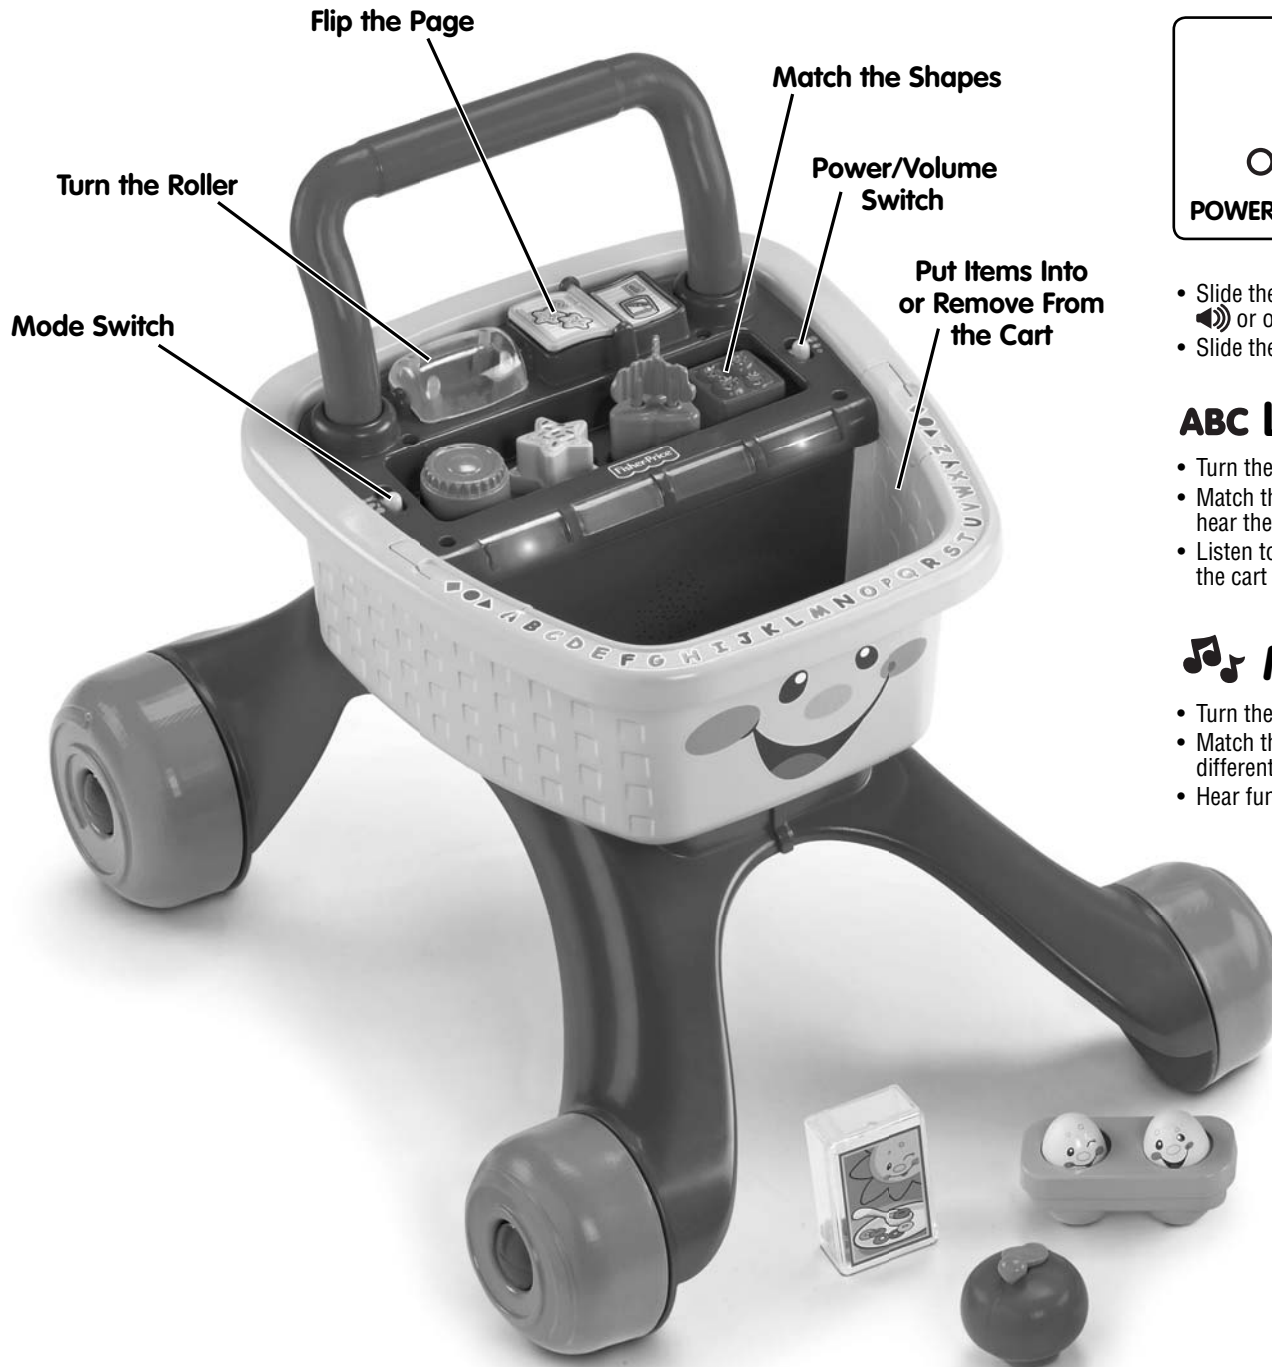Musical Shopping Fun!



- Slide the power/volume switch to on with low volume , on with high volume  or off .
- Slide the mode switch to select a mode: Learning **ABC**, Music  or Shopping .

ABC Learning Mode

- Turn the roller or flip the pages in the book for songs about manners and counting.
- Match the food items to the shape sorter in the cart. Press down on the food item to hear the name, number, color and shape of the item.
- Listen to songs about counting, opposites and other fun phrases when you put items in the cart or take them out!

Music Mode

- Turn the roller or flip the pages in the book for musical tunes.
- Match the food items to the shape sorter in the cart. Press down on the food item for different musical tunes and ditties.
- Hear fun tunes and sound effects every time you put items in the cart or take them out!

Shopping Mode

- Turn the roller or flip the pages in the book to hear different sound effects.
- Match the food items to the shape sorter in the cart. Press down on the food item for different sound effects.
- Put items in the cart or take them out for fun sound effects.