

Fisher-Price®

P6798



MyToonTV

# It's Fun and Easy!

Turn yourself into a rock 'n roll robot, make your dad a dancing dog, picture your sister as a pirouetting princess, and more! With My Toon TV, it's fun and easy to turn yourself, your friends and your family into 11 different hilarious dancing cartoon characters to sing, dance and perform with—on TV!



TV not included. Image clarity may vary from package depiction.  
Light-up microphone remote does not amplify or transmit voice.

# Consumer Information

## **NOTICE ABOUT EPILEPSY AND SEIZURES PLEASE READ THIS NOTICE BEFORE YOU OR YOUR CHILD USE ANY VIDEO GAME.**

A very small portion of the population has a condition, which may cause a momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. This condition may cause seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), consult your physician before playing video games. We recommend that parents observe their children while they play video games. If you or your child experience any of the following symptoms such as dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation or convulsions, **DISCONTINUE USE IMMEDIATELY** and consult your physician.

Additionally, please follow these precautions whenever playing a video game:

- Do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well lit room.
- Be sure to take a 10-15 minute break every hour while playing.


## **Notes**

- Please keep this instruction sheet for future, as it contains important information.
- Adult assembly is required for setup and battery installation.
- Requires four “AA” (LR6) and three “AAA” (LR03) **alkaline** batteries (batteries not included) for operation.
- Tool required for battery installation: Phillips screwdriver (not included).

## **Care**

- Wipe this product with a clean cloth dampened with a mild soap and water solution. Do not immerse this product.
- This product has no consumer serviceable parts. Do not take this product apart.

# Features

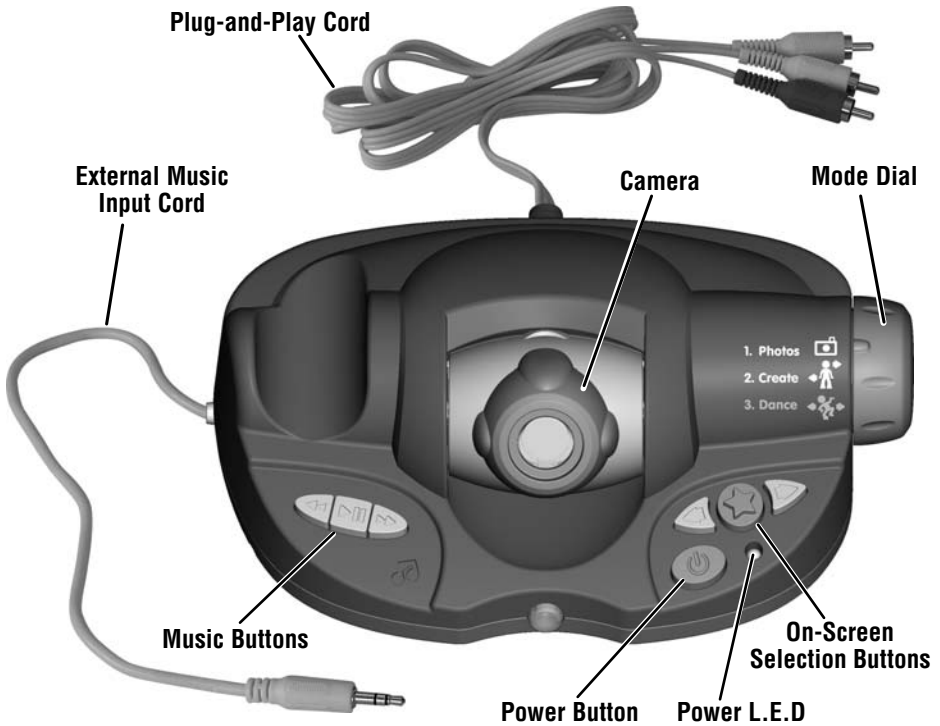

## Base

**External Music Input Cord** - Plug in to your own CD or MP3 Player to listen and dance to your own music!

**Music Buttons** - Press the green arrow buttons to move forward or backward through song choices included with this toy. Press the green play/pause music button to listen to your choice; press again to pause music.

**Camera** - Stand in front of the camera to see yourself on TV and take photos to create a character! Camera adjusts up or down.

**Power Button** - Press to turn power ON; press again to turn power OFF.


**Power L.E.D.** - Lights when power is ON.

**Mode Dial** - Turn to select a mode: Photos, Create or Dance.

**Plug-and-Play Cord** - Plugs in to your TV.

**On-Screen Selection Buttons** - Press the yellow arrow buttons to scroll through choices; press the purple star button to make selections or take a picture.

# Features

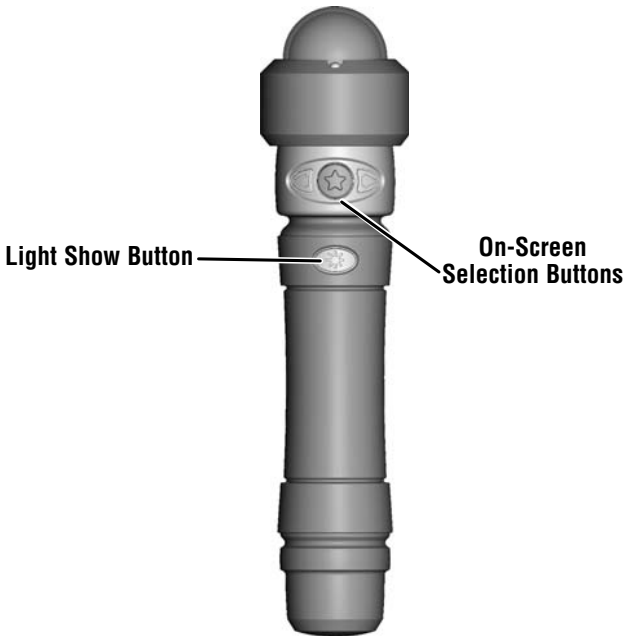

## Wireless Remote

---



 
 
**On-Screen Selection Buttons** - Press the yellow arrow buttons to scroll through choices; press the purple star button to make selections or take a picture.

**Light Show Button** - Press for flashing lights!


*Hint: Bright sunlight or incandescent light may affect the range between the wireless remote and the base. If performance is erratic, try dimming the light in the room you are using this toy.*

# Battery Installation

*Hint: We recommend using **alkaline** batteries for longer battery life.*

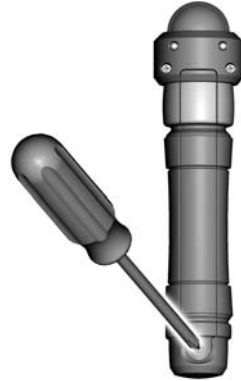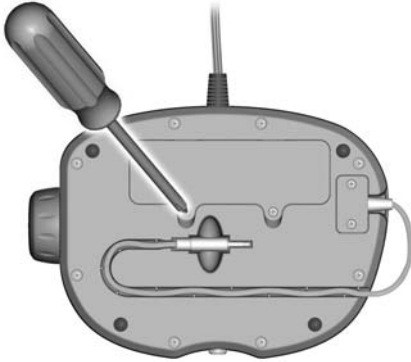

## Base

- Locate the battery compartment on the bottom of the base.
- Loosen the screws in the battery compartment door, and remove the door.
- Insert four “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If the base begins to operate erratically, you may need to reset the electronics. Press the power button to turn power off; press again to turn power back on.
- When function is slow or stops or you see a low battery indicator  on your TV screen, it's time for an adult to change the batteries.

## Wireless Remote

- Locate the battery compartment on the back of the wireless remote.
- Loosen the screw in the battery compartment door, and remove the door.
- Insert three “AAA” (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If the wireless remote begins to operate erratically, you may need to reset the electronics. Remove and replace the batteries.
- When lights on the remote stop, or the range between the remote and base decreases, it's time for an adult to change the batteries.


# Battery Safety Information

**In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:**

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision

# Connecting to Your TV

**IMPORTANT!** Your TV, VCR or DVD player must have audio and video input jacks.

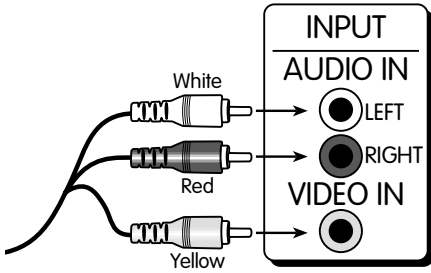

- Place the base next to your TV at eye level with your child.

**IMPORTANT!** Do not place the base on top of your TV. Keep excess cable off the floor and out of the way.

- Locate the plug-and-play cord on the base. Plug the audio-video pins into the matching colored input jacks on your TV, VCR or DVD player (Yellow for Video In, White for Left Audio In and Red for Right Audio In).

**Hint:** We've included a detailed illustration to show how to connect the base to a TV or TV and VCR/DVD player. Please refer to page 18.



**Power Button**

- Turn your TV, VCR or DVD player power ON.
- Press the power button on the base to turn it ON.
- To find the picture on your TV screen, set your TV's, VCR's or DVD player's mode selector to INPUT or VIDEO IN.

**Hint:** The images on the TV screen appear best when there is good lighting in the room. Make sure the light source is in front of or above your child.


- Keep the remote out of direct sunlight.





# Photos



Take photos so you can create your own characters!

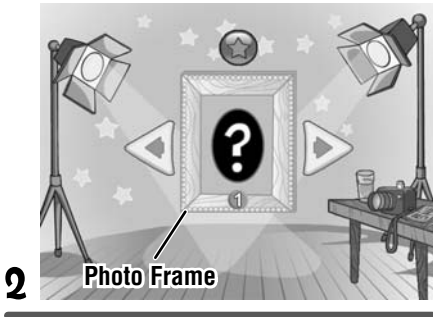


- Turn the mode dial on the base to Photos .




- Press the purple select button  on the base or wireless remote to begin taking photos!

**Hint:** For first-time use, all six photo frames are blank. If you have filled some or all of the photo frames, simply press the yellow arrow buttons   on the wireless remote or the base to scroll to the frame you'd like to fill with a photo.

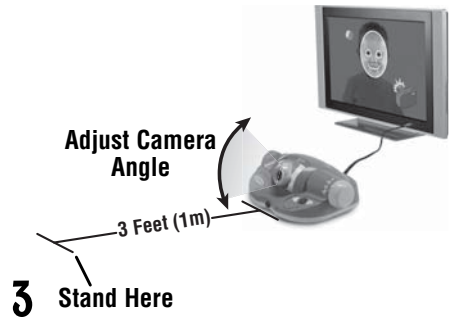

- Stand approximately three feet (1m) from the camera on the base.
- For the best photos, make sure your eyes and mouth are aligned with the on-screen guide. You may have to adjust the camera angle or move closer or farther away from the camera.

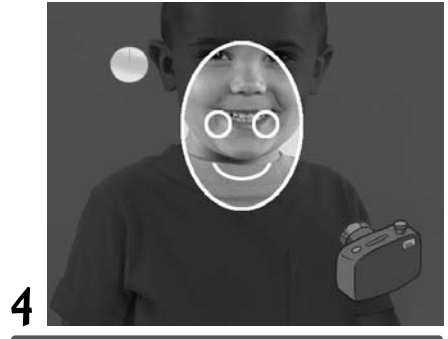

- The camera is pointed too low. Adjust the camera on the base up.

# Photos



5




- The camera is pointed too high. Adjust the camera on the base down.

6



- Press the purple select button  on the wireless remote or base to take a picture.
- **Perfect!** Camera angle is just right.  
**Hint:** You do not need to press the purple select button  to take pictures. The camera will automatically take a picture 45 seconds after you have selected a photo frame to fill.



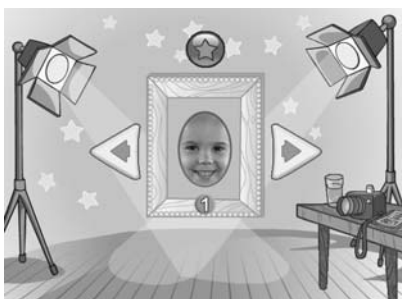

7



- The photo is now saved for use in Create mode (refer to the next section in these instructions).


8




- Press the yellow arrow buttons  on the base or the wireless remote to choose the next frame and take more photos!  
**Hint:** If all six frames are filled or you want to retake a picture, select the picture you want to save over and follow this process. If you'd like to delete all six pictures at once, simply press and hold the green backward , green forward  music buttons and right yellow arrow  button on the base at the same time until you hear a tone.


# ← Create →

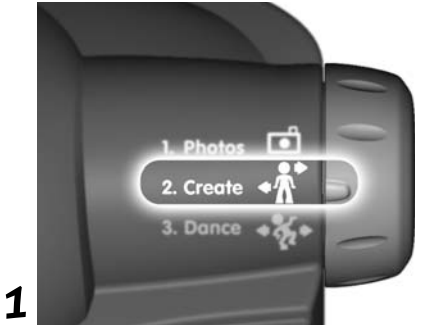


Now, use the photos you took to customize the characters!



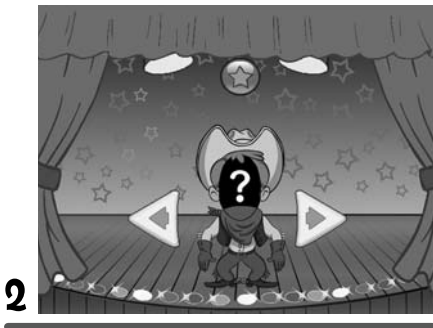


- Turn the mode dial on the base to Create .

*Hint: The range of the wireless remote is up to 15 feet in this mode.*





- Press the yellow arrow buttons   on the base or wireless remote to scroll through character choices.
- Press the purple select button  on the base or wireless remote to select a character.



- Then, press the yellow arrow buttons   on the base or wireless remote to scroll through your photos in place on the character.
- Press the purple select button  on the base or wireless remote to make a selection.




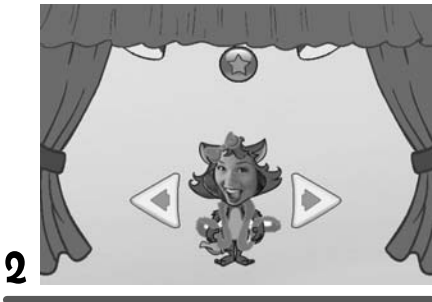
- Press the yellow arrow buttons   on the base or wireless remote to select another character.
- Then, repeat this process to create another character. Create all 11 characters!



# Dance


Pick your favorite character to dance with!




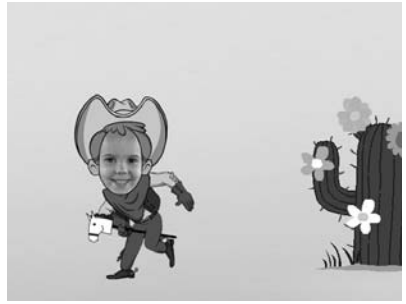
- Turn the mode dial on the base to Dance .




- Press the yellow arrow buttons   on the base or wireless remote to scroll through created characters.

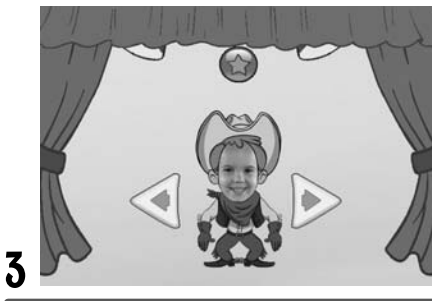

- Press the purple select button  on the base or wireless remote to make a selection.



- Watch the character you chose dance on your TV screen!

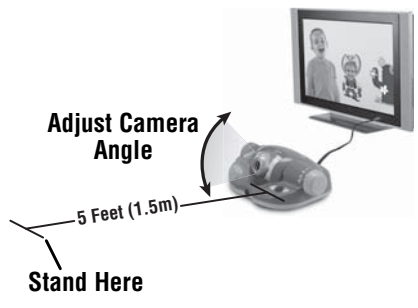
 
 



- Now, stand about five feet (1.5m) from the camera on the base.
- Adjust the camera angle up or down to see yourself dance with the character on your TV screen.

## Dance



6



- Press the green backward  or forward  music buttons on the base to choose a song.
- Press the green play/pause music button  on the base to pause the music and watch the character dance without music. Press the green play/pause music button  again to turn the music back on.



8



- Press the purple select button  on the base or wireless remote to pause the character's movement. The character will stand and wait until you press the purple select button  again.

7




- Press the yellow arrow buttons   on the base or wireless remote to dance with a different character.


# Play Your Own Tunes

- Use the music on your own CD or MP3 player (not included and sold separately) to dance to your own music!




**Play/Pause Music Button**

- Press the green play/pause music button  on the base to pause the music included with this toy.

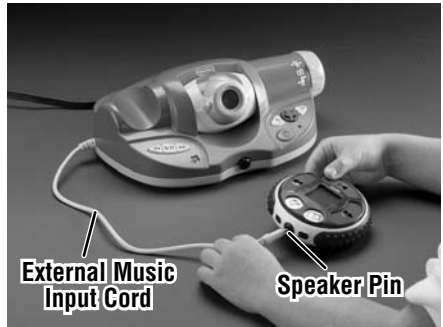

- Locate the external music input cord on the bottom of the base.
- Insert the speaker pin on the external music input cord into the headphone jack on the CD or MP3 player.
- Turn the CD or MP3 player's power ON.
- Turn the sound on your CD or MP3 player to about  $\frac{3}{4}$  of the maximum level.
- Now, adjust the sound on your TV and dance to your own music!

# Storage

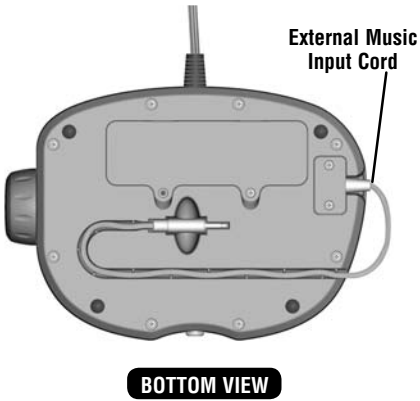

- Fit the external music input cord into the groove on the bottom of the base.



- Fit the wireless remote into the cradle on the base.

# Troubleshooting

Problem	Cause	Solution
No image on the TV	TV or VCR/DVD player is not set to the proper input	Change the TV or VCR/DVD player's mode to INPUT or VIDEO IN.
		Press the channel down button on your TV or VCR/DVD player to change to a channel below channel 2.
		Consult your TV or VCR/DVD player's instruction manual.
	Batteries in the base are weak or exhausted	Replace the batteries in the base with four, new "AA" (LR6) <b>alkaline</b> batteries.
	Base timed out (sleep mode and power L.E.D. is still on)	The base times out (sleep mode) after 10 minutes of inactivity. Press any button to turn it back on.
	Base shut down (power L.E.D. is off)	The base will shut off after it has been in sleep mode for five minutes. Press the power button to turn the base OFF; press it again to turn the base back ON.
No wireless connection between the base unit and the remote	Make sure you have a clear path between the wireless remote and the base. Do not place the base in a closed cabinet.	




# Troubleshooting

Problem	Cause	Solution
Music does not play	Music is paused on base	Press the play/pause button to turn the music back on.
Images on TV look grainy or lose color	Batteries in the base are weak or exhausted	Replace the batteries in the base with four, new "AA" (LR6) <b>alkaline</b> batteries.
Images on TV look dark	Poor lighting	Make sure the light source in the room is either in front of or above your child.
MP3 or CD player sound is distorted	Volume is too high	Do not turn the volume on your external music device to maximum volume. For best sound quality volume should be set to $\frac{3}{4}$ of the maximum volume.
MP3 or CD player music is not playing	Internal music not paused	Press the green play/pause music button on the base.
	External music input cord not inserted	Make sure the external music input cord is completely inserted into the headphone jack on your MP3 or CD player.
Wireless remote is not responding	Batteries in the wireless remote are weak or exhausted	Replace the batteries in the wireless remote with three "AAA" (LR03) <b>alkaline</b> batteries.
	Toy is being used in room with bright sunlight	Dim the light in the room the toy is being used.

# Troubleshooting

Problem	Cause	Solution
Response on TV is intermittent/erratic	Interference from another infrared device (ie.: remote control)	Do not use a remote control in the same room when using this toy.
	Batteries in the base are weak or exhausted	Replace the batteries in the base with four, new "AA" (LR6) <b>alkaline</b> batteries.
Image is stretched or distorted on a wide screen TV	TV aspect ratio set incorrectly	This product is designed for use with a 4:3 aspect ratio (display setting) and you should see black bars on the sides of the image. For best picture, do not use a 16:9 aspect ratio (stretched) wide screen setting. For more information on changing this setting, refer to your TV owner's manual.

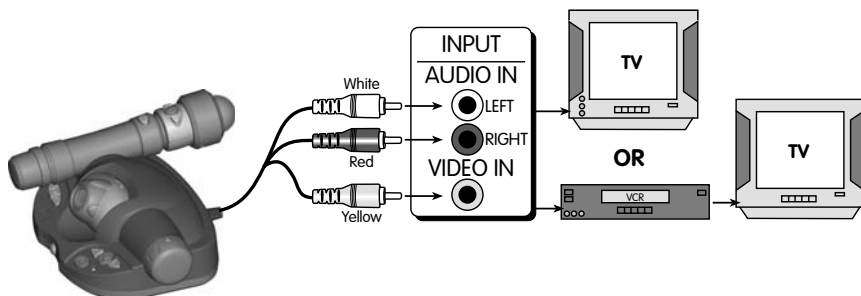

**IMPORTANT!** Your TV, VCR or DVD player must have audio and video input jacks. The input jacks may be on the back of your TV, VCR or DVD player.

# Consumer Information

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

# Consumer Information

Visit us on line at  
[www.service.fisher-price.com](http://www.service.fisher-price.com)

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

## For countries outside the United States:

**CANADA:** Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

**GREAT BRITAIN:** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk)

**AUSTRALIA:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

