



Micro-Talk

INSTALLATION INSTRUCTIONS

English (en-US)

Date: 07-2016

Document number: 87265-1

© 2016 Raymarine UK Limited

Trademark and patents notice

Raymarine, Tacktick, Clear Pulse, Truzoom, HSB, SeaTalk, SeaTalk^{hs}, SeaTalk^{ng}, Micronet, Raytech, Gear Up, Marine Shield, Seahawk, Autohelm, Automagic, and **Visionality** are registered or claimed trademarks of Raymarine Belgium.

FLIR, DownVision, SideVision, Dragonfly, Quantum, Instalert, Infrared Everywhere, and **The World's Sixth Sense** are registered or claimed trademarks of FLIR Systems, Inc.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

Software updates

Important: Check the Raymarine website for the latest software releases for your product.

www.raymarine.com/software

Product handbooks

The latest versions of all English and translated handbooks are available to download in PDF format from the website www.raymarine.com. Please check the website to ensure you have the latest handbooks.

Copyright ©2016 Raymarine UK Ltd. All rights reserved.

English (en-US)

Document number: 87265-1

Release label: AA

Commit revision: 791

Date: 07-2016

Contents

Chapter 1 Important information..... 7

Water ingress.....	7
Disclaimer.....	7
Suppression ferrites.....	7
Connections to other equipment.....	8
Declaration of conformity.....	8
Product disposal.....	8
Warranty registration.....	8
IMO and SOLAS.....	8
Technical accuracy.....	8

Chapter 2 Document and product information..... 9

2.1 Document information.....	10
Applicable products.....	10
Product documentation.....	10
Document illustrations.....	10
Operation instructions.....	10
2.2 Product overview.....	10
Multiple data sources (MDS).....	11
SeaTalkng®.....	11
Micronet.....	11
2.3 Networking restrictions.....	11

Chapter 3 Planning the installation 13

3.1 Installation checklist.....	14
Schematic diagram.....	14
3.2 Parts supplied.....	14
3.3 Software updates.....	14
3.4 Tools required for installation.....	15

3.5 Warnings and cautions.....	15
3.6 Selecting a location.....	15
Micronet device location requirements.....	15
Compass safe distance.....	16
EMC installation guidelines.....	16
3.7 Product dimensions.....	16

Chapter 4 Cables and connections 17

4.1 General cabling guidance.....	18
Cable types and length.....	18
Routing cables.....	18
Strain relief.....	18
Cable shielding.....	18
4.2 Connections overview.....	18
Connecting SeaTalkng® cables.....	19
SeaTalkng® product loading.....	19
4.3 SeaTalkng® power supply.....	19
SeaTalkng® power connection point.....	19
In-line fuse and thermal breaker ratings.....	19
SeaTalkng® system loading.....	20
Power distribution — SeaTalkng®.....	20
Sharing a breaker.....	21
4.4 Network examples.....	21
4.5 Autonetworking.....	22
Autonetworking — compatible Micronet displays.....	22
Performing Autonetworking.....	23

Chapter 5 Installation 25

5.1 Surface mounting.....	26
---------------------------	----

5.2 Pole mounting.....	26
5.3 Surface mounting using the Deck mounting kit	27
5.4 Bracket mounting using the Deck mounting kit	28
5.5 Surface mounting using the Riser	28
5.6 Locking and releasing the unit	29
Chapter 6 System checks and troubleshooting	31
6.1 Troubleshooting.....	32
6.2 LED Diagnostics	33
Chapter 7 Maintenance.....	35
7.1 Service and maintenance.....	36
7.2 Routine equipment checks	36
7.3 Product cleaning.....	36
Chapter 8 Technical support	37
8.1 Raymarine product support and servicing	38
Viewing product information	38
8.2 Learning resources	39
Chapter 9 Technical specification	41
9.1 Technical specification	42
Chapter 10 Spares and accessories	43
10.1 Accessories	44
10.2 SeaTalk ^{ng} ® cabling components	44
10.3 SeaTalk ^{ng} ® cables and accessories.....	44
Appendix A NMEA 2000 PGN support	47

Chapter 1: Important information



Warning: Product installation and operation

- This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your vessel and/or poor product performance.
- Raymarine recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Contact your Raymarine dealer for further details, and refer to the separate warranty document packed with your product.



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).



Warning: Switch off power supply

Ensure the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed in this document.



Warning: Power supply voltage

Connecting this product to a voltage supply greater than the specified maximum rating may cause permanent damage to the unit. Refer to the *Technical specification* section for voltage rating.

Caution: Power supply protection

When installing this product ensure the power source is adequately protected by means of a suitably-rated fuse or automatic circuit breaker.

Caution: Product cleaning

When cleaning products:

- If your product includes a display screen, do NOT wipe the screen with a dry cloth, as this could scratch the screen coating.
- Do NOT use abrasive, or acid or ammonia based products.
- Do NOT use a jet wash.

Caution: Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

Water ingress

Water ingress disclaimer

Although the waterproof rating capacity of this product meets the stated IPX standard (refer to the product's *Technical Specification*), water intrusion and subsequent equipment failure may occur if the product is subjected to commercial high-pressure washing. Raymarine will not warrant products subjected to high-pressure washing.

Disclaimer

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in information utilized by the product supplied by third parties.

Suppression ferrites

- Raymarine cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by Raymarine or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.

Connections to other equipment

Requirement for ferrites on non-Raymarine cables

If your Raymarine equipment is to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be attached to the cable near the Raymarine unit.

Declaration of conformity

Raymarine UK Ltd. declares that this product is compliant with the essential requirements of EMC directive 2004/108/EC.

The original Declaration of Conformity certificate may be viewed on the relevant product page at www.raymarine.com.

Product disposal

Dispose of this product in accordance with the WEEE Directive.



The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment.

Warranty registration

To register your Raymarine product ownership, please visit www.raymarine.com and register online.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.

IMO and SOLAS

The equipment described within this document is intended for use on leisure marine boats and workboats NOT covered by International Maritime Organization (IMO) and Safety of Life at Sea (SOLAS) Carriage Regulations.

Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website (www.raymarine.com) to ensure you have the most up-to-date version(s) of the documentation for your product.

Chapter 2: Document and product information

Chapter contents

- [2.1 Document information on page 10](#)
- [2.2 Product overview on page 10](#)
- [2.3 Networking restrictions on page 11](#)

2.1 Document information

This document contains important information related to the installation of your Raymarine product.

The document includes information to help you:

- plan your installation and ensure you have all the necessary equipment;
- install and connect your product as part of a wider system of connected marine electronics;
- troubleshoot problems and obtain technical support if required.

This and other Raymarine product documents are available to download in PDF format from www.raymarine.com.

Applicable products

This document is applicable to the following products:

	Part number	Name	Description
	E70361	Micro-Talk	Micronet (Wireless) to SeaTalkng® gateway

Product documentation

The following documentation is applicable to your product:

Description	Part number
Micro-Talk Installation instructions Installation of a Micro-Talk gateway and connection to a wider system of marine electronics.	87265 / 88066
Micro-Talk mounting template Template for surface mounting the Micro-Talk gateway.	87272

Document illustrations

Your product may differ slightly from that shown in the illustrations in this document, depending on product variant and date of manufacture.

All images are provided for illustration purposes only.

Operation instructions

For detailed operation instructions for your product, refer to the documentation that accompanies your display.

2.2 Product overview

The Micro-Talk gateway bridges data between Micronet (wireless) and SeaTalkng® networks. When used in conjunction with a SeaTalk® to SeaTalkng® converter the data can also be bridged on to the SeaTalk® network or devices.



The Micro-Talk gateway has the following features:

- Bridges data from Micronet to SeaTalkng®
- Bridges data from SeaTalkng® to Micronet
- Pole, Rail or Surface or Bracket mountable using optional mounting kits
- NMEA 2000 compliant
- Low power consumption
- 12 V dc operation (24V protection)
- Waterproof to IPx6 and IPx7

The following data can be bridged by the Micro-Talk gateway:

Data	Micro-Talk to SeaTalkng®	SeaTalkng® to Micro-Talk
Wind	✓	✓
Mast rotation	✓	✗
Depth	✓ (1) or (2)	✓

Data	Micro-Talk to SeaTalkng®	SeaTalkng® to Micro-Talk
Speed	✓ (1) or (2)	✓
Temperature	✓ (1) or (2)	✓
Heading	✓ (1) or (2)	✓
GPS	✓ (2)	✓
Time & Date	✓ (2)	✓
Navigation data	✓ (2)	✓

Note:

- (1) Requires T121 Wireless hull transmitter.
- (2) Requires T122 NMEA 0183 wireless interface.

Multiple data sources (MDS)

The Micro-Talk gateway is MDS compliant. If a data type is available on the Micronet network then the gateway will be selectable as a data source, for that data type, from SeaTalkng® displays.

In installations where multiple sources of the same data type exist on the Micronet network, the data source that is used by the gateway and transmitted on to SeaTalkng® will be the same data source that is displayed on Micronet displays.

In installations where the same data types exist on both networks then the MDS selected data source will be shown on displays on both networks.

If MDS is set to **Auto** then the gateway will be the preferred data source.

SeaTalkng®

SeaTalkng® (Next Generation) is an enhanced protocol for connection of compatible marine instruments and equipment. It replaces the older SeaTalk and SeaTalk2 protocols.

SeaTalkng® utilizes a single backbone to which compatible equipment connect using a spur. Data and power are carried within the backbone. Devices that have a low draw can be powered from the network, although high current equipment will need to have a separate power connection.

SeaTalkng® is a proprietary extension to NMEA 2000 and the proven CAN bus technology. Compatible NMEA 2000 and SeaTalk and SeaTalk2 devices can also be connected using the appropriate interfaces or adaptor cables as required.

Micronet

Micronet is a proprietary wireless Radio Frequency (RF) network protocol compatible with Raymarine's wireless range of instrument displays and transducers.

Micronet can be used to connect up to 32 compatible devices together to create a wireless marine electronics network. Micronet products can operate on 1 of 2 frequencies depending on geographic location:

- 869.8 MHz for products operating in the UK, Europe or Africa
- 915.9 MHz for products operating in the USA, Canada, South America and Australia

Micronet products comply with the relevant ISM regulations and are exempt from licensing in each of these territories.

2.3 Networking restrictions

To ensure reliable system operation, certain restrictions must be adhered to when using the Micro-Talk gateway.

- **Wireless interface (NMEA 0183)** When the Micro-Talk gateway is used in a Micronet network that has a Wireless interface (T122) present, to prevent data looping, you must ensure that the Wireless interface's NMEA 0183 input/output connections are NOT connected to an MFD or an NMEA 0183 to SeaTalkng® converter that is connected to the same network as the gateway.
- **Multiple Micro-Talk gateways** It is recommended that only 1 Micro-Talk gateway is used per SeaTalkng® network. After powering up if a gateway detects another gateway it will shut itself down. It is recommended that only 1 Micro-Talk gateway is used per Micronet network. Bridging multiple SeaTalkng® networks using Micronet is NOT recommended.
- **Data damping** The Micronet protocol applies damping to data at source so that the data transmitted on the network is more stable/consistent. On SeaTalkng® networks the data is damped by the displays. There is therefore a risk that data can be double damped, once at source on Micronet and then again by the SeaTalkng® display. To minimize the effect of double damping, when the gateway is powered up it will automatically send a message to all Micronet displays and set their damping to the lowest level. This may result in Micronet displays showing rapidly changing data.

Note: There may be small differences in the data shown on Micronet displays to that shown on SeaTalkng® displays due to the effects of damping. You can manually alter the damping settings on your displays to provide a more stable/consistent reading. Damping settings on Micronet displays are reset when the system is power cycled.

Chapter 3: Planning the installation

Chapter contents

- [3.1 Installation checklist on page 14](#)
- [3.2 Parts supplied on page 14](#)
- [3.3 Software updates on page 14](#)
- [3.4 Tools required for installation on page 15](#)
- [3.5 Warnings and cautions on page 15](#)
- [3.6 Selecting a location on page 15](#)
- [3.7 Product dimensions on page 16](#)

3.1 Installation checklist

Installation includes the following activities:

Installation Task	
1	Plan your system.
2	Obtain all required equipment and tools.
3	Site all equipment.
4	Route all cables.
5	Drill cable and mounting holes.
6	Make all connections into equipment.
7	Secure all equipment in place.
8	Power on and test the system.


Schematic diagram

A schematic diagram is an essential part of planning any installation. It is also useful for any future additions or maintenance of the system. The diagram should include:

- Location of all components.
- Connectors, cable types, routes and lengths.

3.2 Parts supplied

The following parts are supplied with your product.

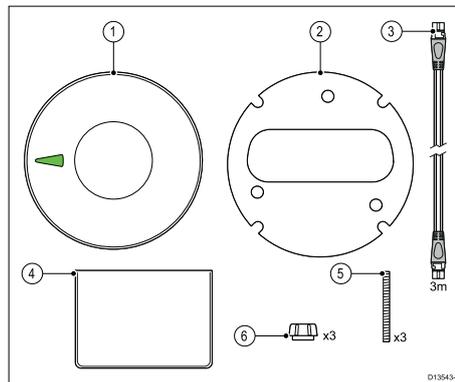

1. Unit
2. Mounting seal
3. 3 m (9.84 ft) SeaTalkng® spur cable
4. Documentation
5. M4 x 40mm Threaded studs x 3 (used for surface mounting)
6. Finger nuts x 3 (used for surface mounting)

Unpack your product carefully to prevent damage or loss of parts, check the box contents against the list above. Retain the packaging and documentation for future reference.

3.3 Software updates

The software running on the product can be updated.

- Raymarine periodically releases software updates to improve product performance and add new features.
- You can update the software for your product using a connected and compatible multifunction display.
- Refer to www.raymarine.com/software/ for the latest software updates and the software update procedure for your product.
- If in doubt as to the correct procedure for updating your product software, refer to your dealer or Raymarine technical support.

Caution: Installing software updates


The software update process is carried out at your own risk. Before initiating the update process ensure you have backed up any important files.

Ensure that the unit has a reliable power supply and that the update process is not interrupted.

Damage caused by incomplete updates are not covered by Raymarine warranty.

By downloading the software update package, you agree to these terms.

3.4 Tools required for installation

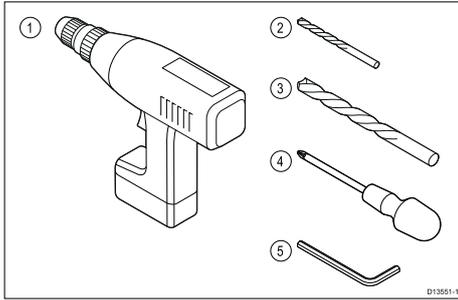

1	Power drill
2	4 mm (11/64) drill bit (for fixing studs)
3	22 mm (for cable hole when surface mounting)
4	Pozi-drive screwdriver (only required for Pole mount installations)
5	Size 4 (2.5 mm) Hex Key (only required for Pole mount installations)

3.5 Warnings and cautions

Important: Before proceeding, ensure that you have read and understood the warnings and cautions provided in the [Chapter 1 Important information](#) section of this document.

3.6 Selecting a location




Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

Micronet device location requirements

Your unit includes a wireless transceiver that utilizes the Micronet networking protocol. The product's wireless performance should be checked at the desired location before drilling any mounting holes.

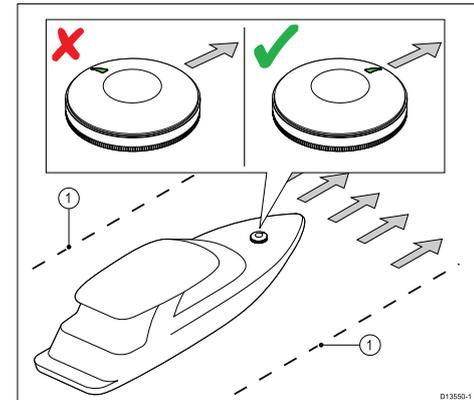

For optimum performance the product should be installed above decks, on a horizontally surface with the LED 'arrow' pointing towards the bow of the vessel.

When planning the installation location, also consider the following:

- The product should have a clear line of sight to the Micronet products it will connect with. Range for

unobstructed line of sight is up to 150 m (492 ft), if the line of sight is obstructed by a bulkhead or other object this range can be drastically reduced.

- The unit should be mounted at least 1 m (3 ft) away from devices that may cause interference, such as a compass, motors, generators, VHF radio, and any other transmitters or receivers.
- Choose a location where the unit will be safe from physical damage and excessive vibration.
- Choose a location where no load or force maybe put on the product.
- Mount away from any source of heat or potential flammable hazards, such as fuel vapor.
- The product should be mounted in a location where the diagnostics LED is viewable.

Note: Do NOT mount on a Carbon, Steel or Aluminium surface, as this may cause interference of the wireless signal, instead, in these circumstances, mount using the optional Pole mounting or Deck mounting kit.

Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the product.

When choosing a suitable location for the product you should aim to maintain the maximum possible distance from any compasses. Typically this distance should be at least 1 m (3 ft) in all directions. However for some smaller vessels it may not be possible to locate the product this far away from a compass. In this situation, when choosing the installation location for your product, ensure that the compass is not affected by the product when it is in a powered state.

EMC installation guidelines

Raymarine equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference

between equipment and minimize the effect such interference could have on the performance of your system

Correct installation is required to ensure that EMC performance is not compromised.


Note: In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine equipment and cables connected to it are:
 - At least 1 m (3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 7 ft (2 m).
 - More than 2 m (7 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- Raymarine specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

Note: Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation

3.7 Product dimensions

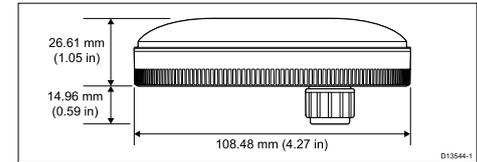

Chapter 4: Cables and connections

Chapter contents

- [4.1 General cabling guidance on page 18](#)
- [4.2 Connections overview on page 18](#)
- [4.3 SeaTalkng® power supply on page 19](#)
- [4.4 Network examples on page 21](#)
- [4.5 Autonetworking on page 22](#)

4.1 General cabling guidance

Cable types and length


It is important to use cables of the appropriate type and length

- Unless otherwise stated use only standard cables of the correct type, supplied by Raymarine.
- Ensure that any non-Raymarine cables are of the correct quality and gauge. For example, longer power cable runs may require larger wire gauges to minimize voltage drop along the run.

Routing cables

Cables must be routed correctly, to maximize performance and prolong cable life.

- Do NOT bend cables excessively. Wherever possible, ensure a minimum bend diameter of 200 mm (8 in) / minimum bend radius of 100 mm (4 in).

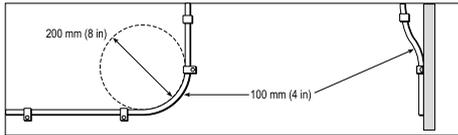

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using tie-wraps or lacing twine. Coil any extra cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through.
- Do NOT run cables near to engines or fluorescent lights.

Always route data cables as far away as possible from:

- other equipment and cables,
- high current carrying AC and DC power lines,

- antennae.

Strain relief

Ensure adequate strain relief is provided. Protect connectors from strain and ensure they will not pull out under extreme sea conditions.

Cable shielding


Ensure that all data cables are properly shielded that the cable shielding is intact (e.g. hasn't been scraped off by being squeezed through a tight area).

4.2 Connections overview

Your product includes the following connections.

Connection	Qty	Connects to:	Suitable cables
	1	<ol style="list-style-type: none">1. SeaTalkng® backbone2. NMEA 2000 backbone	<ol style="list-style-type: none">1. SeaTalkng® spur cables2. SeaTalkng® to DeviceNet adaptor cable (A06045)
	Can connect up to 32 Compatible Micronet (wireless) devices simultaneously.		

Connecting SeaTalkng® cables

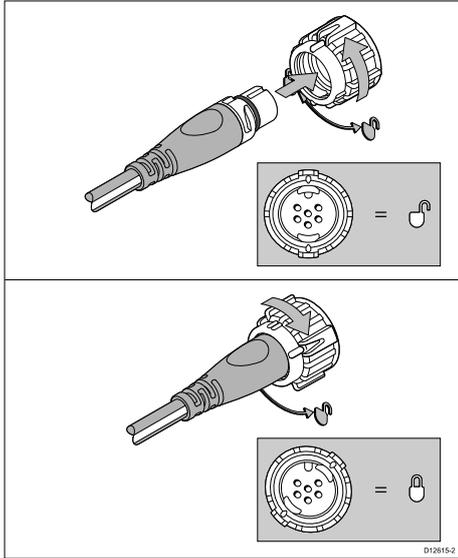

1. Rotate the locking collar on the unit to the unlocked position.
2. Ensure the cable's connector is correctly oriented.
3. Fully insert the cable connector.
4. Rotate locking collar clockwise (2 clicks) until it is in the locked position.

SeaTalkng® product loading

The number of products that can be connected to a SeaTalkng® backbone depends on the power consumption of each product and the physical overall length of the backbone.

SeaTalkng® products have a Load Equivalency Number (LEN), which indicates the product's power consumption. The LEN for each product can be found in the product's Technical Specification.

4.3 SeaTalkng® power supply

Power is supplied to the product over the SeaTalkng® backbone.

A SeaTalkng® backbone requires one 12 V dc power supply, connected to the SeaTalkng® backbone. This can be provided by:

- a battery ⁽¹⁾, via the distribution panel,
- an Autopilot Control Unit (ACU)⁽²⁾,
- an SPX course computer ⁽²⁾,
- for 24 V vessels a 5 amp, regulated, continuous 24 V dc to 12 V dc converter is required.

Note:

- (1) The battery used for starting the vessel's engine(s) should NOT be used to power the SeaTalkng® backbone as this can cause sudden voltage drops, when the engines are started.
- (2) The ACU-100 and SPX-5 cannot be used to power the SeaTalkng® backbone.


SeaTalkng® power connection point

Small systems

If the backbone length is 60 m (197 ft) or less, the power connection point may be connected at any point in the backbone.

Large systems

If the backbone length is greater than 60 m (197 ft), the power connection point should be connected at a point that creates a balanced current draw from each side of the backbone. The Load Equivalency Number (LEN) is used to determine the power connection point for the system.

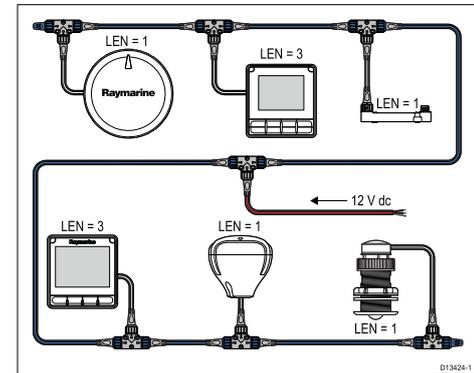

In the example above the system has an overall LEN of 10, so the optimum connection point would be to have 5 LEN either side of the connection point.

In-line fuse and thermal breaker ratings

The SeaTalkng® network's power supply requires an in-line fuse or thermal breaker to be fitted.

In-line fuse rating	Thermal breaker rating
5 A	3 A (if only connecting one device)

Note: The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt consult an authorized Raymarine dealer.

SeaTalkng® system loading

The maximum loading / LEN for a SeaTalkng® system depends on the length of the backbone.

Loading type	Backbone length	Total LEN
Unbalanced	20 m (66 ft)	40
Unbalanced	40 m (131 ft)	20
Unbalanced	60 m (197 ft)	14
Balanced	60 m (197 ft) or less	100
Balanced	80 m (262 ft)	84
Balanced	100 m (328 ft)	60
Balanced	120 m (394 ft)	50
Balanced	140 m to 160 m (459 ft to 525 ft)	40
Balanced	180 m to 200 m (591 ft to 656 ft)	32

Power distribution — SeaTalkng®

Recommendations and best practice.


- Only use approved SeaTalkng® power cables. Do NOT use a power cable designed for, or supplied with, a different product.
- See below for more information on implementation for some common power distribution scenarios.

Important: When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel's electrical system.

Note: The information provided below is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized Raymarine dealer or a suitably qualified professional marine electrician.


Implementation — direct connection to battery

- SeaTalkng® power cables may be connected directly to the vessel's battery, via a suitably rated fuse or breaker.
- You MUST fit a suitably rated fuse or breaker between the red wire and the battery's positive terminal.
- Refer to the inline fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable, ensure you use suitably rated cable and that sufficient power (12 V dc) is available at the SeaTalkng® backbone's power connection.

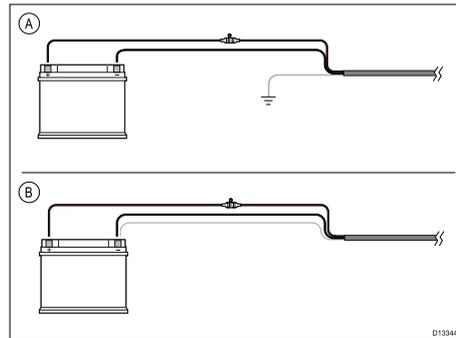

A	Battery connection scenario A: suitable for a vessel with a common RF ground point. In this scenario, if your product's power cable is supplied with a separate drain wire then it should be connected to the vessel's common ground point.
B	Battery connection scenario B: suitable for a vessel without a common grounding point. In this case, if your product's power cable is supplied with a separate drain wire then it should be connected directly to the battery's negative terminal.

Implementation — connection to distribution panel

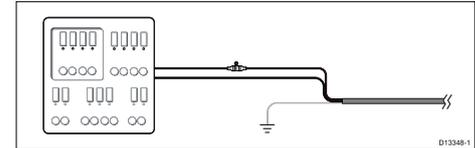

- Alternatively, the SeaTalkng® power cable may be connected to a suitable breaker or switch on the vessel's distribution panel or factory-fitted power distribution point.
- The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm²) cable.
- Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than 1 item of equipment shares a breaker, use individual in-line fuses for each power circuit to provide the necessary protection.
- In all cases, observe the recommended breaker / fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable, ensure you use suitably rated cable and that sufficient power (12 V dc) is available at the SeaTalkng® backbone's power connection.

Important: Be aware that the suitable fuse rating for the thermal breaker or fuse is dependent on the number of devices you are connecting.


More information

Raymarine recommends that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection

Sharing a breaker

Where more than 1 piece of equipment shares a breaker you must provide protection for the individual circuits. E.g. by connecting an in-line fuse for each power circuit.

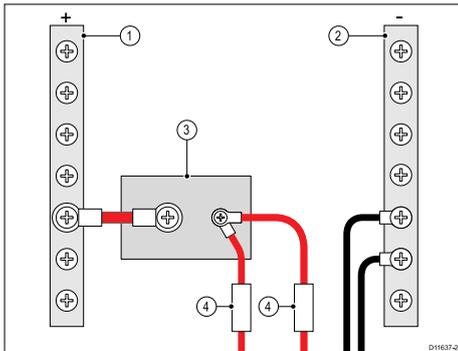

1	Positive (+) bar
2	Negative (-) bar
3	Circuit breaker
4	Fuse

Where possible, connect individual items of equipment to individual circuit breakers. Where this is not possible, use individual in-line fuses to provide the necessary protection.



Warning: Product grounding

Before applying power to this product, ensure it has been correctly grounded, in accordance with the instructions provided.




Warning: Positive ground systems

Do not connect this unit to a system which has positive grounding.

4.4 Network examples

The illustrations below are provided as examples only.


Example system with wireless hull transmitter

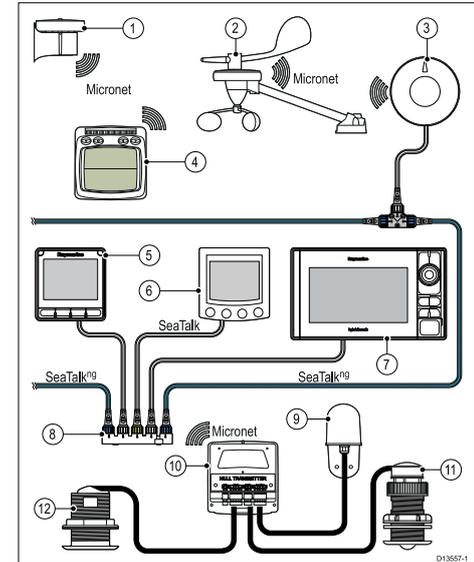

1. Mast rotation sensor
2. Micronet Wind Vane
3. Micro-Talk gateway
4. Wireless instrument
5. SeaTalkng® instrument
6. SeaTalk Pilot Controller
7. SeaTalkng® MFD
8. SeaTalk to SeaTalkng® converter
9. T909 Compass transducer
10. Wireless hull transmitter

- 11. Depth transducer
- 12. Speed and temperature transducer

Example system with iTC-5

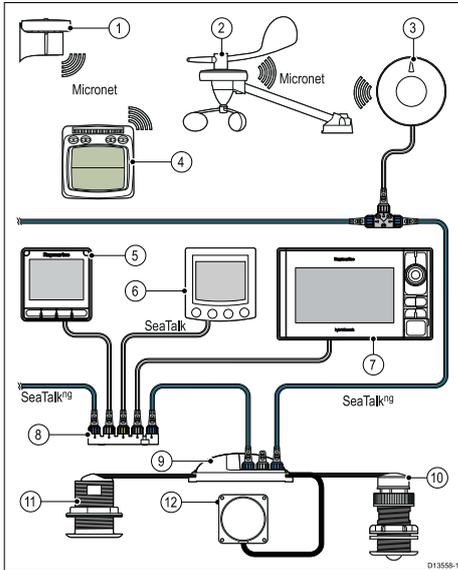

- 1. Mast rotation sensor
- 2. Micronet Wind Vane
- 3. Micro-Talk gateway
- 4. Wireless instrument
- 5. SeaTalkng® instrument
- 6. SeaTalk Pilot Controller
- 7. SeaTalkng® MFD
- 8. SeaTalk to SeaTalkng® converter
- 9. iTC-5

- 10. Depth transducer
- 11. Speed and temperature transducer
- 12. SeaTalkng® heading source (e.g. Fluxgate compass or EV sensor.)




4.5 Autonetworking


Micronet wireless products are networked together using the **Autonetworking** procedure.

Autonetworking connects compatible wireless products, within range, to the same Micronet network.

Autonetworking — compatible Micronet displays

Autonetworking can be initiated using one of the compatible Micronet displays shown below.

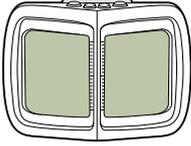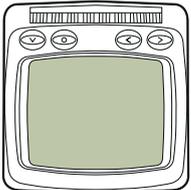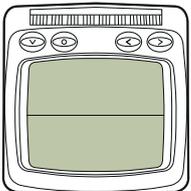Product	Description
	T070 Race Master Display
	T110 Multifunction wireless display
	T111 Multifunction wireless dual display

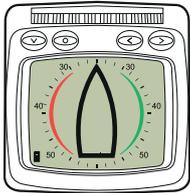Product	Description
	T112 Multifunction wireless analogue display
	T113 Multifunction wireless remote display

Performing Autonetworking


Follow the steps below to add new Micronet products to an existing system, or create a new system from multiple boxes.

Note:

- Autonetworking should be performed before new products are mounted.
- The following procedure is NOT required when creating a new system with products that have been supplied in a single box.
- You will need to choose a display capable of initiating Autonetworking.
- If you have an existing system then a capable display from this system should be chosen.


1. Connect products that require an external power source to a 12 V dc power supply.
2. Place all **New** products within 300 mm (11.8 in) of the display you have chosen to perform Autonetworking.

Existing networked products do not need to be included.

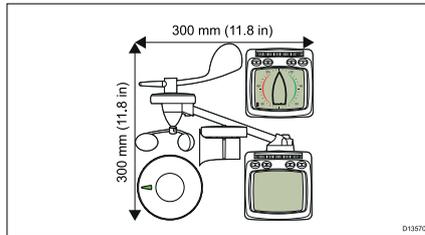


3. Ensure all products are powered off.
4. Power on the chosen display, by pressing and holding the  **Down/Power** button for 2 seconds.
5. Ensure the chosen display is not showing a 'Racer Timer' or 'Wind Shift' page.


6. Press the  **Set Up** button for 2 seconds to display the Setup menu.

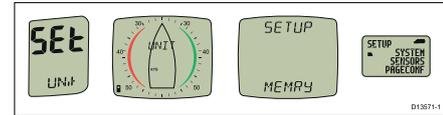

7. Press the  **Down/Power** button until the Options page is displayed.

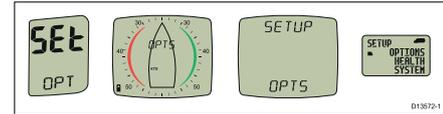


8. Press the  **Left** button to display the Autonetworking page.

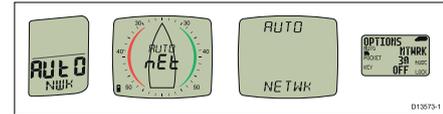


9. Press the  **Set up** button to begin the Autonetworking procedure.

A countdown will begin and the chosen display shows 'WAIT' and then 'JOIN' as devices join the network.

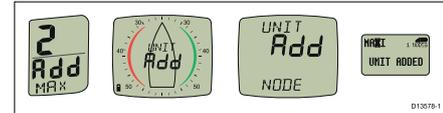

10. In the last 30 seconds of the countdown some displays may switch on and 'JOIN' will flash onscreen, to allow these displays to join the network follow the steps below:

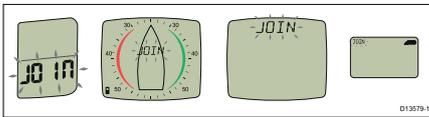

- i. Press any button on a display that has 'JOIN' flashing onscreen.

The Display will show 'JOIN YES'



- ii. Confirm by pressing any button on the same display.

The display will show 'DONE'.

If confirmation is not completed within 25 seconds, 'FAIL' will be shown which means the display has not joined the network.

When the countdown is complete, the chosen display returns to the Autonetworking page. Press

and hold the  **Set up** button for 2 seconds to return to normal operation.

11. Test the system:

- i. Switch off the chosen display.
- ii. Switch on the chosen display.

If some units do not power up, check that all new units are within 300 mm (11.8 in) of the chosen display and if required, are connected to a power source.

12. Repeat the steps above until all units have joined the network.
13. If you are replacing older units, remove them from the vessel.
14. Ensure all units are working correctly before mounting them.

Product identification on Micronet

The Micro-Talk gateway is identified differently during the Autonetworking process than when checking the Health pages from a Micronet display.

During Autonetworking the gateway is identified as an NMEA 2000 device (i.e.: 2000, N2000, or N 2000)

When checking the Health pages from a Micronet display the gateway is identified as Type 7 device (i.e: TYP7, TYPE7 or TYPE 7).


Chapter 5: Installation

Chapter contents

- [5.1 Surface mounting on page 26](#)
- [5.2 Pole mounting on page 26](#)
- [5.3 Surface mounting using the Deck mounting kit on page 27](#)
- [5.4 Bracket mounting using the Deck mounting kit on page 28](#)
- [5.5 Surface mounting using the Riser on page 28](#)
- [5.6 Locking and releasing the unit on page 29](#)

5.1 Surface mounting

The unit can be mounted on a surface that is up to approximately 28 mm (1.10 in) thick using the fixings supplied with the unit. To mount on a thicker surface longer studs will be required.

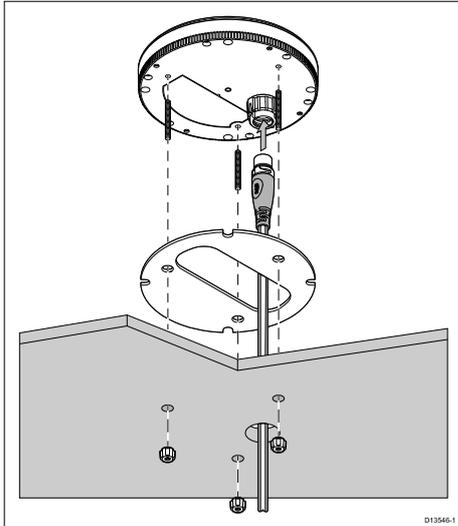


1. Ensuring correct orientation, affix the supplied mounting template to the mounting surface at the desired location.
2. Drill 3 x fixing holes and 1 x cable hole using drill bit sizes as indicated on the template.
3. Place the waterproof gasket into position on the underside of the unit.
4. Connect the cable to an available **SeaTalk^{ng}** spur connection then connect the other end of the cable to the connector on the underside of the unit and secure using the locking collar.
5. Screw the threaded studs into the underside of the unit (these should be hand-tight only).

6. Position the unit so that the mounting studs pass through the holes in the mounting surface.
7. Secure the unit to the mounting surface using the thumb nuts. (these should be hand-tight only).

5.2 Pole mounting

The Pole mount kit (A80370) can be used to mount your product on a pole or rail.

Pole mounting requires a pole with a 1 inch 14 TPI thread:

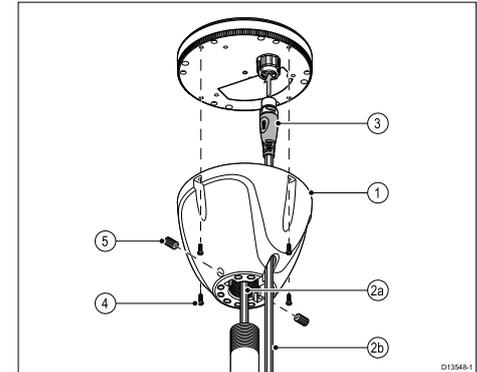

1. Screw the Pole mount adaptor to the top of the pole.
2. Feed the cable through either:
 - 2a) the center of the Pole mount adaptor and pole, or
 - 2b) the cable exit hole.
3. Connect the cable to an available **SeaTalk^{ng}** spur connection then connect the other end of the cable to the connector on the underside of the unit and secure using the locking collar.
4. Ensuring correct orientation, Secure the unit to the Pole mount adaptor using the fixings supplied with the adaptor.
5. Fix the unit's orientation by tightening the grub screws.


The grub screws and their captive nuts are supplied fitted to the adaptor.

Note: The Pole Mount Adaptor may also be used to rail mount the unit using a 3rd party rail clamp with a 1 inch 14 TPI thread.

5.3 Surface mounting using the Deck mounting kit

The Deck mounting kit (A80437) can be used to surface or bracket mount your product.

The Riser and Bracket pieces are not required for this installation.

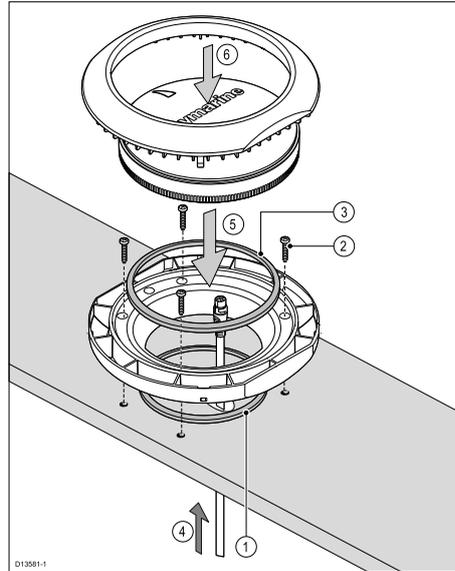


1. Use the Mounting tray template supplied with the Deck mounting kit to drill 4 holes in the mounting surface, plus a 22 mm (7/8 in) hole for the SeaTalkng® cable. Place the small sealing ring in the groove located on the bottom of the mounting tray.
2. Secure the tray to the mounting surface using the supplied fixings.
3. Place the large sealing ring into the groove on the upper side of the mounting tray.

4. Pull the SeaTalkng® cable through the mounting surface hole and the mounting tray. Plug in the cable connector on the underside of the unit and secure by rotating the locking collar clockwise 2 clicks.
5. Secure the unit to the Mounting tray by positioning the unit with the LED facing forward and inserting the unit into the grooves in the Mounting tray.
6. Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.

5.4 Bracket mounting using the Deck mounting kit

The Deck mounting kit (A80437) can be used to wall mount your product.

The Riser piece is not required for bracket mounting the product.

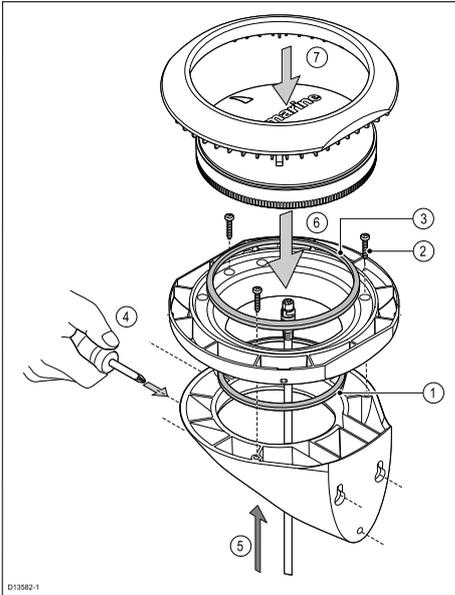


1. Place the small sealing ring in the groove located on the bottom of the mounting tray.
2. Secure the tray to the mounting surface using the supplied fixings in 3 positions.
3. Place the large sealing ring into the groove on the upper side of the mounting tray.
4. Secure the bracket to the mounting surface using the supplied mounting template. Secure the bracket using the supplied fixings in 3 positions.

5. Pull the SeaTalkng® cable through the mounting bracket hole and the mounting tray. Plug in the cable connector on the underside of the unit and secure by rotating the locking collar clockwise 2 clicks.
6. Secure the unit to the Mounting tray by positioning the unit with the LED facing forward and inserting the unit into the grooves in the Mounting tray.
7. Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.

5.5 Surface mounting using the Riser

The Deck mounting kit (A80437) can be used to raise the product from the mounting surface.

The Wall bracket is not required when using the Riser.

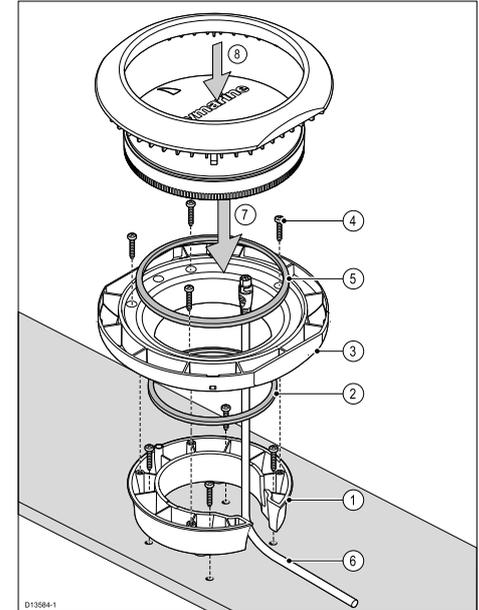


1. Use the supplied Deck mount riser template to drill 4 holes in the mounting surface. Secure the Riser to the mounting surface using 4x supplied fixings.
2. Place the small sealing ring in the groove located on the bottom of the mounting tray.
3. Position the Mounting tray on top of the Riser.
4. Secure the Mounting tray to the Riser using 3x supplied fixings.

5. Place the large sealing ring into the groove on the upper side of the Mounting tray.
6. Pull the SeaTalkng® cable through the Riser and Mounting tray. Plug in the cable connector on the underside of the unit and secure by rotating the locking collar clockwise 2 clicks.
7. Secure the unit to the Mounting tray by positioning the unit with the LED facing forward and inserting the unit into the grooves in the Mounting tray.
8. Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.

5.6 Locking and releasing the unit

Follow the steps below to lock and release the unit from the mounting adaptor.

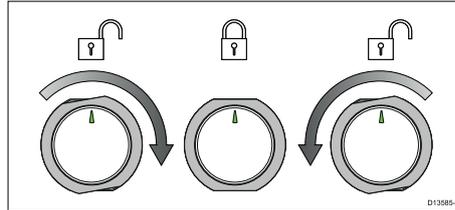

1. To lock the unit: Place the Mounting trim over the unit slightly offset, and then twist the Mounting trim clockwise until it locks into position.
2. To release the unit: Twist the trim piece counter-clockwise and then lift away from the unit.

Chapter 6: System checks and troubleshooting

Chapter contents

- [6.1 Troubleshooting on page 32](#)
- [6.2 LED Diagnostics on page 33](#)

6.1 Troubleshooting







The troubleshooting information provides possible causes and corrective action required for common problems associated with marine electronics installations.

All Raymarine products are, prior to packing and shipping, subjected to comprehensive test and quality assurance programs. However, if you experience problems with the operation of your product this section will help you to diagnose and correct problems in order to restore normal operation.

If after referring to this section you are still having problems with your unit, please contact Raymarine Technical Support for further advice.

6.2 LED Diagnostics

LED Sequence	LED Color	Status	Action
	Red	SeaTalkng® powering up	None
	Red	Power up failed	Power cycle unit
	Red	Multiple Micro-Talk gateways detected on SeaTalkng®	Remove all but 1 Micro-Talk gateway from SeaTalkng®
	Green	SeaTalkng® powered up, Micronet powering up	None
	Red	Micronet connection failed	Power cycle the unit
	Green	Micronet joining network	None
	Red	Micronet searching for network	None

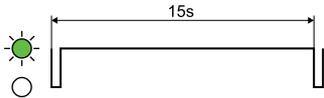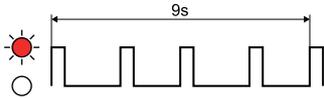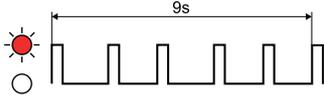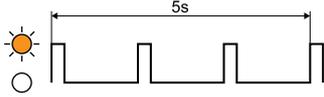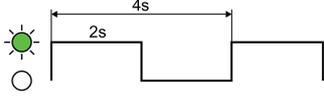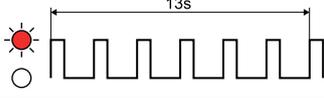LED Sequence	LED Color	Status	Action
	Green	Normal operation	None
	Red	SeaTalkng® connection lost, Micronet will revert to searching mode after 30 seconds	<ol style="list-style-type: none"> 1. Power cycle unit 2. Check network connections
	Red	No data being received on SeaTalkng®, Micronet will revert to searching mode after 30 seconds	<ol style="list-style-type: none"> 1. Power cycle unit 2. Check network connections
	Amber	Device failed to commence software update process.	Power cycle unit and retry the update
	Green	Software update in progress	None
	Red	Software update failed	Power cycle unit and retry the update

Chapter 7: Maintenance

Chapter contents

- [7.1 Service and maintenance on page 36](#)
- [7.2 Routine equipment checks on page 36](#)
- [7.3 Product cleaning on page 36](#)

7.1 Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

7.2 Routine equipment checks

Raymarine strongly recommends that you complete a number of routine checks to ensure the correct and reliable operation of your equipment.

Complete the following checks on a regular basis:

- Examine all cables for signs of damage or wear and tear.
- Check that all cables are securely connected.

7.3 Product cleaning

Best cleaning practices.

When cleaning products:

- If your product includes a display screen, do NOT wipe the screen with a dry cloth, as this could scratch the screen coating.
- Do NOT use abrasive, or acid or ammonia based products.
- Do NOT use a jet wash.

Chapter 8: Technical support

Chapter contents

- [8.1 Raymarine product support and servicing on page 38](#)
- [8.2 Learning resources on page 39](#)

8.1 Raymarine product support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

You can obtain this product information using the menus within your product.

Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Don't forget to visit the Raymarine website to register your product for extended warranty benefits: <http://www.raymarine.co.uk/display/?id=788>.

Region	Telephone	E-mail
United Kingdom (UK), EMEA, and Asia Pacific	+44 (0)1329 246 932	emea.service@raymarine.com
United States (US)	+1 (603) 324 7900	rm-usrepair@flir.com

Web support

Please visit the "Support" area of the Raymarine website for:

- **Manuals and Documents** — <http://www.raymarine.com/manuals>
- **FAQ / Knowledgebase** — <http://www.raymarine.com/knowledgebase>
- **Technical support forum** — <http://forum.raymarine.com>
- **Software updates** — <http://www.raymarine.com/software>

Telephone and e-mail support

Region	Telephone	E-mail
United Kingdom (UK), EMEA, and Asia Pacific	+44 (0)1329 246 777	support.uk@raymarine.com
United States (US)	+1 (603) 324 7900 (Toll-free: +800 539 5539)	support@raymarine.com
Australia and New Zealand	+61 2 8977 0300	aus.support@raymarine.com (Raymarine subsidiary)
France	+33 (0)1 46 49 72 30	support.fr@raymarine.com (Raymarine subsidiary)
Germany	+49 (0)40 237 808 0	support.de@raymarine.com (Raymarine subsidiary)
Italy	+39 02 9945 1001	support.it@raymarine.com (Raymarine subsidiary)

Region	Telephone	E-mail
Spain	+34 96 2965 102	sat@azimut.es (Authorized Raymarine distributor)
Netherlands	+31 (0)26 3614 905	support.nl@raymarine.com (Raymarine subsidiary)
Sweden	+46 (0)317 633 670	support.se@raymarine.com (Raymarine subsidiary)
Finland	+358 (0)207 619 937	support.fi@raymarine.com (Raymarine subsidiary)
Norway	+47 692 64 600	support.no@raymarine.com (Raymarine subsidiary)
Denmark	+45 437 164 64	support.dk@raymarine.com (Raymarine subsidiary)
Russia	+7 495 788 0508	info@mikstmarine.ru (Authorized Raymarine distributor)

Viewing product information

With your MFD Homescreen displayed:

1. Select **Set-up**.
2. Select **Maintenance**.
3. Select **Diagnostics**.
4. Select **Select Device**.
5. Select the relevant product from the list.

The Diagnostics page is displayed.

8.2 Learning resources

Raymarine has produced a range of learning resources to help you get the most out of your products.

Video tutorials

	<p>Raymarine official channel on YouTube:</p> <ul style="list-style-type: none">• http://www.youtube.com/user/RaymarineInc
	<p>Video Gallery:</p> <ul style="list-style-type: none">• http://www.raymarine.co.uk/view/?id=2679
 <p>Using the new Apps from Raymarine: How to pair your smartphone/tablet with your new e or c Series</p>	<p>Product Support videos:</p> <ul style="list-style-type: none">• http://www.raymarine.co.uk/view/?id=4952

Note:

- Viewing the videos requires a device with an Internet connection.
- Some videos are only available in English.

Training courses

Raymarine regularly runs a range of in-depth training courses to help you make the most of your products. Visit the Training section of the Raymarine website for more information:

- <http://www.raymarine.co.uk/view/?id=2372>

FAQs and Knowledge Base

Raymarine has produced an extensive set of FAQs and a Knowledge Base to help you find more information and troubleshoot any issues.

- <http://www.raymarine.co.uk/knowledgebase/>

Technical support forum

You can use the Technical support forum to ask a technical question about a Raymarine product or to find out how other customers are using their Raymarine equipment. The resource is regularly updated with contributions from Raymarine customers and staff:

- <http://forum.raymarine.com>

Chapter 9: Technical specification

Chapter contents

- [9.1 Technical specification on page 42](#)

9.1 Technical specification

Nominal supply voltage	12 V dc (Supplied by SeaTalkng®)
Operating voltage range	9 V dc to 16 V dc (protected up to 32 V dc)
Power consumption	25 mA at nominal supply voltage
Environmental	Installation environment <ul style="list-style-type: none">• Operating temperature: -20 °C to +55 °C (-4 °F to 131 °F)• Storage temperature: -30 °C to +70 °C (-22 °F to 158 °F)• Relative humidity: max 93%• Waterproof to IPx6 and IPx7
Supported connection protocols	<ul style="list-style-type: none">• SeaTalkng® / NMEA 2000 (via DeviceNet adaptor)• Micronet (wireless)
LEN (refer to SeaTalkng® Reference manual for more information)	1

Chapter 10: Spares and accessories

Chapter contents

- [10.1 Accessories on page 44](#)
- [10.2 SeaTalk^{ng}® cabling components on page 44](#)
- [10.3 SeaTalk^{ng}® cables and accessories on page 44](#)

10.1 Accessories

The following accessories are available:

Accessories

Item	Part number
Pole/rail mounting adaptor kit	A80370
6 m SeaTalkng white spur cable	A06072
Deck mounting (Clamshell/Riser) kit	A80437

10.2 SeaTalkng® cabling components

SeaTalkng cabling components and their purposes.

Connection / Cable	Notes
Backbone cable (various lengths)	The main cable carrying data. Spurs from the backbone are used to connect SeaTalkng devices.
T-piece connector	Used to make junctions in the backbone to which devices can then be connected.
Terminator	Required at either end of the backbone.
Inline terminator	Used to connect a spur cable directly to the end of a backbone; useful for longer cable runs.
Spur cable	Used to connect devices to the backbone. Devices may be daisy chained or connected directly to the T-pieces.
SeaTalkng 5-way connector	Used to branch, split, or make additional connections in SeaTalk or SeaTalkng networks.
Blanking plug	Inserted into unused spur connector positions in a 5-way connector or T-piece.

10.3 SeaTalkng® cables and accessories

SeaTalkng cables and accessories for use with compatible products.

Description	Part No	Notes
SeaTalkng starter kit	T70134	Includes: <ul style="list-style-type: none"> • 1 x 5 Way connector (A06064) • 2 x Backbone terminator (A06031) • 1 x 3 m (9.8 ft) spur cable (A06040) • 1 x Power cable (A06049)
SeaTalkng Backbone Kit	A25062	Includes: <ul style="list-style-type: none"> • 2 x 5 m (16.4 ft) Backbone cable (A06036) • 1 x 20 m (65.6 ft) Backbone cable (A06037) • 4 x T-piece (A06028) • 2 x Backbone terminator (A06031) • 1 x Power cable (A06049)
SeaTalkng 0.4 m (1.3 ft) spur	A06038	
SeaTalkng 1 m (3.3 ft) spur	A06039	
SeaTalkng 3 m (9.8 ft) spur	A06040	

Description	Part No	Notes
SeaTalk ^{ng} 5 m (16.4 ft) spur	A06041	
SeaTalk ^{ng} 0.4 m (1.3 ft) elbow spur	A06042	
SeaTalk ^{ng} 0.4 m (1.3 ft) backbone	A06033	
SeaTalk ^{ng} 1 m (3.3 ft) backbone	A06034	
SeaTalk ^{ng} 3 m (9.8 ft) backbone	A06035	
SeaTalk ^{ng} 5 m (16.4 ft) backbone	A06036	
SeaTalk ^{ng} 9 m (29.5 ft) backbone	A06068	
SeaTalk ^{ng} 20 m (65.6 ft) backbone	A06037	
SeaTalk ^{ng} to bare ends 1 m (3.3 ft) spur	A06043	
SeaTalk ^{ng} to bare ends 3 m (9.8 ft) spur	A06044	
SeaTalk ^{ng} Power cable	A06049	
SeaTalk ^{ng} Terminator	A06031	
SeaTalk ^{ng} T-piece	A06028	Provides 1 x spur connection
SeaTalk ^{ng} 5-way connector	A06064	Provides 3 x spur connections

Description	Part No	Notes
SeaTalk ^{ng} backbone extender	A06030	
SeaTalk to SeaTalk ^{ng} converter kit	E22158	Allows the connection of SeaTalk devices to a SeaTalk ^{ng} system.
SeaTalk ^{ng} Inline terminator	A80001	Provides direct connection of a spur cable to the end of a backbone cable. No T-piece required.
SeaTalk ^{ng} Blanking plug	A06032	
ACU / SPX SeaTalk ^{ng} spur cable 0.3 m (1.0 ft)	R12112	Connects an SPX course computer or an ACU to a SeaTalk ^{ng} backbone.
SeaTalk (3 pin) to SeaTalk ^{ng} adaptor cable 0.4 m (1.3 ft)	A06047	
SeaTalk to SeaTalk ^{ng} spur 1 m (3.3 ft) spur	A22164	
SeaTalk2 (5 pin) to SeaTalk ^{ng} adaptor cable 0.4 m (1.3 ft)	A06048	
DeviceNet adaptor cable (Female)	A06045	Allows the connection of NMEA 2000 devices to a SeaTalk ^{ng} system.
DeviceNet adaptor cable (Male)	A06046	Allows the connection of NMEA 2000 devices to a SeaTalk ^{ng} system.

Description	Part No	Notes
DeviceNet adaptor cable (Female) to bare ends.	E05026	Allows the connection of NMEA 2000 devices to a SeaTalk ^{ng} system.
DeviceNet adaptor cable (Male) to bare ends.	E05027	Allows the connection of NMEA 2000 devices to a SeaTalk ^{ng} system.

Appendix A NMEA 2000 PGN support

The unit supports the following NMEA 2000 PGNs.

PGN	Description	Receive (Rx)	Transmit (Tx)
5990 4	ISO Request	•	
5993 2	ISO Acknowledgement		•
6016 0	ISO Transport protocol, data transfer	•	
6041 6	ISO Transport protocol, connection management	•	•
6092 8	ISO Address claim	•	•
6524 0	ISO Commanded address	•	
1262 08	NMEA - Request group function	•	
1262 08	NMEA - Command group function	•	
1262 08	NMEA - Acknowledge group function		•
1264 64	Transmission PGN list		•
1264 64	Received PGN list		•
1269 92	System time	•	•

PGN	Description	Receive (Rx)	Transmit (Tx)
1269 93	Heartbeat		•
1269 96	Product information		•
1269 98	Configuration information		•
1272 37	Heading / track control	•	•
1272 50	Vessel heading	•	•
1272 58	Magnetic variation	•	•
1282 59	Speed, water referenced	•	•
1282 67	Water depth	•	•
1282 75	Distance log	•	•
1290 25	Position, rapid update	•	
1290 26	COG & SOG rapid update	•	•
1290 29	GNSS position data	•	•
1290 33	Local time offset <i>(formerly Time and date)</i>	•	•
1292 83	Cross track error	•	•

PGN	Description	Receive (Rx)	Transmit (Tx)
1282 84	Navigation data	•	•
1292 85	Navigation Route / WP information	•	•
1300 67	Route and WP service – Route – WP name & position	•	
1300 68	Route and WP service – Route – WP name	•	
1300 74	Route and WP service – WP list – WP name & position	•	
1303 06	Wind data	•	•
1303 10	Environmental parameters	•	•
1303 16	Temperature, extended range	•	•
1305 77	Direction data	•	

Index

A

Accessories	44
Autonetworking	22–23

B

Backbone length	19–20
Battery connection	20
Box contents, <i>See</i> Parts supplied	
Bracket mounting	28

C

Cable bend radius	18
Cable connection, <i>See</i> Connecting cables	
Cable connector, <i>See</i> Connecting cables	
Cable protection	18
Cable routing	18
Cleaning	7, 36
Compass safe distance	16
Compatible displays	22
Connecting cables	19
Connections	18
Connectors, <i>See</i> Connections	
Contacts	38

D

Damping	11
Data bridging	10
Data Damping, <i>See</i> Damping	
Data differences	11
Data source, <i>See</i> Multiple data sources	
Deck mounting kit	27–29
Diagnostics	33
Distribution panel connection	20
Double damping	11

E

Electromagnetic Compatibility	16
EMC, <i>See</i> Electromagnetic Compatibility	
Environmental parameters	42

F

Frequency, <i>See</i> Operating frequency	
Fuse rating	19

I

Installation	26–29
Installation equipment, <i>See</i> Tools	
Interference	16
<i>See also</i> Compass safe distance	

L

LED status	33
LEN, <i>See</i> Load equivalency number, <i>See</i> Load Equivalency Number	
Load equivalency number	19
Location requirements	15
Locking collar	19

M

Maintenance	7, 36
Maximum range, <i>See</i> Range	
Maximum system loading	20
MDS, <i>See</i> Multiple data sources	
Micro-Talk	10
Micronet	11
Micronet displays	22
Mounting location, <i>See</i> Location requirements	
Mounting template	10
Multiple data sources	11

N

Network examples	21
Network length, <i>See</i> Backbone length	

Networking	11
<i>See also</i> Autonetworking	
NMEA 2000	47
Nominal supply voltage	42

O

Operating frequency	11
Operating license	11
Operating voltage range	42
Optimum performance	15
Orientation	15

P

Pack contents, <i>See</i> Parts supplied	
Parts supplied	14
PGNs	47
Pole mounting	26
Power connection point	19
Power consumption	42
Power supply, <i>See</i> SeaTalkng power supply	
Product dimensions, <i>See</i> Dimensions	
Product features	10
Product loading, <i>See</i> Load Equivalency Number	
Product orientation, <i>See</i> Orientation	
Product support	38

R

Rail mounting	26
Range	15
Riser	28
Routine checks	36

S

SeaTalkng	11
Securing cables	18
Service Center	38
Servicing	7, 36

Software updates	14
Strain relief, <i>See</i> Cable protection	
Surface mounting	26–28
System examples, <i>See</i> Network examples	

T

Technical support	38
Thermal breaker rating	19
Tools	15
Troubleshooting	32
Typical systems, <i>See</i> Network examples	

U

Upgrading, *See* Software updates

W

Wall Bracket	28
Warranty	38
Wireless interface	11

Owner notes:

Owner notes:

Raymarine[®]
BY  **FLIR**[®]



www.raymarine.com



Raymarine UK Limited, Marine House, Cartwright Drive, Fareham, PO15 5RJ. United Kingdom.
Tel: +44 (0)1329 246 700