

RK-728 MCE KEYBOARD

USER'S MANUAL



Introduction:

RK-728 radio wireless keyboard is one of the best computer input devices in the market today. It combines the convenience of radio frequency wireless and the TOUCHPAD with 2 Mouse Buttons and scroll wheel. As no cables connected to the keyboard, you can put it away when you finish using it. RK-728 is ergonomically designed allowing for comfortable use on table or lap. Please read carefully the information and instructions contained in this manual and you are sure to obtain a higher level of computing enjoyment.

Specification:

- *Dimensions:*

- Keyboard: 425 x 150 x 31.5 mm(W/D/H)
- Receiver : 21.5 x 78 x 10 mm(W/D/H)
- Box: 435 x 225 x 55 mm (W/D/H)

- *Keyboard:*


- 2.4 GHz radio frequency with 4 channels, USB Receiver.
- Working Range: 10 meters effective working range.
- 2AA batteries, please use alkali batteries only.
- 360-degree navigation.
- Compatible with Windows 2000, XP and Vista.
- 10 million key switch life.
- 86 Number of keys + 21 MCE and Internet/Multimedia Hot Keys.
- 2 Mouse Buttons & scroll wheel.

- *Touchpad :*


- Touchpad Dimension: 61.7 x 45.6 mm
- 2 Mechanical Buttons

Installation:

1. Open the battery cover under the keyboard and put 2AA batteries inside the battery compartment. Close the battery compartment cover.
2. Plug the USB Receiver unto the USB ports of your computer.
3. Turn on the Computer.
4. Setting ID:
 - a. Press ID button on Dongle receiver. (Picture A), the LED is on flash which means ID is searching.
 - b. Press ID button on Back of keyboard.(Picture B) and release , the LED on Receiver is off which means setting is successful.

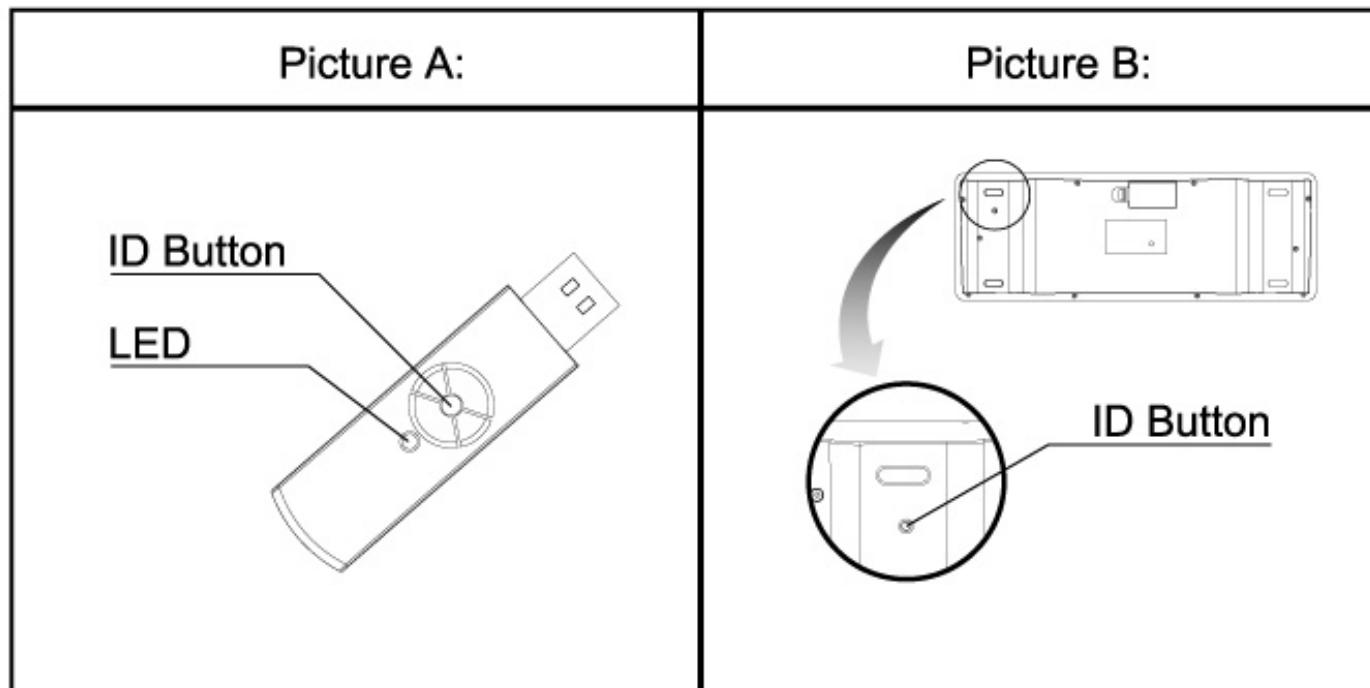


Keys Description:

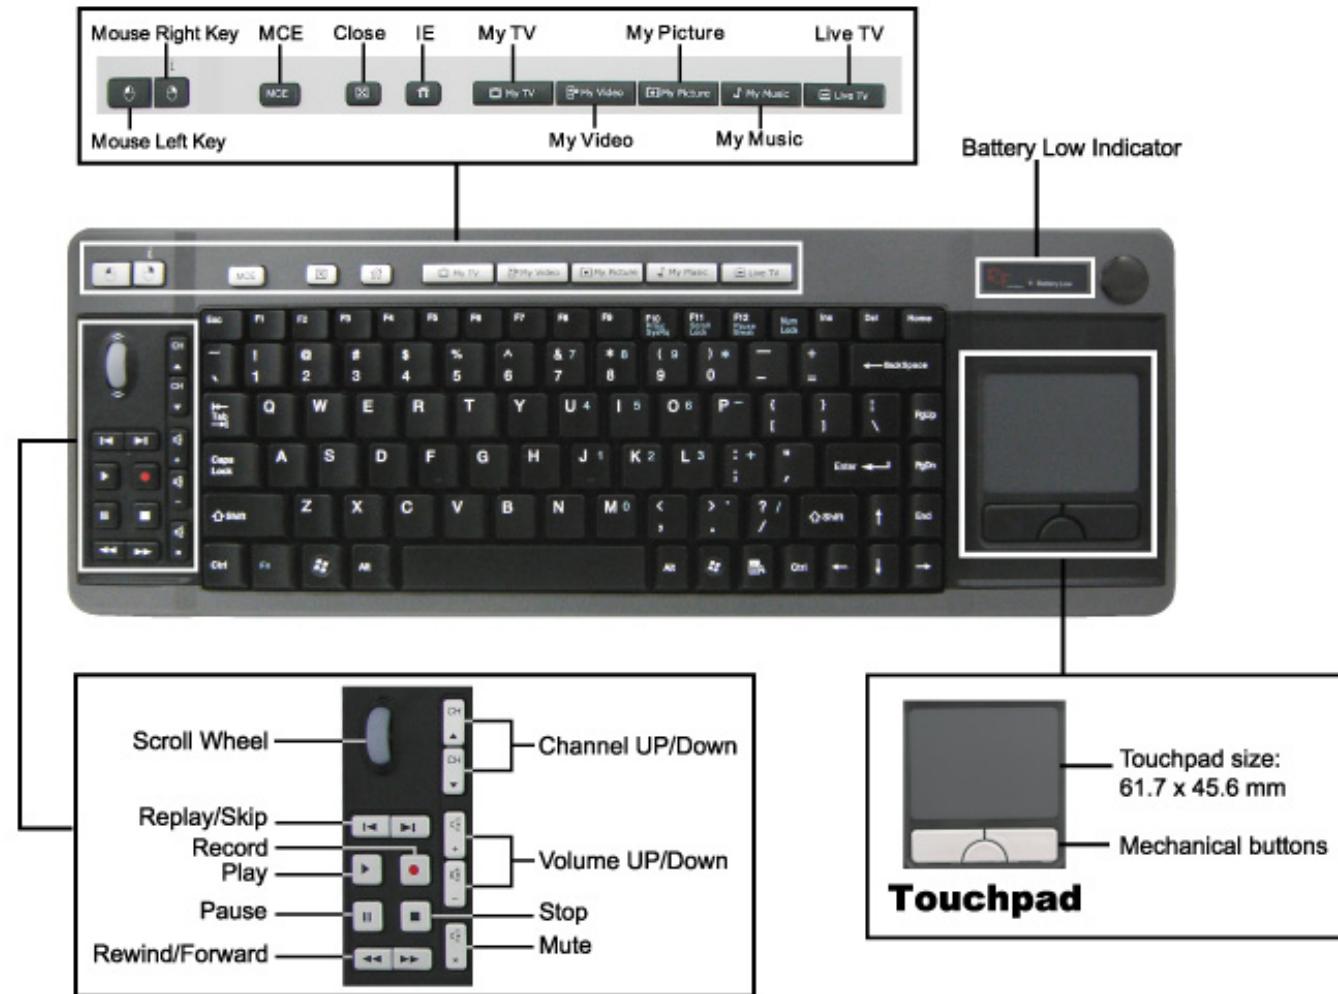

Important: In order to use My TV, My Video, My Picture, Live TV & Media hotkeys, Users need to activate the Media Center function first. To activate Media Center function, simply press the MCE hotkey.

Notice:

1. RF Signal LED on the receiver will flash when the keyboard is being used.
2. When Battery Low LED lights, it means the keyboard requires changing batteries.

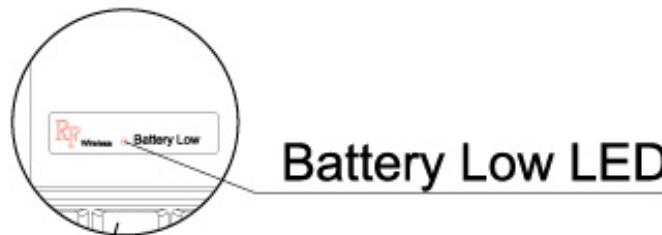**Trouble Shooting:**

If your keyboard can not work after installation, please check followings:

- a. Make sure you have connected the receiver correctly to the computer.
The receiver has been properly plugged onto computer's USB port.
- b. Make sure you have inserted two AA batteries into its compartment correctly.
- c. If without any interference, such as other computer peripherals, the working distance (the distance between keyboard and the receiver) is about 10 meters.
- d. If using more than two units and interfere occurred, please reset ID again.

Notice:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important note:

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

FCC information:

The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph:

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no grantee that interference will not occur in a particular installation. If this equipment dose cause harmful interference to radio or television reception, which can determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user should not modify or change this equipment without written approval form Manufacturer.

Modification could void authority to use this equipment.

