

# Feature

- **Voice recording & MP3 playback**
- **Graphic LCD(65K OLED)**  
It is equipped with Graphic LCD by adopting OLED and support Multi-Languages.
- **Digital interface (USB 2.0)**  
It can be used as a data saving device, a portable hard disk.
- **Auto power off**  
Power turns off automatically in case of non-use over 1 minute.
- **Listen to an FM & Recording**  
Manual tuning / Automatic tuning / FM recording
- **Saving FM Channels**  
Preset FM channels up to 20.
- **Firmware upgrade**  
With firmware upgrade, it is available to improve & enhance new functions.
- **Adopting portable disk**  
The function of portable disk enables you to download & edit any file from PC anywhere.
- **Repeat play function**
- **Function of the section repetition (A-B)**  
The desired section can be designated and heard repeatedly.
- **Function of the music search (INTRO):**  
Only the front part of each track is played.
- **Various equalizer mode**  
Normal, Classic, Live, POP, Rock, Jazz, Ultra-Bass, Metal, Dance, Party, Club, Spatializer, User EQ 1,2
- **Spatializer (3D sound)**  
It supports 3D sound in playing music.
- **Monitoring of recording**

# Index

## Before using

Feature .....	1
Name of each parts .....	3
Windows 98/ME driver set up .....	5
Connecting main set to PC .....	6
Upgrading firmware/fonts .....	7
Using DRM .....	8
Recharging battery .....	9
Power on/off .....	9
How to set up Hold switch function ...	10
How to control volume .....	10
How to change MP3/FM mode .....	10
How to choose folder/file .....	11

## Using

Recording with built-in mic. ....	12
Playing .....	13
Section repeat playback .....	14
Deleting files .....	14

## Menu

Structure of menu .....	15
Using menu .....	16
Music mode .....	17
Recording mode .....	19
FM mode .....	21
System mode .....	22

## FM radio

Listen to FM .....	24
Preset of FM channels .....	25
Listening to preset channels .....	26
Recording FM .....	27

## Connection to external device

Connecting to external audio .....	28
------------------------------------	----

## Others

 
Cautions .....	29
Trouble shooting .....	31
Specifications .....	32
Warranty	

# Before using




## Name of each part


### Front

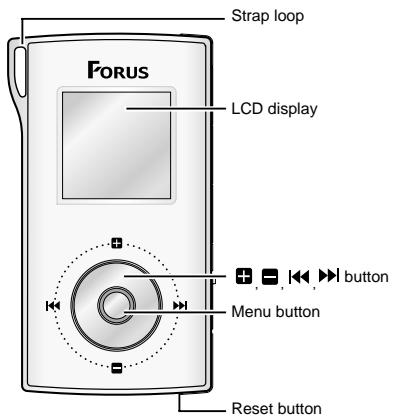


### Right Side

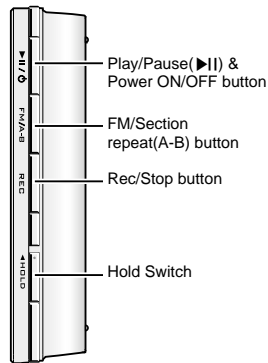 

### Top

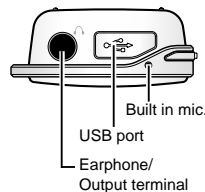 

### LCD display

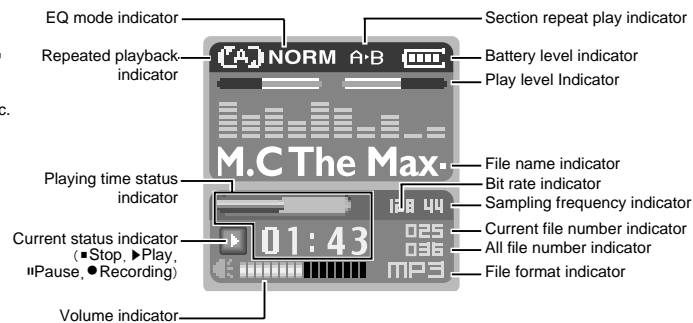 

## Accessories



MP3 player



Earphone



USB connection cable



Neck strap



User's manual



External device connection cable



 
CD (win98 driver)

# Before using



## ▶ Win98/ME driver set up

1 Execute "Forus\_Windows98\_Driver\_Installer.exe".

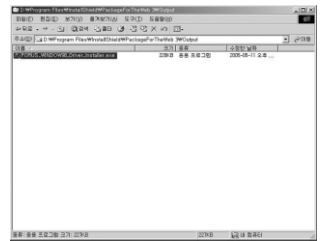

2 After installation, click install button.



3 When setup is completed, reboot PC.




Click

## ▶ Connecting main set to PC

 For downloading MP3 files from the PC, first connect the MP3 player to the PC using the USB connection cable. During this operation, Portable Drive is shown on the PC.

- Connect the USB connection cable to the PC USB port on the PC.
- Connect the USB connection cable to the USB port on the main set.
- USB connected appears on the LCD, Portable Drive is shown as below capture.
- When USB connection fails or connection is removed, USB Disconnected is shown.
- Do not pull out USB connection cable before the message 'Don't Remove USB' is shown.

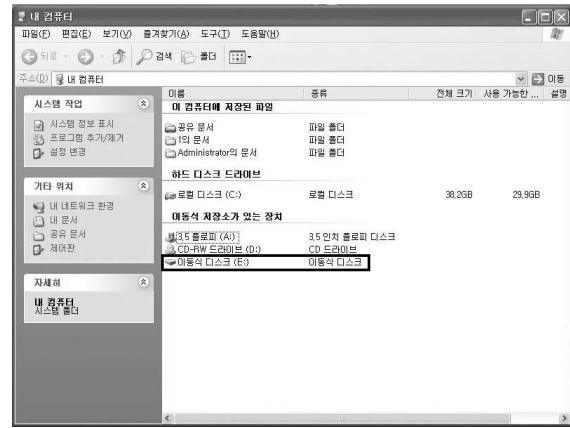

# Before Using

 


## ▶ Upgrading firmware/fonts

### Index of files

- Firm-upf.rom : Firmware file
- Imagebin.tbl : Power on/off. Menu image file
- MI2uni.dat : File of Unicode converting table
- Unicode.fot : Unicode font file

- 1 Connect main set to PC through USB cable.
- 2 Move & save above 4 files to portable disk.
- 3 Remove USB device and disconnect USB cable.
- 4 Upgrading firmware is executed automatically and main set powers off.
- 5 Power on main set again.  
Upgrading font & other files is executed automatically.

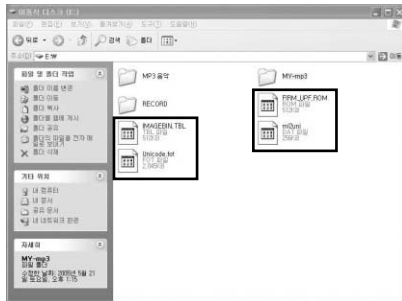

## ▶ Using DRM

### DRM (Digital Rights Management)?

Digital Rights Management, abbreviated DRM, is an umbrella term referring to any of several technical methods used to control or restrict the use of digital media content on electronic devices with such technologies installed.



 
- When format could proceed after firmware upgrade, save three files of Imagebin.tbl, MI2uni.dat, Unicode.fot to main set and power on main set again. Then, upgrade is executed.
- When battery is consumed under level 2, upgrade fails and file of firm\_upf.rom is deleted. It is recommended to recharge battery fully before upgrade.

# Before using



## ▶ Recharging battery

Recharging starts automatically with connection of main set & PC through USB cable.

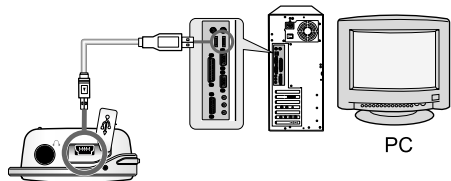

### Check remained battery

- Enough
- A little consumed
- Consumed halfway
- Consumed much
- Recharging required



- It takes normally 2 hours to recharge fully.

## ▶ Power on/off

### To power on



Press Power ON/OFF button over 1 second.

### To power off

 


#### ● Automatic power off

The power automatically turns off when the device is not in use for more than one minute at STOP mode.

#### ● Manual Power OFF

Press the Power ON/OFF button and hold to turn the power off.

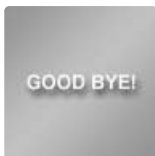

## ▶ How to set up Hold switch function

Hold switch performs locking function during playback or recording and manual power off function at STOP mode.



 
Push the Hold switch upward locks the player.  
To remove and unlock the player, push the switch downward.

## ▶ How to control volume

You can adjust volume within the stage of 0 ~ 30.



With , button, volume adjusting is available.

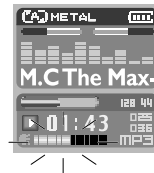

## ▶ How to change MP3/FM mode



### At MP3 mode

Press FM/Section repeat(A-B) button over 3 seconds.

### At FM mode

Press FM/Section repeat(A-B) button over 3 seconds.
















# Before using




## ▶ How to choose folder/file

You can choose folder or file to playback.

### At MP3 mode

-  **1 Press Menu button shortly.**  

-  **2 Move to folder( ) with  button and press Menu button.**  

-  **3 Move to desired folder with  .  button and press Menu button.**  

-  **4 Move to desired file with  .  button.**  


### To escape from folder/file mode





Press Play/Pause() button shortly.

# Using



## ▶ Recording with built-in mic.

### To record

-  **1 Press Rec/Stop button over 3 seconds.**
  - Then go to recording mode.
-  **2 Press Rec/Stop button shortly.**
  - Recording begins and recording time appears on the display.
  - Recording file is saved automatically to Record folder.

### To stop recording

Press Rec/Stop button shortly.

- Then recording stops.

### To escape from recording mode

At stop mode, press Rec/Stop button over 3 seconds.

- It is changed into MP3 mode.





## ▶ Playing

### To play

- 1 Refer to page 11, choose file to play.



- 2  or  Press Menu button or Play/Pause (▶||) button.



### To pause playback

Press play/pause (▶||) button.




### To switch into other file during playback

Press ◀◀, ▶▶ button shortly.




## ▶ Section repeat playback

- 1  During playback, press FM/Section repeat(A-B) button at the beginning of the part you want.

● A▶ appears.



- 2  Pressing FM/Section repeat(A-B) button again at the end of the section you would like to repeat will display A▶B again and the player will repeat the section.

To reset the A-B repeat, press FM/Section repeat(A-B) button in A-B repeat to resume playback.



## ▶ Deleting files

This device does not support deleting function.  
It is recommended to delete folder or files on the PC.

 
### To search the desired section within a file







Push ◀◀, ▶▶ button and hold to play the previous or next part of the currently playing file.

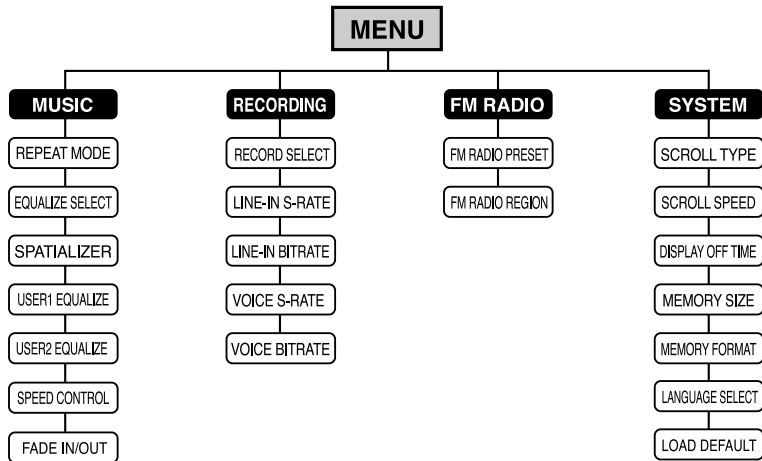

## ▶ Structure of menu



## ▶ Using menu

- 1** Press Menu button over 3 seconds. 
- 2** Move to desired menu with **+**, **-** button and press Menu button. 
- 3** Move to desired sub-menus with **◀**, **▶** button and press Menu button. 
- 4** You can set up sub menu by using **+**, **-** & Menu button together. 

- To return to previous mode, press Menu button over 3 seconds.
- To escape from menu, press Rec/Stop button.



## Music mode

### MENU > MUSIC > REPEAT MODE

- All folder : Repeat & playback all folders
- One folder : Repeat & playback one folder
- Random all : Repeat & playback all files at random
- One file : Repeat & playback one file



### MENU > MUSIC > EQUALIZE SELECT

- You can select Normal, Classic, Live, POP, Rock, Jazz, Ultra-Bass, Metal, Dance, Party, Club, Spatializer, User EQ 1, 2.
- Spatializer : This is 3D sound mode which users can set up.
  - User EQ : You can adjust the equalizer.



### MENU > MUSIC > SPATIALIZER

 
This is 3D Sound Mode.

- Mode (3DS, Mode PCE)
- SPACE (High, Mid, Low)
- PCE (0~5) : This is used to improve sound distortion,



### MENU > MUSIC > USER1 EQUALIZE

You can adjust the equalizer.

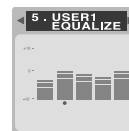

### MENU > MUSIC > SPEED CONTROL

This is used to control playback speed.

- You can control playback speed within -25% ~ +25%.
- -25% is the slowest speed , +25% is the fastest speed.

This function is only applied in playing MP3 files.



### MENU > MUSIC > FADE IN/OUT

Fade in : Music begins with low volume at the beginning.

Fade out : Music ends with low volume at the end.





## Recording mode

### MENU > RECORDING > RECORD SELECT

Select Mic or Line recording.

 
- MIC INPUT : Recording with built-in mic.
- LINE INPUT : Recording with external device



### MENU > RECORDING > LINE - IN S - RATE

When you do line in recording, you can adjust sampling frequency among 32/44.1/48KHz.


The higher frequency you choose, the better sound quality you have.

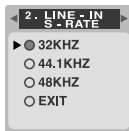

### MENU > RECORDING > LINE - IN BITRATE

When you do line in recording, you can adjust bitrate among 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320KBPS.

 The higher frequency you choose, the better sound quality you have.

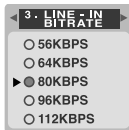

### MENU > RECORDING > VOICE S-RATE

When you do recording with built-in mike, you can adjust sampling frequency among 32, 44.1, 48KHz.

 
The higher frequency you choose, the better sound quality you have.



### MENU > RECORDING > VOICE BITRATE

When you do recording with built-in mike, you can adjust bitrate among 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320KBPS.

The higher frequency you choose, the better sound quality you have.

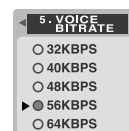




## ▶ FM mode

### MENU > FM RADIO > FM RADIO PRESET

 You can listen to saved channels.

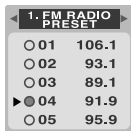

### MENU > FM RADIO > FM RADIO REGION

Frequency could increase or decrease in 0.1 or 0.05Mhz according to FM Radio Regions.

- KOREA/US : 87.5MHz~108MHz
- EU/CHINA : 87.5MHz ~ 108MHz
- JAPAN : 76MHz ~ 108MHz



## ▶ System mode

### MENU > SYSTEM > SCROLL TYPE

This function is used to display fine name or IDTAG name during playback.

 
- FILE NAME : Display file name
- IDTAG NAME : Display tag name



### MENU > SYSTEM > SCROLL SPEED


You can adjust scroll speed of file or tag name among 20 ~ 170 MSEC.

Higher number comes with higher speed.

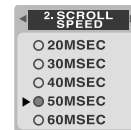


### MENU > SYSTEM > DISPLAY OFF TIME

 You can adjust backlight time among 10 ~ 60 seconds. Backlight is always on at the EVER ON mode.

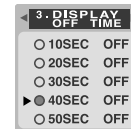

### MENU > SYSTEM > DISPLAY BRIGHT

 You can adjust display brightness.

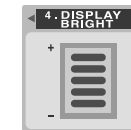

# Menu



## ▶ System mode(Continued)

### MENU > SYSTEM > MEMORY SIZE

You can check remained memory capacity.



### MENU > SYSTEM > MEMORY FORMAT

- All ERASE : Delete all files
- QUICK : Delete all files and return to the default.
- QUICK & FONT : Return to the default and initialize fonts.
- LOW LEVEL : Delete all files and return to the default. Check bad sector of memory. This function takes long time and it is recommended to execute this function after battery is charged fully.



### MENU > SYSTEM > LANGUAGE SELECT

ENGLISH / KOREAN / JAPANESE / CHINESE-SI /  
CHINESE-TR / RUSSIAN.



### MENU > SYSTEM > LOAD DEFAULT

- On : To initialize the default value at the moment of purchase.



# FM radio



## ▶ Listen to FM

1

Press FM/Section repeat(A-B) button over 3 seconds.

- To move into FM Radio.



2

### Select channels





- Manual Search : Press ◀▶ button shortly.
- Auto Search : Press ◀▶ button long.
- Preset Search : Press Menu button shortly and select saved channel with ◀▶ button.







## ▶ Preset FM channels

 
You can save channels up to 20.

- 1**  **Select channel.**
- 2**  **Press Menu button shortly.**
- 3**  **Select channel number with  $\lll$ ,  $\ggg$  button.**
- 4**  **Then, press Rec/Stop button to save channel.**

## ▶ Listening to preset channels

- 1**  **Press Menu button shortly.**
  - To escape from preset mode, press Menu button shortly.
- 2**  **Select saved channel with  $\lll$ ,  $\ggg$  button.**

# FM radio

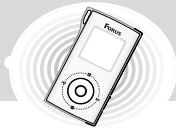

## ▶ Recording FM

### To record FM radio



While listening to FM, press Rec/Stop button shortly.



### To stop FM recording



Press Rec/Stop button again and recording stops.

 
# Connection to external device



## ▶ Connecting to external audio

### To record from external device

Connect the audio cable to line in of this main set and earphone jack of the external device.

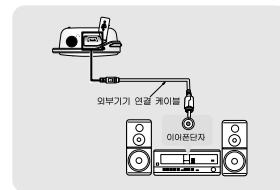

### To start recording

Before recording, set up line input on record select mode.



Press Rec/Stop button and Play button of external audio at same time.

- Recording begins at the main set.
- Recording file is saved in the Line folder.

### To stop recording



Press Rec/Stop button and Stop button of audio.



- You can adjust recording sound level with audio volume key.



## ***For the unit***

- 1. Do not drop the unit or give a shock to the unit. It may cause a malfunction.**
- 2. Do not leave the unit in such a location as described below.**
  - A place of very high temperature (60 °C)
  - A place subject to direct sunlight or near heat sources
  - A car with its windows closed (especially in summer)
  - A place subject to excessive moisture like a bathroom
  - A place subject to excessive dust
- 3. Do not apply heavy forces to the LCD (Liquid Crystal Display) unit, or it may cause breakage or abnormal display taking into account the properties of liquid crystal.**
- 4. If you place cards using magnetism such as cash cards or transportation pass cards near to the speaker of the unit, the magnetism may be transformed due to magnetic influence so that the magnetic cards cannot be used any more.**
- 5. Our company does not reimburse you for any loss from the use of the MP3 Player or any demand of indemnity from a third party.**
- 6. Message loss due to malfunctions, repairs, etc is not a responsibility of ours. Please understand this.**

## ***For your safety***

- 1. Do not repair, disassemble or modify this unit by yourself.**
- 2. Do not use this unit in an airplane or place where the use of electronic machines are prohibited.**
- 3. Do not use during you are driving or walking. It may cause an accident.**

# Trouble shooting



## LCD doesn't work.

**Check1** Is the battery's power exhausted? ▶ Replace the battery with a new one. (Refer to page 9)

## Recording doesn't work.

**Check1** Is the device locked by the Hold switch? ▶ Release the Hold switch.

**Check2** Has the memory or file numbers been used up? ▶ Delete unnecessary files. (Refer to pages 14, 23)

**Check3** Is the battery's power exhausted? ▶ Replace the battery with a new one. (Refer to page 9)

## Playback doesn't work.

**Check1** Is the device locked by the Hold switch? ▶ Release the Hold switch.

**Check2** Could it be that there is no voice file or MP3 file? ▶ Check the folder and file numbers.

**Check3** Is the battery's power exhausted? ▶ Replace the battery with a new one. (Refer to page 9)

## No sound comes from the speaker.

**Check1** Is the volume set to '0'? ▶ Adjust the volume. (Refer to page 10.)

**Check2** Is the earphone plugged in properly? ▶ Plug the earphone in properly.

## No power or malfunction

**Check1** Press Reset button and press Power ON button again.

# Specifications



<b>Memory Capacity</b>	<b>Internal/128MB/256MB/512MB/1GB</b>
<b>Voltage</b>	3.7V
<b>Battery</b>	LI-POLYMER
<b>LCD</b>	Graphic OLED(6 Line 96 × 96 65K color)
<b>Size (W × H × D)/Weight</b>	35.8 × 67.3 × 16mm / 35g
<b>Case</b>	ABS
<b>File Transfer Rate</b>	25Mbps(USB 2.0)
<b>Voice Recording</b>	MPEG1, Layer-3
<b>Noise</b>	90dB
<b>Earphone Output</b>	10mW
<b>Output Frequency Range</b>	87.5MHz ~ 108.0MHz



## FCC RF INTERFERENCE STATEMENT

### NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technical for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

## Memo

A large rectangular area with a light gray background and a thin black border, containing horizontal dashed lines for writing a memo.